


Installation Manual for Air Filter (for Ducted Type)

Model

KW-PP1Q, KW-PP2Q, KW-PP3Q, KW-PP4Q

1. Procedure

- (1) Remove the mounting flange on the unit.
- (2) Install the suction flange with the air filter.
- (3) In an instance for service or maintenance, remove the stoppers and take the air filter out. After the maintenance, reassemble the air filter.

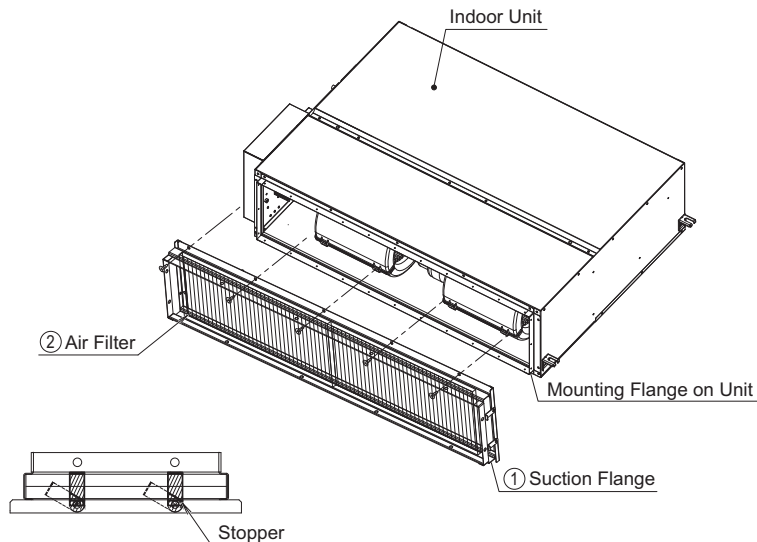

Unit: inch (mm)

No.	Name	Illustration	Model	Dimensions	
				W	H
①	Suction Flange		KW- PP1Q	24-3/8 (620)	10-3/8 (262)
			KW- PP2Q	34-1/4 (870)	10-3/8 (262)
			KW- PP3Q	34-1/4 (870)	13-1/2 (342)
			KW- PP4Q	50 (1270)	13-1/2 (342)
②	Air Filter		KW- PP1Q	22-7/8 (582)	9-1/4 (236)
			KW- PP2Q	32-3/4 (832)	9-1/4 (236)
			KW- PP3Q	32-3/4 (832)	12-1/2 (316)
			KW- PP4Q	48-1/2 (1232)	12-1/2 (316)

2. Service and Maintenance

Remove the air filter from the flange. Clean the air filter to vacuum dust with a cleaner, or wash the air filter with water or neutral detergent. Dry the air filter in the shade.