


## Installation Manual for Air Filter (for Ducted Type)

Model	KW-PP5Q, KW-PP6Q
-------	------------------

### 1. Procedure

- (1) Remove the mounting flange on the unit.
- (2) Install the suction flange with the air filter.
- (3) In an instance for service or maintenance, remove the stoppers and take the air filter out. After the maintenance, reassemble the air filter.

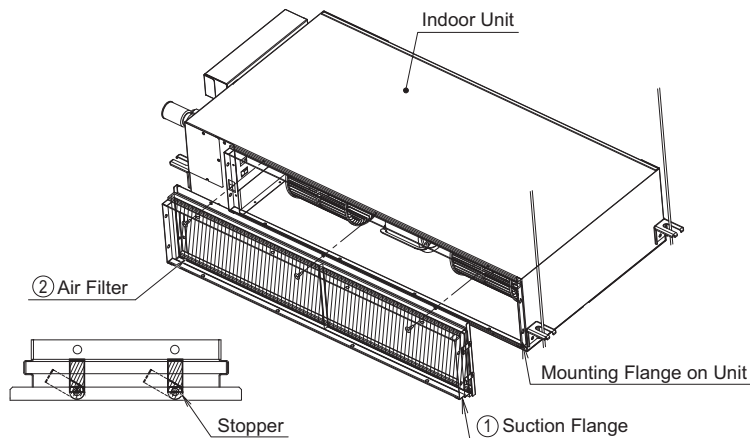

Unit: inch (mm)

No.	Name	Illustration	Model	Dimensions	
				W	H
①	Suction Flange		KW- PP5Q	30-7/8 (784)	7-1/2 (191)
			KW- PP6Q	41-1/2 (1054)	7-1/2 (191)
②	Air Filter		KW- PP5Q	30-3/4 (782)	6-3/8 (162)
			KW- PP6Q	41-3/8 (1050)	6-3/8 (162)

### 2. Service and Maintenance

Remove the air filter from the flange. Clean the air filter to vacuum dust with a cleaner, or wash the air filter with water or neutral detergent. Dry the air filter in the shade.