

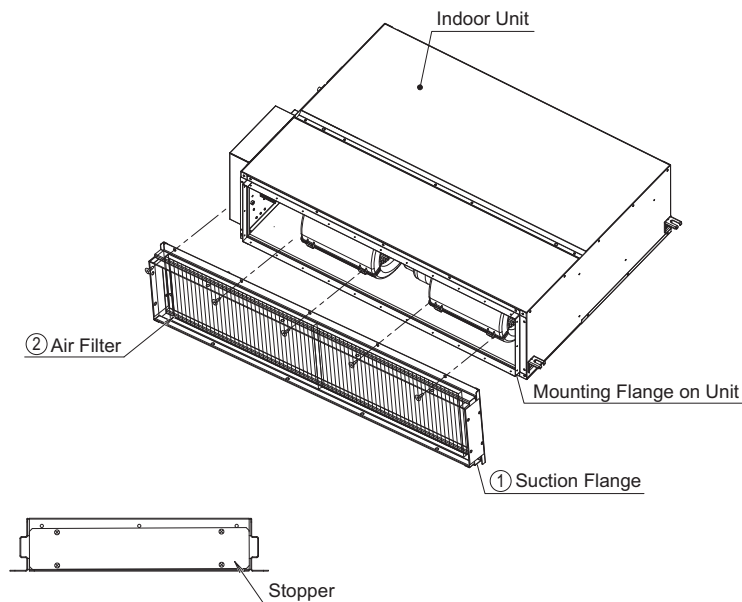
## Installation Manual for Air Filter (for Ducted Type)

Model

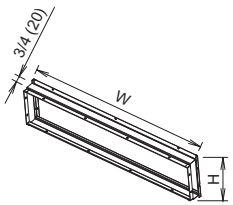
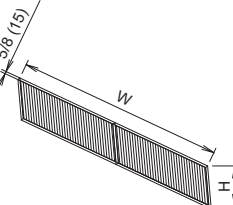
KW-PP7Q, KW-PP8Q, KW-PP9Q, KW-PP10Q

### 1. Procedure

- (1) Remove the mounting flange on the unit.
- (2) Install the suction flange with the air filter.
- (3) In an instance for service or maintenance, remove the stoppers and take the air filter out. After the maintenance, reassemble the air filter.



Unit: inch (mm)

No.	Name	Illustration	Model	Dimensions	
				W	H
①	Suction Flange		KW- PP7Q	25-3/8 (646)	10-3/8 (265)
			KW- PP8Q	35-1/4 (896)	10-3/8 (265)
			KW- PP9Q	43-1/4 (1099)	11-5/8 (296)
			KW- PP10Q	55-1/8 (1399)	11-5/8 (296)
②	Air Filter		KW- PP7Q	24 (610)	9-1/2 (242)
			KW- PP8Q	31-7/8 (810)	9-1/2 (242)
			KW- PP9Q	41-7/8 (1063)	10-3/4 (272)
			KW- PP10Q	53-5/8 (1362)	10-3/4 (272)

### 2. Service and Maintenance

Remove the air filter from the flange. Clean the air filter to vacuum dust with a cleaner, or wash the air filter with water or neutral detergent. Dry the air filter in the shade.