


# ENGINEERING MANUAL

## INVERTER-DRIVEN MULTI-SPLIT SYSTEM HEAT PUMP AIR CONDITIONERS

### Engineering Manual

#### < Indoor Units >

- Air Handler with DX-Kit
  - (H,Y,C)MAHP18B21S
  - (H,Y,C)MAHP24B21S
  - (H,Y,C)MAHP30B21S
  - (H,Y,C)MAHP36B21S
  - (H,Y,C)MAHP36C21S
  - (H,Y,C)MAHP48C21S
  - (H,Y,C)MAHP48D21S
  - (H,Y,C)MAHP60C21S
  - (H,Y,C)MAHP60D21S
  - (H,Y,C)MAHP60D22S

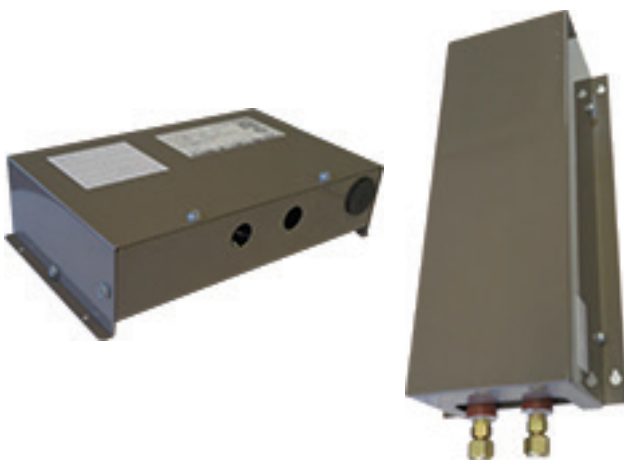



# **IMPORTANT NOTICE AND SAFETY SUMMARY**



## **1. Introduction**

This Engineering Manual concentrates on air conditioning units for use in heat pump and heat recovery systems. Read this manual carefully before performing installations or operations.


This manual should be considered as a permanent part of the air conditioning equipment and should remain with the air conditioning equipment.

(Transportation/Installation Work) > (Refrigerant Piping Work) > (Electrical Wiring Work) > (Ref. Charge Work) > (Test Run) > (User)

## **2. Important Safety Instructions**

| <b>Signal Words</b>  |   |
|--|---|
|  <b>WARNING</b> | Indicates a hazardous situation that, if not avoided, could result in death or serious injury.                          |
|  <b>CAUTION</b> | Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.                         |
| <b>NOTICE</b>  | Indicates information considered important, but not hazard-related (for example, messages relating to property damage). |

### **General Precautions**

|  |  |
|--|--|
|  <b>WARNING</b> | To reduce the risk of serious injury or death, read these instructions thoroughly and follow all warnings or cautions included in all manuals that accompanied the product and are attached to the unit. Refer back to these instructions as needed. |
|--|--|

- This system should be installed by personnel certified by Johnson Controls, Inc. Personnel must be qualified according to local, state and national building and safety codes and regulations. Incorrect installation could cause leaks, electric shock, fire or explosion. In areas where Seismic "Performance requirements are specified, the appropriate measures should be taken during installation to guard against possible damage or injury that might occur in an earthquake if the unit is not installed correctly, injuries may occur due to a falling unit.
- Use appropriate Personal Protective Equipment (PPE), such as gloves and protective goggles and, where appropriate, have a gas mask nearby. Also use electrical protection equipment and tools suited for electrical operation purposes. Keep a wet cloth and a fire extinguisher nearby during brazing. Use care in handling, rigging, and setting of bulky equipment.
- When transporting, be careful when picking up, moving and mounting these units. Although the unit may be packed using plastic straps, do not use them for transporting the unit from one location to another. Do not stand on or put any material on the unit. Get a partner to help, and bend with your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut fingers, so wear protective gloves.
- Do not touch or adjust any safety devices inside the indoor or outdoor units. All safety features, disengagement, and interlocks must be in place and functioning correctly before the equipment is put into operation. If these devices are improperly adjusted or tampered with in any way, a serious accident can occur. Never bypass or jump-out any safety device or switch.
- Johnson Controls will not assume any liability for injuries or damage caused by not following steps outlined or described in this manual. Unauthorized modifications to Johnson Controls products are prohibited as they...
  - May create hazards which could result in death, serious injury or equipment damage.
  - Will void product warranties.
  - May invalidate product regulatory certifications.
  - May violate OSHA standards.

## NOTICE

Take the following precautions to reduce the risk of property damage.

- Prevent moisture, dust, or non condensable compounds from entering the refrigerant cycle during installation work. Foreign matter could damage internal components or cause blockages.
- If air filters are required on this unit, do not operate the unit without the air filter set in place. If the air filter is not installed, dust may accumulate and breakdown may result.
- Do not install this unit in any place where silicon gases can collect. If the silicon gas molecules attach themselves to the surface of the heat exchanger, the finned surfaces will repel water. As a result, any amount of drainage moisture condensate can overflow from the drain condensate pan and could run inside of the electrical box, possibly causing electrical failures.
- When installing the unit in a hospital or other facility where electromagnetic waves are generated from nearby medical and/or electronic devices, be aware of noise and electronic interference Electromagnetic Interference (EMI). Do not install where EMI waves can directly radiate into the electrical box, controller cable, or controller. Inverters, appliances, high-frequency medical equipment, and radio communications equipment may cause the unit to malfunction. The operation of the unit may also adversely affect these same devices. Install the unit at least 10 ft. (approximately 3m) away from such devices.
- When a wireless controller is used, locate at a distance of at least 3.3 ft. (approximately 1m) between the indoor unit and electric lighting. If not, the receiver part of the unit may have difficulty receiving operation commands.
- Do not install the unit in any location where animals and plants can come into direct contact with the outlet air stream. Exposure could adversely affect the animals and plants.
- Do not install the unit with any downward slope to the side of the drain adapter. If you do, you may have condensate flowing back which may cause leaks.
- Be sure the condensate hose discharges water properly. If connected incorrectly, it may cause leaks.
- Do not install the unit in any place where oil can seep onto the units, such as table or seating areas in restaurants, and so forth. For these locations or social venues, use specialized units with oil-resistant features built into them. In addition, use a specialized ventilation unit designed for restaurant use. These specialized oil-resistant units can be ordered for such applications. However, in places where large quantities of oil can splash onto the unit, such as a factory, even the specialized units cannot be used. These products should not be installed in such locations.
- If the wired controller is installed in a location where electromagnetic radiation is generated, make sure that the wired controller is shielded and cables are sleeved inside conduit tubing.
- If there is a source of electrical interference near the power supply, install noise suppression equipment (filter).
- During the test run, check the unit's operation temperature. If the unit is used in an environment where the temperature exceeds the operation boundary, it may cause severe damage. Check the operational temperature boundary in the manual. If there is no specified temperature, use the unit within the operational temperature boundary of 32 to 104°F (0 to 40°C).
- Read installation and appropriate user manuals for connection with PC or peripheral devices. If a warning window appears on the PC, the product stops, does not work properly or works intermittently, immediately stop using the equipment.

## Installation Precautions

### **WARNING**

To reduce the risk of serious injury or death, the following installation precautions must be followed.

- When installing the unit into...
  - A wall: Make sure the wall is strong enough to hold the unit's weight. It may be necessary to construct a strong wood or metal frame to provide added support.
  - A room: Properly insulate any refrigerant tubing run inside a room to prevent "sweating" that can cause dripping and water damage to wall and floors.
  - Damp or uneven areas: Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the unit to prevent water damage and abnormal vibration.
  - An area with high winds: Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable wind baffle.
  - A snowy area: Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow protection hood.
- If the remote sensors are not used with this controller, then do not install this controller...
  - in a room where there is no thermostat.
  - where the unit is exposed to direct sunshine or direct light.
  - where the unit will be in close proximity to a heat source.
  - where hot/cold air from the outdoors, or a draft from elsewhere (such as air vents, diffusers or grilles) can affect air circulation.
  - in areas with poor air circulation and ventilation.
- Do not install the unit in the following places. Doing so can result in an explosion, fire, damage, corrosion, or product failure.
  - Explosive or flammable atmosphere.
  - Where fire, oil, steam, or powder can directly enter the unit, such as in close proximity or directly above a kitchen stove.
  - Where oil (including machinery oil) may be present.
  - Where corrosive gases such as chlorine, bromine, or sulfide can accumulate, such as near a hot tub or hot spring.
  - Where dense, salt-laden mist is heavy, such as in coastal regions.
  - Where the air quality is of high acidity.
  - Where harmful gases can be generated from decomposition.
- Do not position the condensate pipe for the indoor unit near any sanitary sewers where corrosive gases may be present. If you do, toxic gases can seep into breathable air spaces and can cause respiratory issues. If the condensate pipe is installed incorrectly, water leakage and damage to the ceiling, floor, furniture, or other possessions may result. If condensate piping becomes clogged, moisture can back up and can drip from the indoor unit. Do not install the indoor unit where such dripping can cause moisture damage or uneven locations: Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the unit to prevent water damage and abnormal vibration.
- Before performing any brazing work, be sure that there are no flammable materials or open flames nearby.
- Perform a test run to ensure normal operation. Safety guards, shields, barriers, covers, and protective devices must be in place while the compressor/unit is operating. During the test run, keep fingers and clothing away from any moving parts.
- Clean up the site when finished, remembering to check that no metal scraps or bits of wiring have been left inside the unit being installed.
- During transportation, do not allow the backrest of the forklift make contact with the unit, otherwise, it may cause damage to the heat exchanger and also may cause injury when stopped or started suddenly.
- Remove gas inside the closing pipe when the brazing work is performed. If the brazing filler metal is melted with remaining gas inside, the pipes will be blown off and it may cause injury.
- Be sure to use nitrogen gas for an airtight test. If other gases such as oxygen gas, acetylene gas or fluorocarbon gas are accidentally used, it may cause explosion or gas intoxication.

After installation work for the system has been completed, explain the "Safety Precautions," the proper use and maintenance of the unit to the customer according to the information in all manuals that came with the system. All manuals and warranty information must be given to the user or left near the Indoor Unit.

## Refrigerant Precautions

### **WARNING**

To reduce the risk of serious injury or death, the following refrigerant precautions must be followed.

- As originally manufactured, this unit contains refrigerant installed by Johnson Controls. Johnson Controls uses only refrigerants that have been approved for use in the unit's intended home country or market. Johnson Controls distributors similarly are only authorized to provide refrigerants that have been approved for use in the countries or markets they serve. The refrigerant used in this unit is identified on the unit's faceplate and/or in the associated manuals. Any additions of refrigerant into this unit must comply with the country's requirements with regard to refrigerant use and should be obtained from Johnson Controls distributors. Use of any non-approved refrigerant substitutes will void the warranty and will increase the potential risk of injury or death.
- If installed in a small room, take measures to prevent the refrigerant from exceeding the maximum allowable concentration in the event that refrigerant gases should escape. The installation should meet the requirements in ASHRAE Standards 15 and 34. If refrigerant gas has leaked during the installation work, ventilate the room immediately.
- Check the design pressure for this product is 601 psi (4.15MPa). The pressure of the refrigerant R410A is 1.4 times higher than that of the refrigerant R22. Therefore, the refrigerant piping for R410A shall be thicker than that for R22. Make sure to use the specified refrigerant piping. If not, the refrigerant piping may rupture due to an excessive refrigerant pressure. Besides, pay attention to the piping thickness when using copper refrigerant piping. The thickness of copper refrigerant piping differs depending on its material.
- When R410A is used, the refrigerant oil tends to be affected by foreign matters such as moisture, oxide film, (or fat). Perform the installation work with care to prevent moisture, dust, or different refrigerant from entering the refrigerant cycle. Foreign matter can be introduced into the cycle to such parts as the expansion valve causing operational issues.
- To avoid the possibility of different refrigerant or refrigerant oil being introduced into the cycle, the sizes of the charging connections have been changed from R407C type and R22 type. It is necessary to verify the appropriate tools are on hand before performing installation work.
- Use refrigerant pipes and joints which are approved for use with R410A.
- A compressor/unit comprises a pressurized system. Never loosen threaded joints while the system is under pressure and never open pressurized system parts.
- Before installation is complete, make sure that the refrigerant leak test has been performed. If refrigerant gases escape into the air, turn OFF the main switch, extinguish any open flames and contact your service contractor. Refrigerant (Fluorocarbon) for this unit is odorless. If the refrigerant should leak and come into contact with open flames, toxic gas could be generated. Also, because the fluorocarbons are heavier than air, they settle to the floor, which could cause asphyxiation.
- When installing the unit, and connecting refrigerant piping, keep all piping runs as short as possible, and make sure to securely connect the refrigerant piping before the compressor starts operating. If the refrigerant piping is not connected properly and the compressor starts with the stop valve opened, air may be pulled into the system and the refrigerant cycle will become subjected to extremely high pressure, which can cause an explosion or fire.
- Tighten the flare nut with a torque wrench in the specified manner. Do not apply excessive force to the flare nut when tightening. If you do, the flare nut can crack and refrigerant leakage may occur.
- When maintaining, relocating, and disposing of the unit, dismantle the refrigerant piping after the compressor stops.
- When pipes are removed out from under the piping cover, after the insulation work is completed, cover the gap between the piping cover and pipes with additional insulating material (field-supplied). If the gap is not covered, the unit may be damaged if snow, rain water or small animals enter the unit.
- Do not apply excessive force to the stop valve when opening. If damaged, the stop valve could come apart due to refrigerant pressure. At the test run, fully open the gas and liquid valves, otherwise, these devices will be damaged. (It is closed before shipment.)
- If the setup for outdoor units is incorrect, it may cause flowback of the refrigerant and result in failure of the outdoor unit.
- The refrigerant system may be damaged if the slope of the piping connection kit exceeds  $\pm 15^\circ$ .

## Electrical Precautions



Take the following precautions to reduce the risk of electric shock, fire or explosion resulting in serious injury or death.

- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause serious injury or death.
  - Perform all electrical work in strict accordance with this installation and maintenance manual and all the relevant regulatory standards.
  - Before servicing, shut off and tag all disconnect switches. Never assume electrical power is disconnected. Always verify with a meter.
  - Only use electrical protection equipment and tools suited for this installation.
  - Insulate a wired controller against moisture and temperature extremes.
  - Use specified cables between units.
  - The installed air conditioner may not function normally in the following instances:
    - If electrical power for the new air conditioner is supplied from the same transformer as the external equipment\* referred to below.
    - If the power supply wiring for this external equipment\* and the new air conditioner unit are located in close proximity to each other.

external equipment\*: (Example): A lift, container crane, rectifier for electric railway, inverter power device, arc furnace, electric furnace, large-sized induction motor and large-sized switch.
- Regarding the cases mentioned above, surge voltage may be inducted into the power supply cables for the packaged air conditioner due to a rapid change in power consumption of the device and an activation of a switch.
- Check field regulations and standards before performing electrical work in order to protect the power supply for the new air conditioner unit.
- Communication cable must be a minimum of AWG18 (0.82mm<sup>2</sup>), 2-Conductor, Stranded Copper. Shielded cable must be used for applications and routing in areas of high EMI and other sources of potentially excessive electrical noise to reduce the potential for communication errors. When shielded cabling is applied, proper bonding and termination of the cable shield is required as per Johnson Controls guidelines. Plenum and riser ratings for communication cables must be considered per application and local code requirements.
  - The polarity of the input terminals is important, so be sure to match the polarity when using contacts that have polarity.
  - Use a dedicated circuit for the air conditioner at the unit's rated voltage.
  - Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause serious injury or death.
  - Before installing the controller or remote devices, ensure that the indoor and outdoor unit operation has been stopped. Further, be sure to wait at least five minutes before turning off the main power switch to the indoor or outdoor units. Otherwise, water leakage or electrical breakdown may result.
  - Do not open the service cover or access panel to the indoor or outdoor units without turning OFF the main power supply. Before connecting or servicing the controller or cables to indoor or outdoor units, shut off and tag all disconnect switches. Never assume electrical power is disconnected. Always verify with a meter.
  - This equipment can be installed with a Ground Fault Circuit Breaker (GFCI), which is a recognized measure for added protection to a properly grounded unit. Install appropriate sized breakers / fuses / overcurrent protection switches, and wiring in accordance with local, state and NEC codes and requirements. The equipment installer is responsible for understanding and abiding by applicable codes and requirements.



# - CONTENTS -

|  |         |
|--|---------|
| IMPORTANT NOTICE AND SAFETY SUMMARY .....                                  | i       |
| 1. Introduction .....  | i       |
| 2. Important Safety Instructions .....                                     | i       |
|  |         |
| 1. General Information (Features).....                                     | 1-1     |
| 2. DX-Kit for Multi-Position Air Handler .....                             | 2-1     |
| 2.1 Unit Nomenclature.....   | 2-1     |
| 2.2 Line-up .....  | 2-1     |
| 2.3 General Data .....   | 2-2     |
| 2.4 Component Data .....   | 2-4     |
| 2.5 Dimensional Data .....   | 2-5     |
| 2.6 Operation Space .....  | 2-7     |
| 2.7 Sensible Heat Factor (SHF) .....                                       | 2-7     |
| 2.8 Fan Performance.....   | 2-8     |
| 2.9 Electrical Data .....  | 2-12    |
| 2.10 Sound Data .....  | 2-13    |
| 2.11 Control System.....   | 2-14    |
| 2.11.1 Refrigerant System.....   | 2-14    |
| 2.11.2 Standard Operation Sequence .....                                   | 2-15    |
| 2.11.3 Safety and Control Device Setting.....                              | 2-19    |
| 2.11.4 Wiring Diagram of DX-Kit.....                                       | 2-20    |
| 3. Optional Parts .....  | 3-1     |
| 3.1 Line Up .....  | 3-1     |
| 3.2 Electric Heater Kit: 6HK Series .....                                  | 3-2     |
| 3.3 Infrared (IR) Receiver Kit: CWDIRK01 .....                             | 3-6     |
| 3.3.1 Specifications.....  | 3-6     |
| 3.3.2 Dimensions .....   | 3-6     |
| 3.3.3 Applicable Models.....   | 3-6     |
| 3.3.4 Accessories / Options .....  | 3-7     |
| 3.3.5 Installation.....  | 3-7     |
| 3.3.6 Electrical Wiring .....  | 3-10    |
| 3.3.7 Setting DIP Switches on Indoor Unit Side .....                       | 3-10    |
| 3.3.8 Setting DIP Switch on IR Receiver Kit Side.....                      | 3-11    |
| 3.3.9 Identifying Indoor Units Installed in a Side-by-Side Operation ..... | 3-12    |
| 3.3.10 Simultaneous Operation .....  | 3-13    |
| 3.3.11 Test Run by Wireless Controller (CIR01).....                        | 3-15    |
| 3.3.12 Alarm Indication .....  | 3-15    |
| 3.4 3P Connector Cable: PCC-1A.....  | 3-16    |
| 3.5 Remote Sensor: THM-R2A.....  | 3-16    |
| 3.6 Relay and 3 Pin Connector Kit: PSC-5RA.....                            | 3-17    |
| 4. Selection Data.....   | 4-1     |
| 4.1 Selection Guide .....  | 4-1     |
| 4.2 Capacity Table.....  | 4-1     |
| 4.2.1 Cooling Capacity.....  | 4-1     |
| 4.2.2 Heating Capacity .....   | 4-3     |
| ● Annex .....  | Annex-1 |



## 1. General Information (Features)

### VRF Air Conditioners

Johnson Controls proudly introduces new Variable Refrigerant Flow (VRF) air conditioners, a highly-efficient and reliable air-conditioning system. Recently, increased numbers of buildings are requiring "intelligent" facilities that include communication networks, office automation, and a comfortable environment. In particular, a comfortable environment is becoming more of a year-around requirement in office buildings. The VRF multi-split system air conditioner meets these requirements. The proven combination of the scroll compressor and inverter provides the best air conditioning for small and medium office buildings.

#### ■ VRF System

Johnson Controls has developed the VRF system with its customers in mind.

This system, allows the interconnection of indoor units for all our VRF air conditioners.

This system provides the consumer with greater flexibility for installation, which means that the air-conditioning systems will integrate better within complex facility structures.

#### ■ Air Handler and DX-Kit

Air Handler with DX-Kit Models

(H,Y,C)MAHP18B21S, (H,Y,C)MAHP24B21S, (H,Y,C)MAHP30B21S, (H,Y,C)MAHP36B21S,  
(H,Y,C)MAHP36C21S, (H,Y,C)MAHP48C21S, (H,Y,C)MAHP48D21S, (H,Y,C)MAHP60C21S,  
(H,Y,C)MAHP60D21S, (H,Y,C)MAHP60D22S

DX-Kit for Multi-Position Air Handler Models

EXV-018E, EXV-024E, EXV-030E, EXV-036E, EXV-048E, EXV-060E

#### ● Wide Range Line-up

Table 1.1 Indoor Unit Type List

| Indoor Unit Type        |                  |    |    |    |    |    |    |
|-------------------------|------------------|----|----|----|----|----|----|
|                         |                  | 18 | 24 | 30 | 36 | 48 | 60 |
| Air Handler with DX-Kit | (H,Y,C)MAHP_B21S | ○  | ○  | ○  | ○  |    |    |
|                         | (H,Y,C)MAHP_C21S |    |    |    | ○  | ○  | ○  |
|                         | (H,Y,C)MAHP_D21S |    |    |    |    | ○  | ○  |
|                         | (H,Y,C)MAHP_D22S |    |    |    |    |    | ○  |

○ : Available

## FEATURES


- About DX-Kit

DX-Kit is an interface kit designed to control the air handlers using a fan motor control and expansion valve control depending on the air inlet or outlet temperatures.

The combination capacity of indoor unit against the outdoor unit is selected depending on the outdoor unit minimum and maximum capacity ratio. Refer to the outdoor unit manuals to decide the required combination of indoor and outdoor units, and the combination unit capacity.

The following figure shows an installation example of DX-Kit in the VRF system. The DX-Kit includes a control box, an expansion valve box, air inlet and outlet thermistors, liquid and gas pipe thermistors, and a fan motor control board.

The control box should be mounted on the air handler.

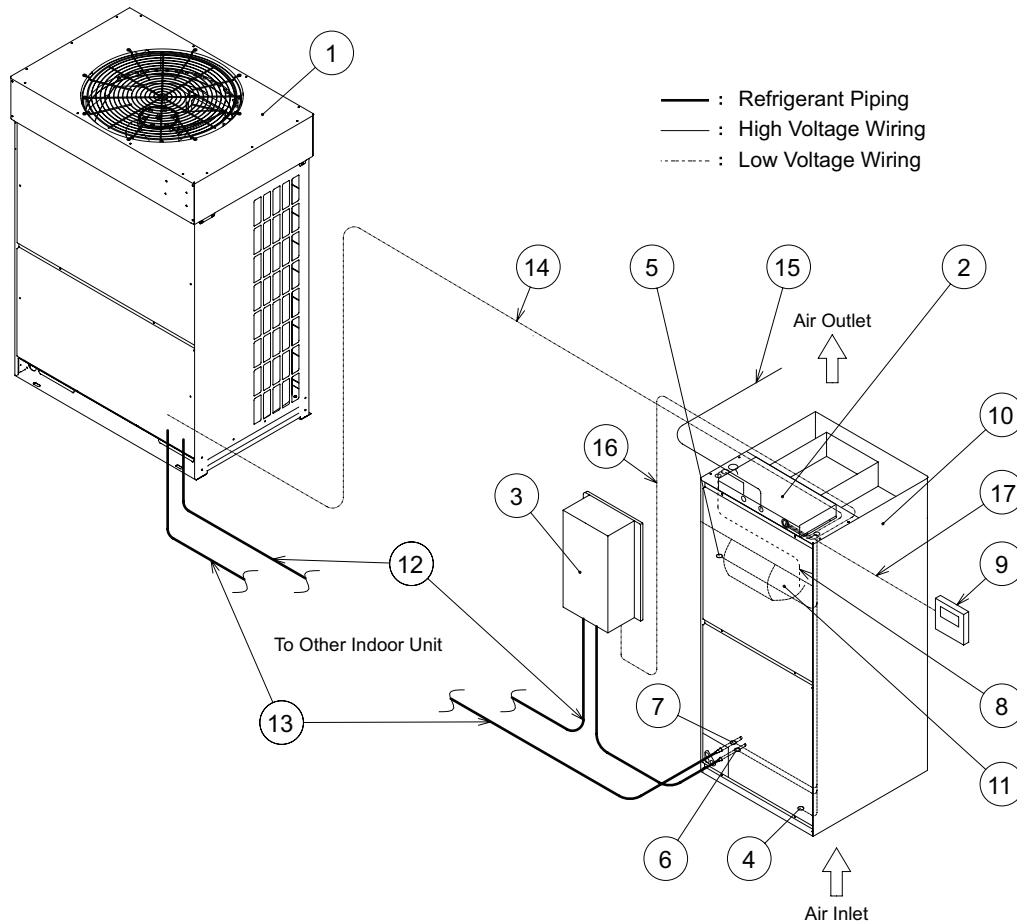

| Item No. | Description                       | Item No. | Description                       |
|----------|-----------------------------------|----------|-----------------------------------|
| 1        | VRF Outdoor Unit                  | 9        | Wired Controller                  |
|          | DX-Kit                            | 10       | Air Handler                       |
| 2        | Control Box                       | 11       | Fan Motor for Air Handler         |
| 3        | Expansion Valve Box               | 12       | Liquid Pipe Line                  |
| 4        | Air Inlet Thermistor Probe        | 13       | Gas Pipe Line                     |
| 5        | Air Outlet Thermistor Probe       | 14       | H-LINK Communication Cable        |
| 6        | Liquid Pipe Line Thermistor Probe | 15       | Power Supply Wiring               |
| 7        | Gas Pipe Line Thermistor Probe    | 16       | Expansion Valve Control Cable     |
| 8        | Fan Motor Wiring                  | 17       | Wired Controller Connection Cable |

NOTE:

- Ensure the installation distance between this DX-Kit and the air handler is the shortest possible.
- For the piping length, keep a distance of up to 16.4 ft (5m) between the air handler and the expansion valve box. Be certain the elevation difference between the air handler and the expansion valve box DOES NOT exceed 6.6 ft (2m).
- Be sure that the installation distance between the control box and the air handler is short enough so that thermistor sensing is not distorted.
- Never install the thermistor cable in the same ducting as the power or control wirings.



## 2. DX-Kit for Multi-Position Air Handler

### 2.1 Unit Nomenclature

#### Model Descriptions

##### Example

EXV - 018 E

Nomenclature Description for DX-Kit

|                    |     |
|--------------------|-----|
| DX-Interface Type  | EXV |
| Capacity (MBH)     | 018 |
| E = Made in Europe | E   |

Nomenclature Description for Combined Model

|   |    |
|---|----|
| H = Hitachi Brand<br>Y = York Brand<br>C = Coleman Brand                          | H  |
| M = Multi-Position  | M  |
| AH = Air Handler  | AH |
| Motor Type<br>P = PSC Motor   | P  |
| Capacity (MBH)  | 18 |
| Cabinet Width<br>B = 17.5 in. (445mm)<br>C = 21 in. (533mm)<br>D = 24 in. (610mm) | B  |
| Voltage<br>2 = 208/230Volts - 1Phase - 60Hz                                       | 2  |
| 1 = 1st Generation<br>2 = 2nd Generation  | 1  |
| S = Standard Type   | S  |

H M AH P 18 B 2 1 S

### 2.2 Line-up

| Type                                  | Capacity |     | DX-Kit Model | Applicable Air Handler Model | Combined Model    |
|---------------------------------------|----------|-----|--------------|------------------------------|-------------------|
|                                       | RT       | MBH |              |                              |                   |
| DX-Kit for Multi-Position Air Handler | 1.5      | 18  | EXV-018E     | AP18BX21                     | (H,Y,C)MAHP18B21S |
|                                       | 2.0      | 24  | EXV-024E     | AP24BX21                     | (H,Y,C)MAHP24B21S |
|                                       | 2.5      | 30  | EXV-030E     | AP30BX21                     | (H,Y,C)MAHP30B21S |
|                                       | 3.0      | 36  | EXV-036E     | AP36BX21                     | (H,Y,C)MAHP36B21S |
|                                       |          |     |              | AP36CX21                     | (H,Y,C)MAHP36C21S |
|                                       | 4.0      | 48  | EXV-048E     | AP48CX21                     | (H,Y,C)MAHP48C21S |
|                                       |          |     |              | AP48DX21                     | (H,Y,C)MAHP48D21S |
|                                       | 5.0      | 60  | EXV-060E     | AP60CX21                     | (H,Y,C)MAHP60C21S |
|                                       |          |     |              | AP60DX21                     | (H,Y,C)MAHP60D21S |
|                                       |          |     |              | AP60DX22                     | (H,Y,C)MAHP60D22S |

## 2.3 General Data

| Air Handler with DX-Kit Model                          |                 | (H,Y,C)MAHP18B21S                      | (H,Y,C)MAHP24B21S                      | (H,Y,C)MAHP30B21S                      | (H,Y,C)MAHP36B21S                         | (H,Y,C)MAHP36C21S                        |
|--|-----------------|--|--|--|---|--|
| Adaptable Air Handler Model                            |                 | AP18BX21                               | AP24BX21                               | AP30BX21                               | AP36BX21                                  | AP36CX21                                 |
| Indoor Unit Power Supply                               | -               | AC 1 Phase, 208/230V, 60Hz             |  |  |   |  |
| Nominal Cooling Capacity <sup>1</sup>                  | Btu/h<br>(kW)   | 18,000<br>(5.3)                        | 24,000<br>(7.0)                        | 30,000<br>(8.8)                        | 36,000<br>(10.5)                          | 36,000<br>(10.5)                         |
| Nominal Heating Capacity <sup>1</sup>                  | Btu/h<br>(kW)   | 20,000<br>(5.9)                        | 27,000<br>(7.9)                        | 34,000<br>(10.0)                       | 40,000<br>(11.7)                          | 40,000<br>(11.7)                         |
| Sound Pressure Level <sup>2</sup><br>(Overall A Scale) | dB              | Not Currently Available                | Not Currently Available                | Not Currently Available                | Not Currently Available                   | Not Currently Available                  |
| Outer Dimensions                                       |                 |  |  |  |   |  |
| Height   | in. (mm)        | 41 (1041)                              | 41 (1041)                              | 47-1/2 (1207)                          | 47-1/2 (1207)                             | 51-1/2 (1308)                            |
| Width  | in. (mm)        | 17-1/2 (445)                           | 17-1/2 (445)                           | 17-1/2 (445)                           | 17-1/2 (445)                              | 21 (533)                                 |
| Depth  | in. (mm)        | 21-7/16 (545)                          | 21-7/16 (545)                          | 21-7/16 (545)                          | 21-7/16 (545)                             | 21-7/16 (545)                            |
| Net Weight   | lbs. (kg)       | 85 (39)                                | 87 (40)                                | 113 (51)                               | 113 (51)                                  | 114 (52)                                 |
| Refrigerant  | -               | R410A                                  |  |  |   |  |
| Indoor Fan (208/230V)                                  |                 |  |  |  |   |  |
| Airflow Rate <sup>3</sup><br>(Hi-Lo)                   | cfm<br>(m³/min) | 576-382 / 687-500<br>(16-11) / (19-14) | 713-457 / 778-605<br>(20-13) / (22-17) | 843-677 / 917-769<br>(24-19) / (26-22) | 1108-968 / 1178-1057<br>(31-27) / (33-30) | 1110-877 / 1210-994<br>(31-25) / (34-28) |
| External Pressure <sup>3</sup>                         |                 |  |  |  |   |  |
|  | in.W.G.<br>(Pa) | 0.4<br>(99)                            | 0.7<br>(174)                           | 0.7<br>(174)                           | 0.7<br>(174)                              | 0.7<br>(174)                             |
| Refrigerant Piping                                     |                 |  |  |  |   |  |
| Liquid Line  | in. (mm)        | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                                | 3/8 (9.52)                               |
| Gas Line <sup>4</sup>                                  | in. (mm)        | 5/8 (15.88)                            | 5/8 (15.88)                            | 5/8 (15.88)                            | 5/8 (15.88)                               | 5/8 (15.88)                              |
| Condensate Drain                                       |                 |  |  |  |   |  |
| OD   | in. (mm)        | 1-1/16 (26.7)                          | 1-1/16 (26.7)                          | 1-1/16 (26.7)                          | 1-1/16 (26.7)                             | 1-1/16 (26.7)                            |
| ID   | in. (mm)        | 13/16 (20.9)                           | 13/16 (20.9)                           | 13/16 (20.9)                           | 13/16 (20.9)                              | 13/16 (20.9)                             |
| Adaptable DX-Kit Model                                 |                 | EXV-018E                               | EXV-024E                               | EXV-030E                               | EXV-036E                                  |  |
| Control Box Part                                       |                 |  |  |  |   |  |
| Power Supply   | -               | AC 1 Phase, 208/230V, 60Hz             |  |  |   |  |
| Outer Dimensions                                       |                 |  |  |  |   |  |
| Height   | in. (mm)        | 3-3/16 (81)                            | 3-3/16 (81)                            | 3-3/16 (81)                            | 3-3/16 (81)                               |  |
| Width  | in. (mm)        | 12-5/8 (320)                           | 12-5/8 (320)                           | 12-5/8 (320)                           | 12-5/8 (320)                              |  |
| Depth  | in. (mm)        | 7-3/8 (187)                            | 7-3/8 (187)                            | 7-3/8 (187)                            | 7-3/8 (187)                               |  |
| Net Weight   | lbs. (kg)       | 6.57 (2.98)                            | 6.57 (2.98)                            | 6.57 (2.98)                            | 6.57 (2.98)                               |  |
| Expansion Valve Box Part                               |                 |  |  |  |   |  |
| Power Supply   | -               | DC 12V                                 |  |  |   |  |
| Outer Dimensions                                       |                 |  |  |  |   |  |
| Height   | in. (mm)        | 4-5/16 (109)                           | 4-5/16 (109)                           | 4-5/16 (109)                           | 4-5/16 (109)                              |  |
| Width  | in. (mm)        | 17-1/16 (433)                          | 17-1/16 (433)                          | 17-1/16 (433)                          | 17-1/16 (433)                             |  |
| Depth  | in. (mm)        | 5-5/16 (151)                           | 5-5/16 (151)                           | 5-5/16 (151)                           | 5-5/16 (151)                              |  |
| Net Weight   | lbs. (kg)       | 8.84 (4.01)                            | 8.84 (4.01)                            | 8.84 (4.01)                            | 8.84 (4.01)                               |  |
| Refrigerant  | -               | R410A                                  |  |  |   |  |
| Refrigerant Piping                                     |                 |  |  |  |   |  |
| Liquid Line In   | in. (mm)        | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                                |  |
| Liquid Line Out  | in. (mm)        | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                             | 3/8 (9.52)                                |  |

1. Nominal capacity is based on combination with VRF system and following conditions:

### Cooling Operation Conditions

Indoor Air Inlet Temperature: 80°F DB (26.7°C DB)

67°F WB (19.4°C WB)

Outdoor Air Inlet Temperature: 95°F DB (35.0°C DB)

Piping Length: 24.6 ft (7.5m)

Piping Lift: 0 ft (0m)

### Heating Operation Conditions

Indoor Air Inlet Temperature: 70°F DB (21.1°C DB)

Outdoor Air Inlet Temperature: 47°F DB (8.3°C DB)

43°F WB (6.1°C WB)

2. Sound pressure level is currently not available.

3. Hi and Lo setting on the wired controller. (Hi = Air Handler's High tap and Lo = Air Handler's Medium tap)

Make sure both the external pressure and air flow rate match the specification.

4. Gas connection piping diameter of the air handler is changed by using the reducer (accessory of DX-Kit) to connect to VRF system.

| Air Handler with DX-Kit Model                          |                 | (H,Y,C)MAHP48C21S                         | (H,Y,C)MAHP48D21S                          | (H,Y,C)MAHP60C21S                          | (H,Y,C)MAHP60D21S                          | (H,Y,C)MAHP60D22S                          |
|--|-----------------|---|--|--|--|--|
| Adaptable Air Handler Model                            |                 | AP48CX21                                  | AP48DX21                                   | AP60CX21                                   | AP60DX21                                   | AP60DX22                                   |
| Indoor Unit Power Supply                               |                 | AC 1 Phase, 208/230V, 60Hz                |  |  |  |  |
| Nominal Cooling Capacity <sup>1</sup>                  | Btu/h<br>(kW)   | 48,000<br>(14.1)                          | 48,000<br>(14.1)                           | 60,000<br>(17.6)                           | 60,000<br>(17.6)                           | 60,000<br>(17.6)                           |
| Nominal Heating Capacity <sup>1</sup>                  | Btu/h<br>(kW)   | 54,000<br>(15.8)                          | 54,000<br>(15.8)                           | 64,000<br>(18.8)                           | 64,000<br>(18.8)                           | 64,000<br>(18.8)                           |
| Sound Pressure Level <sup>2</sup><br>(Overall A Scale) | dB              | Not Currently Available                   | Not Currently Available                    | Not Currently Available                    | Not Currently Available                    | Not Currently Available                    |
| Outer Dimensions                                       |                 |   |  |  |  |  |
| Height   | in. (mm)        | 51-1/2 (1308)                             | 55-1/2 (1410)                              | 55-3/4 (1416)                              | 55-1/2 (1410)                              | 55-1/2 (1410)                              |
| Width  | in. (mm)        | 21 (533)                                  | 24-1/2 (622)                               | 21 (533)                                   | 24-1/2 (622)                               | 24-1/2 (622)                               |
| Depth  | in. (mm)        | 21-7/16 (545)                             | 21-7/16 (545)                              | 21-7/16 (545)                              | 21-7/16 (545)                              | 21-7/16 (545)                              |
| Net Weight   | lbs. (kg)       | 150 (68)                                  | 153 (69)                                   | 146 (66)                                   | 170 (77)                                   | 170 (77)                                   |
| Refrigerant  |                 | R410A                                     |  |  |  |  |
| Indoor Fan (208/230V)                                  |                 |   |  |  |  |  |
| Airflow Rate <sup>3</sup><br>(Hi-Lo)                   | cfm<br>(m³/min) | 1062-971 / 1190-1059<br>(30-28) / (34-30) | 1391-1139 / 1481-1258<br>(39-32) / (42-36) | 1680-1562 / 1739-1659<br>(48-44) / (49-47) | 1701-1590 / 1779-1694<br>(48-45) / (50-48) | 1757-1639 / 1829-1735<br>(50-46) / (52-49) |
| External Pressure <sup>3</sup>                         |                 |   |  |  |  |  |
|  | in.W.G.<br>(Pa) | 0.7<br>(174)                              | 0.7<br>(174)                               | 0.4<br>(99)                                | 0.4<br>(99)                                | 0.4<br>(99)                                |
| Refrigerant Piping                                     |                 |   |  |  |  |  |
| Liquid Line  | in. (mm)        | 3/8 (9.52)                                | 3/8 (9.52)                                 | 3/8 (9.52)                                 | 3/8 (9.52)                                 | 3/8 (9.52)                                 |
| Gas Line <sup>4</sup>                                  | in. (mm)        | 5/8 (15.88)                               | 5/8 (15.88)                                | 3/4 (19.05)                                | 3/4 (19.05)                                | 3/4 (19.05)                                |
| Condensate Drain                                       |                 |   |  |  |  |  |
| OD   | in. (mm)        | 1-1/16 (26.7)                             | 1-1/16 (26.7)                              | 1-1/16 (26.7)                              | 1-1/16 (26.7)                              | 1-1/16 (26.7)                              |
| ID   | in. (mm)        | 13/16 (20.9)                              | 13/16 (20.9)                               | 13/16 (20.9)                               | 13/16 (20.9)                               | 13/16 (20.9)                               |
| Adaptable DX-Kit Model                                 |                 | EXV-048E                                  |  | EXV-060E                                   |  |  |
| Control Box Part                                       |                 |   |  |  |  |  |
| Power Supply   | -               | AC 1 Phase, 208/230V, 60Hz                |  |  |  |  |
| Outer Dimensions                                       |                 |   |  |  |  |  |
| Height   | in. (mm)        | 3-3/16 (81)                               |  | 3-3/16 (81)                                |  |  |
| Width  | in. (mm)        | 12-5/8 (320)                              |  | 12-5/8 (320)                               |  |  |
| Depth  | in. (mm)        | 7-3/8 (187)                               |  | 7-3/8 (187)                                |  |  |
| Net Weight   | lbs. (kg)       | 6.57 (2.98)                               |  | 6.57 (2.98)                                |  |  |
| Expansion Valve Box Part                               |                 |   |  |  |  |  |
| Power Supply   | -               | DC 12V                                    |  |  |  |  |
| Outer Dimensions                                       |                 |   |  |  |  |  |
| Height   | in. (mm)        | 4-5/16 (109)                              |  | 4-5/16 (109)                               |  |  |
| Width  | in. (mm)        | 17-1/16 (433)                             |  | 17-1/16 (433)                              |  |  |
| Depth  | in. (mm)        | 5-5/16 (151)                              |  | 5-5/16 (151)                               |  |  |
| Net Weight   | lbs. (kg)       | 8.84 (4.01)                               |  | 11.05 (5.01)                               |  |  |
| Refrigerant  |                 | R410A                                     |  |  |  |  |
| Refrigerant Piping                                     |                 |   |  |  |  |  |
| Liquid Line In   | in. (mm)        | 3/8 (9.52)                                |  | 3/8 (9.52)                                 |  |  |
| Liquid Line Out  | in. (mm)        | 3/8 (9.52)                                |  | 3/8 (9.52)                                 |  |  |

1. Nominal capacity is based on combination with VRF system and following conditions:

Cooling Operation Conditions

Indoor Air Inlet Temperature: 80°F DB (26.7°C DB)  
67°F WB (19.4°C WB)  
Outdoor Air Inlet Temperature: 95°F DB (35.0°C DB)

Piping Length: 24.6 ft (7.5m)

Piping Lift: 0 ft (0m)

Heating Operation Conditions

Indoor Air Inlet Temperature: 70°F DB (21.1°C DB)  
Outdoor Air Inlet Temperature: 47°F DB (8.3°C DB)  
43°F WB (6.1°C WB)

2. Sound pressure level is currently not available.

3. Hi and Lo setting on the wired controller. (Hi = Air Handler's High tap and Lo = Air Handler's Medium tap)  
Make sure both the external pressure and air flow rate match the specification.

4. Gas connection piping diameter of the air handler is changed by using the reducer (accessory of DX-Kit) to connect to VRF system.



## 2.4 Component Data

| Air Handler with DX-Kit Model |                                    | (H,Y,C)MAHP18B21S           | (H,Y,C)MAHP24B21S                   | (H,Y,C)MAHP30B21S                   | (H,Y,C)MAHP36B21S                   | (H,Y,C)MAHP36C21S                      |                                       |
|-------------------------------|------------------------------------|-----------------------------|-------------------------------------|-------------------------------------|-------------------------------------|--|---------------------------------------|
| Adaptable Air Handler Model   |                                    | AP18BX21                    | AP24BX21                            | AP30BX21                            | AP36BX21                            | AP36CX21                               |                                       |
| Heat Exchanger Type           |                                    | Cross Flow Sine Wave        |                                     |                                     |                                     |  |                                       |
| Tube                          | Material                           | Aluminum Tube               |                                     |                                     |                                     |  |                                       |
|                               | Outer Diameter                     | φin. (mm)                   | 3/8 (9.5)                           | 3/8 (9.5)                           | 3/8 (9.5)                           | 3/8 (9.5)                              |                                       |
|                               | Rows                               | -                           | 2                                   | 2                                   | 2                                   | 2                                      |                                       |
|                               | Number of Tube/Coil                | -                           | 12                                  | 14                                  | 20                                  | 22                                     |                                       |
| Fin                           | Material                           | Aluminum                    |                                     |                                     |                                     |  |                                       |
|                               | Pitch                              | in. (mm)                    | 0.071 (1.8)                         | 0.083 (2.1)                         | 0.083 (2.1)                         | 0.083 (2.1)                            |                                       |
|                               | Maximum Operating Pressure         | psi (MPa)                   | 601 (4.15)                          | 601 (4.15)                          | 601 (4.15)                          | 601 (4.15)                             |                                       |
|                               | Total Face Area                    | ft²<br>(m²)                 | 4.30<br>(0.40)                      | 5.00<br>(0.46)                      | 7.10<br>(0.66)                      | 7.80<br>(0.72)                         |                                       |
| Number of Coil/Unit           |                                    | 3                           | 3                                   | 3                                   | 3                                   | 3                                      |                                       |
| Indoor Fan                    |                                    | Multi-Blade Centrifugal Fan |                                     |                                     |                                     |  |                                       |
| Number/Unit                   | Outer Diameter                     | φin. (mm)                   | 10 (254)                            | 10 (254)                            | 10 (254)                            | 10 (254)                               |                                       |
|                               | Nominal Airflow (208/230V) (Hi-Lo) | cfm (m³/min.)               | 576-382 / 687-500 (16-11) / (19-14) | 713-457 / 778-605 (20-13) / (22-17) | 843-677 / 917-769 (24-19) / (26-22) | 1108-968 / 1178-1057 (31-27) / (33-30) | 1110-877 / 1210-994 (31-25) / (34-28) |
|                               | Indoor Fan Motor                   |                             |                                     |                                     |                                     |  |                                       |
|                               | Starting Method                    |                             |                                     |                                     |                                     |  |                                       |
| Nominal Output                |                                    | W                           | 92                                  | 184                                 | 248                                 | 368                                    |                                       |
| Quantity                      |                                    | -                           | 1                                   | 1                                   | 1                                   | 1                                      |                                       |
| Insulation Class              |                                    | -                           | B                                   | B                                   | B                                   | B                                      |                                       |


| Air Handler with DX-Kit Model         |                            | (H,Y,C)MAHP48C21S                    | (H,Y,C)MAHP48D21S                         | (H,Y,C)MAHP60C21S                          | (H,Y,C)MAHP60D21S                          | (H,Y,C)MAHP60D22S                          |  |
|---------------------------------------|----------------------------|--------------------------------------|---|--|--|--|--|
| Adaptable Air Handler Model           |                            | AP48CX21                             | AP48DX21                                  | AP60CX21                                   | AP60DX21                                   | AP60DX22                                   |  |
| Heat Exchanger Type                   |                            | Cross Flow Sine Wave                 |   |  |  |  |  |
| Tube                                  | Material                   | Aluminum Tube                        |   |  |  |  |  |
|                                       | Outer Diameter             | φin. (mm)                            | 3/8 (9.5)                                 | 3/8 (9.5)                                  | 3/8 (9.5)                                  | 3/8 (9.5)                                  |  |
|                                       | Rows                       | -                                    | 2   | 2  | 2  | 2  |  |
|                                       | Number of Tube/Coil        | -                                    | 24  | 24   | 28   | 28   |  |
| Fin                                   | Material                   | Aluminum                             |   |  |  |  |  |
|                                       | Pitch                      | in. (mm)                             | 0.083 (2.1)                               | 0.083 (2.1)                                | 0.083 (2.1)                                | 0.083 (2.1)                                |  |
|                                       | Maximum Operating Pressure | psi (MPa)                            | 601 (4.15)                                | 601 (4.15)                                 | 601 (4.15)                                 | 601 (4.15)                                 |  |
|                                       | Total Face Area            | ft <sup>2</sup><br>(m <sup>2</sup> ) | 8.60<br>(0.80)                            | 8.60<br>(0.80)                             | 10.00<br>(0.93)                            | 10.00<br>(0.93)                            |  |
| Number of Coil/Unit                   |                            | 3                                    | 3   | 3  | 3  | 3  |  |
| Indoor Fan                            |                            | Multi-Blade Centrifugal Fan          |   |  |  |  |  |
| Number/Unit                           | -                          | 1                                    | 1   | 1  | 1  | 1  |  |
|                                       | Outer Diameter             | φin.                                 | 10  | 10   | 10   | 10   |  |
|                                       |                            | (mm)                                 | (254)                                     | (254)                                      | (254)                                      | (254)                                      |  |
| Nominal Airflow (208/230V)<br>(Hi-Lo) |                            | cfm<br>(m <sup>3</sup> /min.)        | 1062-971 / 1190-1059<br>(30-28) / (34-30) | 1391-1139 / 1481-1258<br>(39-32) / (42-36) | 1680-1562 / 1739-1659<br>(48-44) / (49-47) | 1701-1590 / 1779-1694<br>(48-45) / (50-48) | 1757-1639 / 1829-1735<br>(50-46) / (52-49) |
| Indoor Fan Motor                      |                            | Spot-Welded Type Enclosure           |   |  |  |  |  |
| Starting Method                       |                            | AC/PSC Motor                         |   |  |  |  |  |
| Nominal Output                        |                            | W                                    | 368                                       | 368  | 735  | 735  |  |
| Quantity                              |                            | -                                    | 1   | 1  | 1  | 1  |  |
| Insulation Class                      |                            | -                                    | B   | B  | B  | B  |  |

2.5 Dimensional Data


Models: EXV-018E, EXV-024E, EXV-030E, EXV-036E, EXV-048E, EXV-060E

Electrical Control Box


Unit: inch (mm)

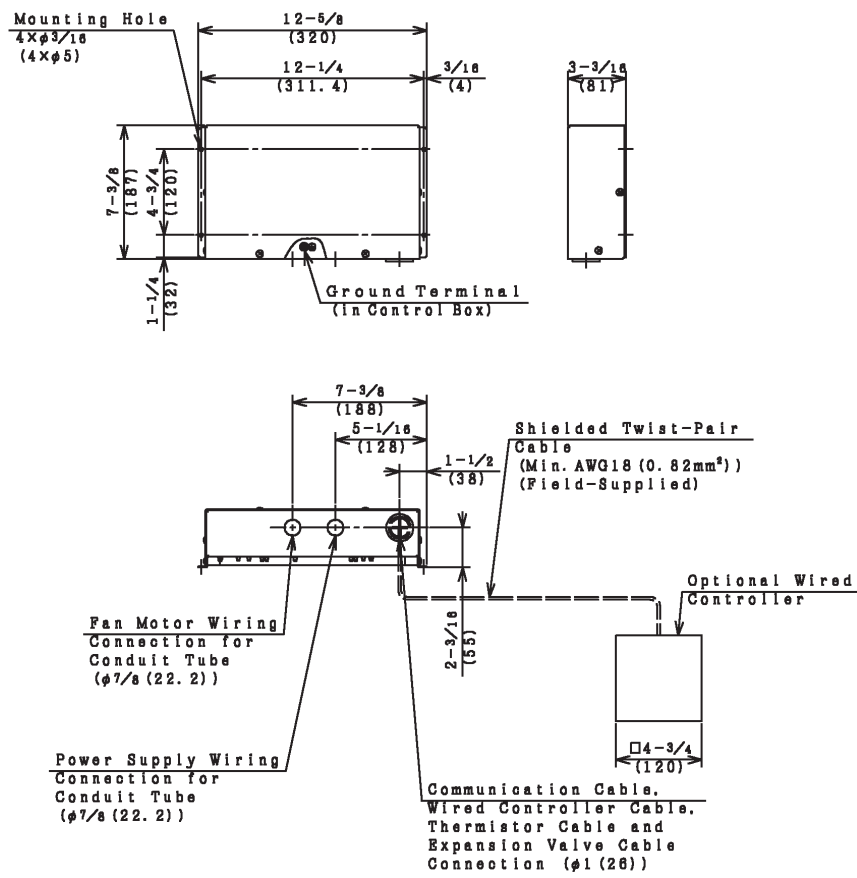

Expansion Valve Box

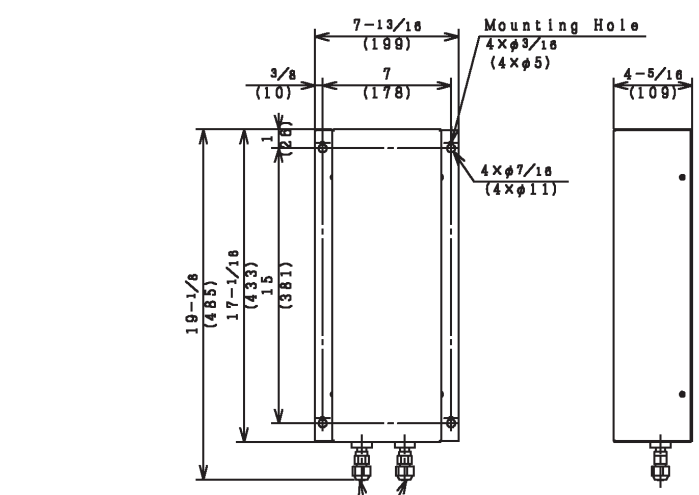

Refrigerant Liquid Pipe Connection  
(with φ3/8 (9.52) Flare Nut)

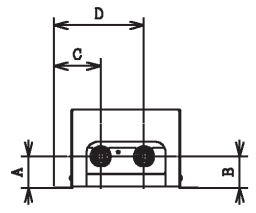


| Model    | A             | B             | C              | D              |
|----------|---------------|---------------|----------------|----------------|
| EXV-018E |               |               |                |                |
| EXV-024E | 1-3/4<br>(44) | 1-3/4<br>(44) | 2-9/16<br>(65) | 4-7/8<br>(124) |
| EXV-030E |               |               |                |                |
| EXV-036E |               |               |                |                |
| EXV-048E |               |               |                |                |
| EXV-060E | 1-3/4<br>(43) | 1-5/8<br>(42) | 2-5/8<br>(67)  | 5<br>(127)     |

# AIR HANDLER WITH DX-KIT

Models: AP18BX21, AP24BX21, AP30BX21, AP36BX21, AP36CX21, AP48CX21, AP48DX21, AP60CX21, AP60DX21, AP60DX22

Unit: inch

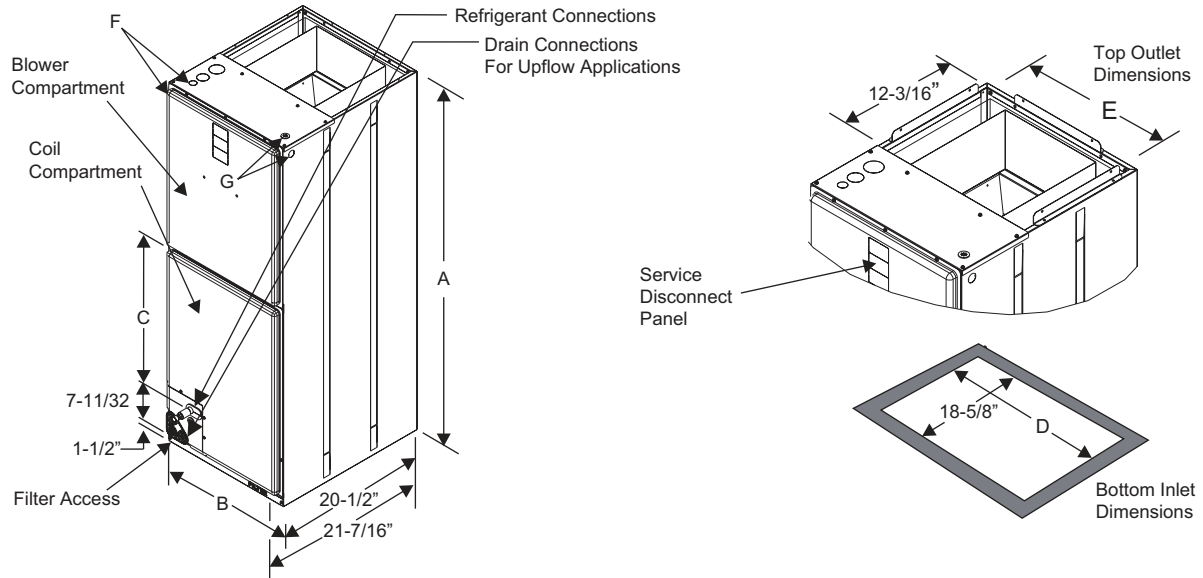

| Model    | Dimensions <sup>1</sup> |        |        |        |        | Wiring Knockouts <sup>2</sup>             |                   | Refrigerant Connections Line Size |       |
|----------|-------------------------|--------|--------|--------|--------|---|-------------------|-----------------------------------|-------|
|          | A                       | B      | C      | D      | E      | F   | G                 |                                   |       |
|          | Height                  | Width  |        |        |        | Power (Conduit)                           | Control (Conduit) | Liquid                            | Vapor |
| AP18BX21 | 41                      | 17-1/2 | 12-7/8 | 14-1/4 | 16-1/2 | 7/8 (1/2)<br>1-3/8 (1)<br>1-23/32 (1-1/4) | 7/8 (1/2)         | 3/8                               | 3/4   |
| AP24BX21 | 41                      | 17-1/2 | 12-7/8 | 14-1/4 | 16-1/2 |   |                   |                                   |       |
| AP30BX21 | 47-1/2                  | 17-1/2 | 19-1/2 | 14-1/4 | 16-1/2 |   |                   |                                   |       |
| AP36BX21 | 47-1/2                  | 17-1/2 | 19-1/2 | 14-1/4 | 16-1/2 |   |                   |                                   |       |
| AP36CX21 | 51-1/2                  | 21     | 22-5/8 | 17-3/4 | 20     |   |                   |                                   | 7/8   |
| AP48CX21 | 51-1/2                  | 21     | 22-5/8 | 17-3/4 | 20     |   |                   |                                   |       |
| AP48DX21 | 55-1/2                  | 24-1/2 | 26-5/8 | 21-1/4 | 23-1/2 |   |                   |                                   |       |
| AP60CX21 | 55-3/4                  | 21     | 26-7/8 | 17-3/4 | 20     |   |                   |                                   |       |
| AP60DX21 | 55-1/2                  | 24-1/2 | 26-5/8 | 21-1/4 | 23-1/2 |   |                   |                                   |       |
| AP60DX22 | 55-1/2                  | 24-1/2 | 26-5/8 | 21-1/4 | 23-1/2 |   |                   |                                   |       |


1. All dimensions are in inches.

2. Knockout size (conduit size in parentheses).

## 2.6 Operation Space

Models: EXV-018E, EXV-024E, EXV-030E, EXV-036E, EXV-048E, EXV-060E

Unit: inch (mm)

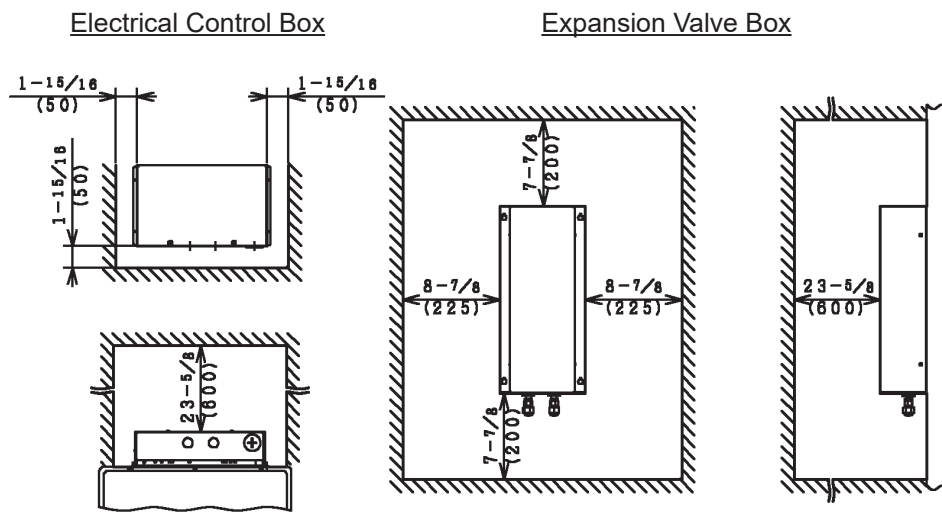

## 2.7 Sensible Heat Factor (SHF)

| Model             | SHF* |
|-------------------|------|
| (H,Y,C)MAHP18B21S | 0.80 |
| (H,Y,C)MAHP24B21S | 0.81 |
| (H,Y,C)MAHP30B21S | 0.79 |
| (H,Y,C)MAHP36B21S | 0.81 |
| (H,Y,C)MAHP36C21S | 0.81 |
| (H,Y,C)MAHP48C21S | 0.80 |
| (H,Y,C)MAHP48D21S | 0.82 |
| (H,Y,C)MAHP60C21S | 0.82 |
| (H,Y,C)MAHP60D21S | 0.82 |
| (H,Y,C)MAHP60D22S | 0.82 |

### NOTE:

SHF is based on combinations within the VRF system and the following conditions:

#### Cooling Operation Conditions







Indoor Air Inlet Temperature: 80°F DB (26.7°C DB)  
67°F WB (19.4°C WB)







Outdoor Air Inlet Temperature: 95°F DB (35.0°C DB)







Piping Length: 24.6 ft (7.5m)

Piping Lift: 0 ft (0m)



## 2.8 Fan Performance

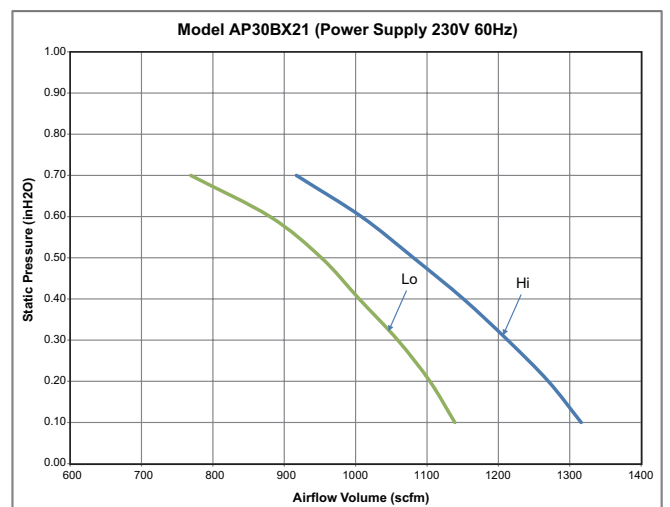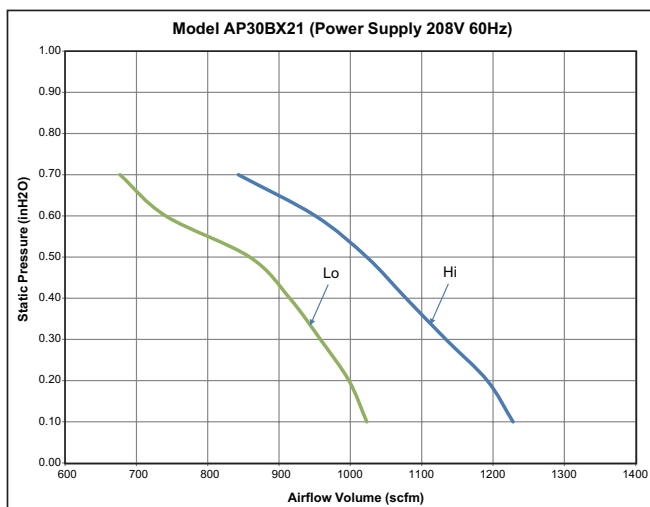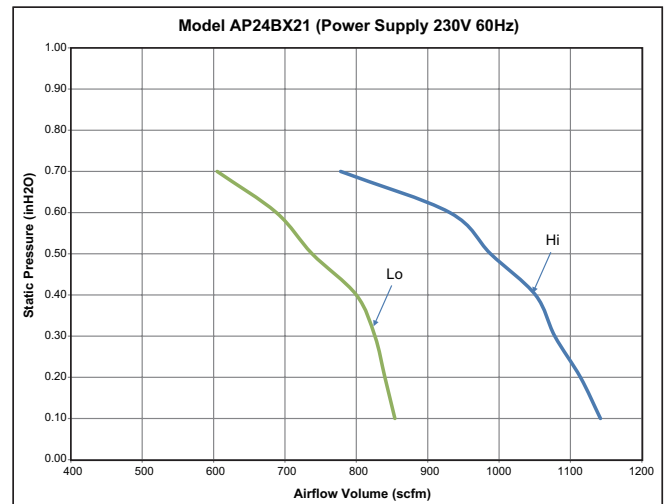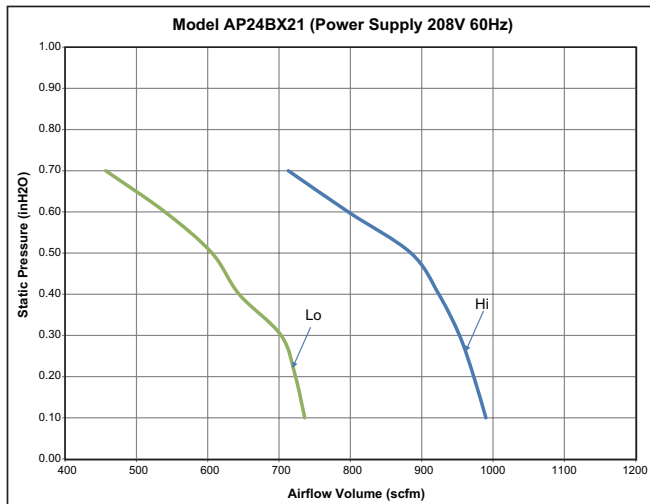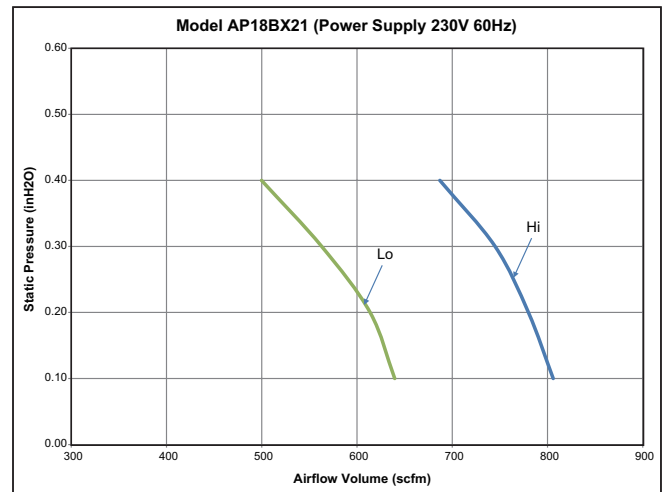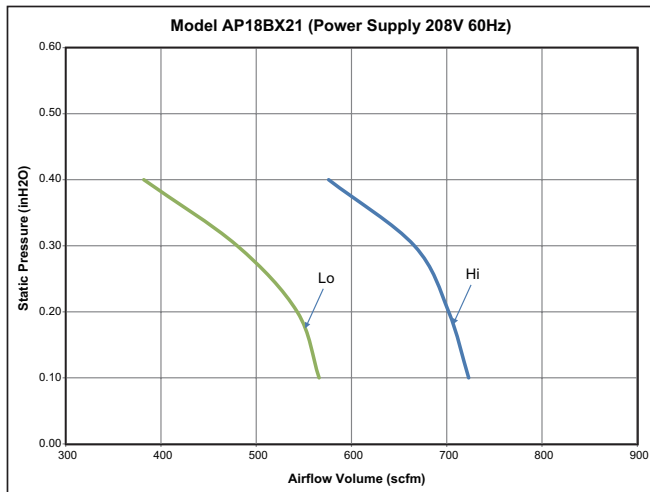

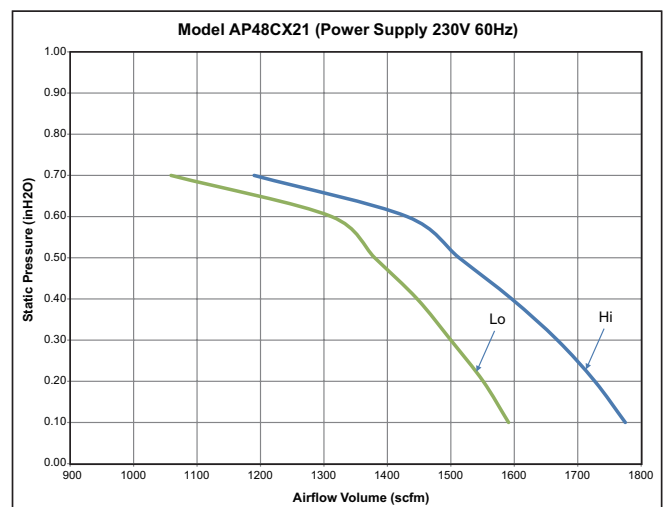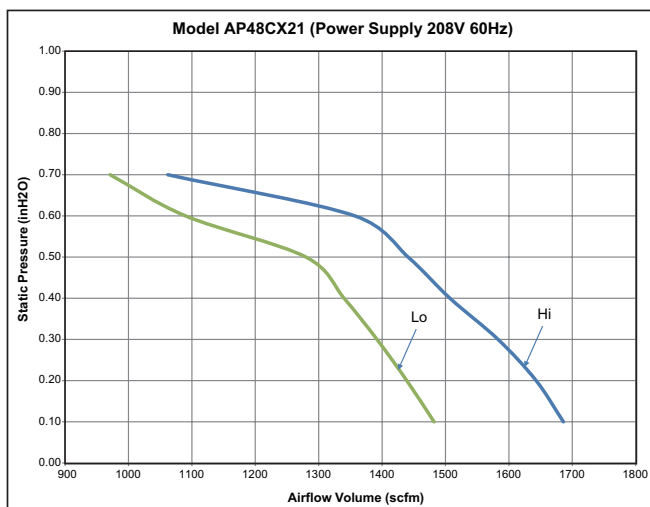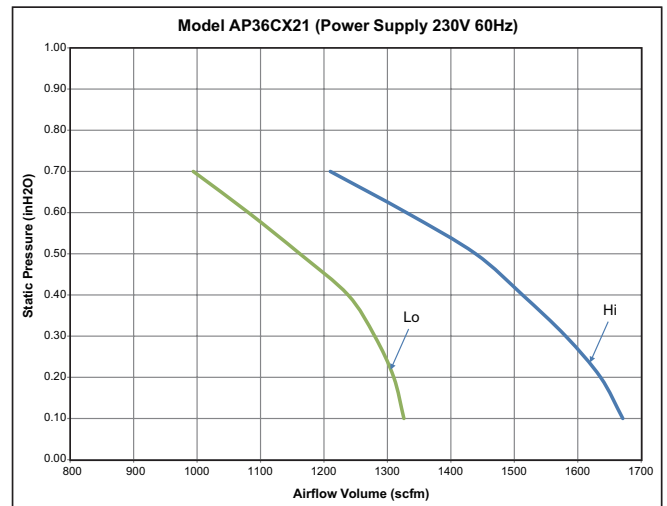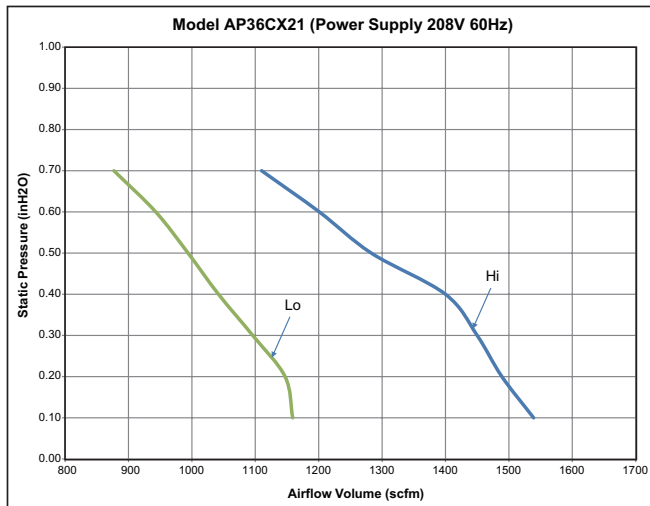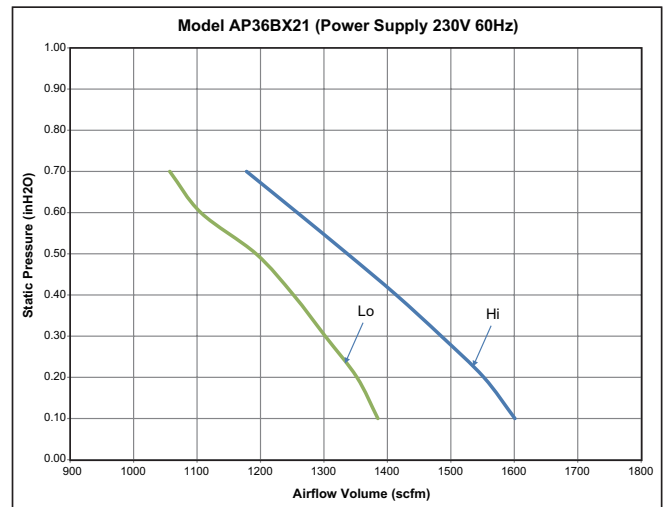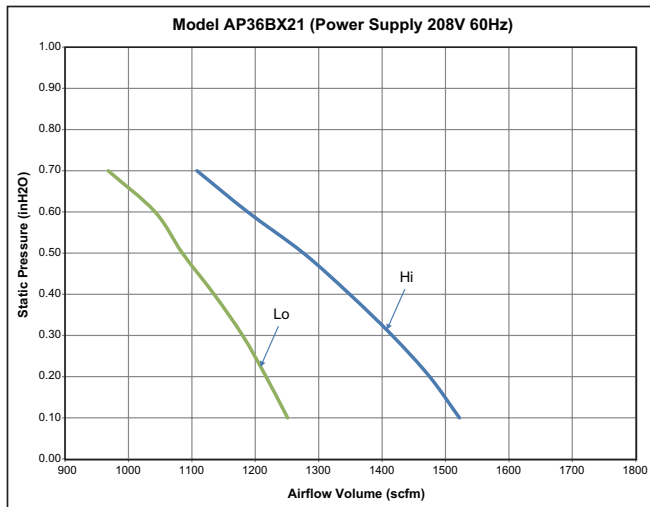

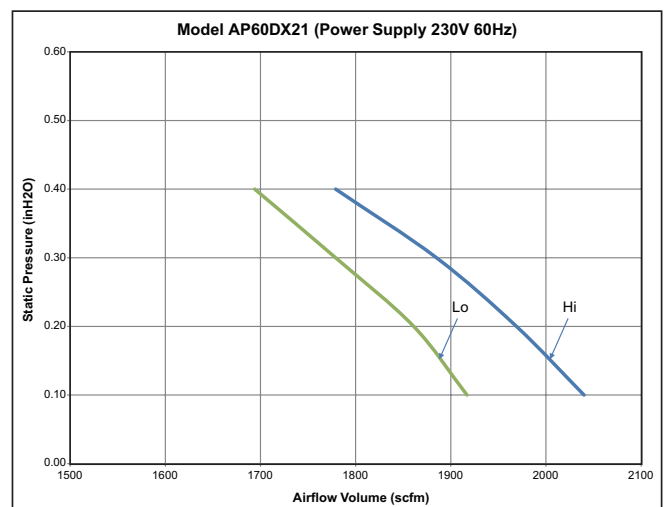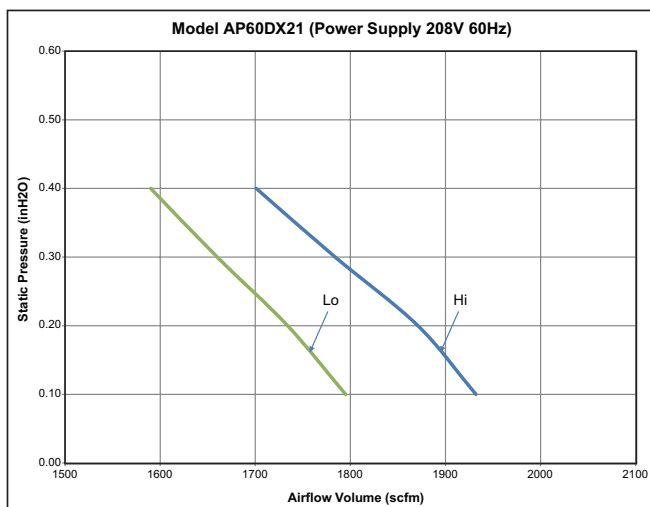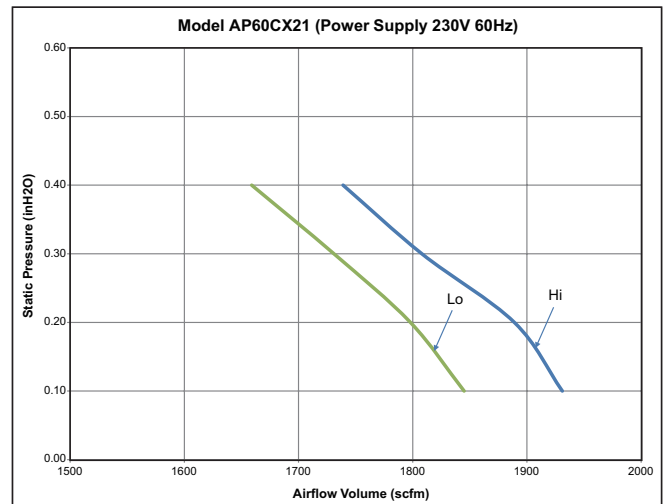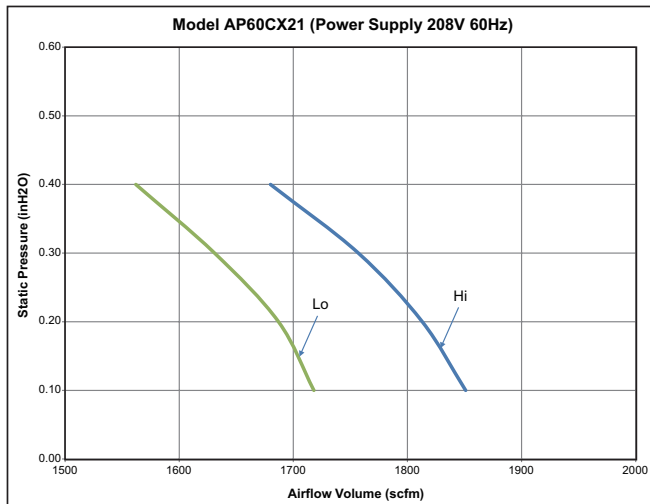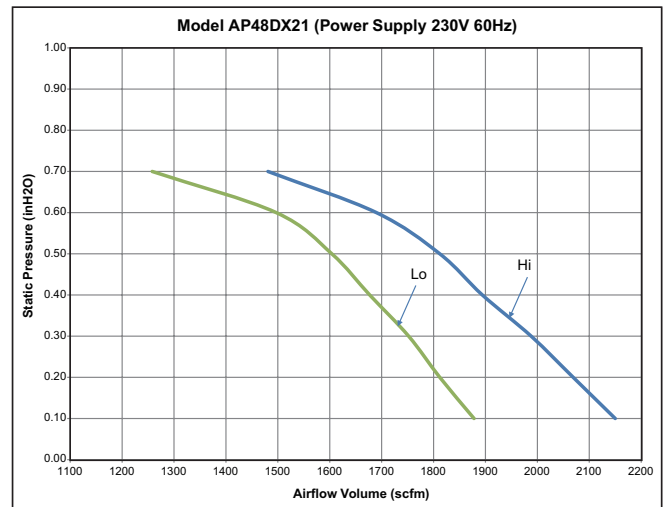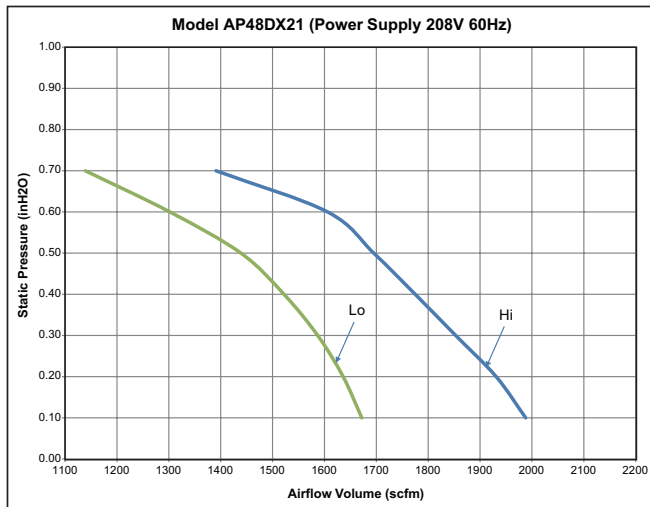



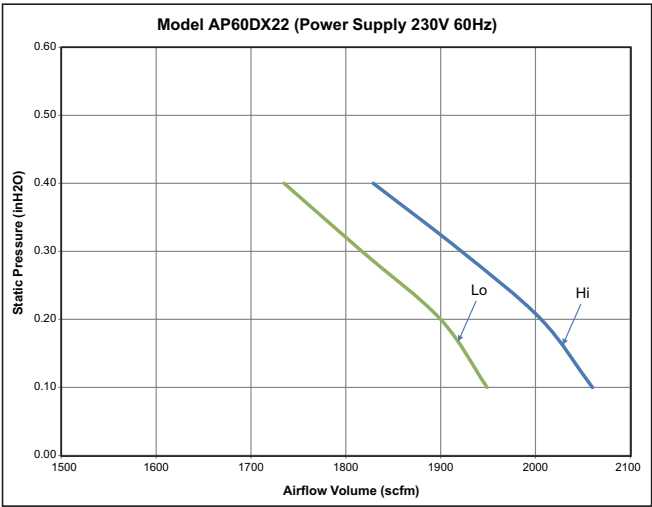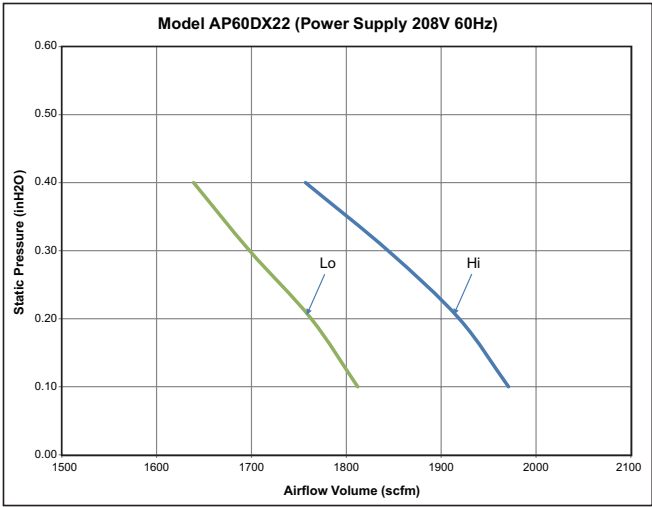

## 2.9 Electrical Data

| Model             | Unit Main Power |    |    | Applicable Voltage |         | Power Supply |     | Indoor Fan Motor | Unit |
|-------------------|-----------------|----|----|--------------------|---------|--------------|-----|------------------|------|
|                   | VOL             | PH | HZ | Maximum            | Minimum | MCA          | MFA | OPT              | FLA  |
| (H,Y,C)MAHP18B21S | 208/230         | 1  | 60 | 253                | 188     | 1.4          | 15  | 0.09             | 1.1  |
| (H,Y,C)MAHP24B21S |                 |    |    |                    |         | 1.8          | 15  | 0.18             | 1.4  |
| (H,Y,C)MAHP30B21S |                 |    |    |                    |         | 2.9          | 15  | 0.25             | 2.3  |
| (H,Y,C)MAHP36B21S |                 |    |    |                    |         | 3.3          | 15  | 0.37             | 2.6  |
| (H,Y,C)MAHP36C21S |                 |    |    |                    |         | 2.8          | 15  | 0.37             | 2.2  |
| (H,Y,C)MAHP48C21S |                 |    |    |                    |         | 3.6          | 15  | 0.37             | 2.9  |
| (H,Y,C)MAHP48D21S |                 |    |    |                    |         | 3.6          | 15  | 0.37             | 2.9  |
| (H,Y,C)MAHP60C21S |                 |    |    |                    |         | 5.1          | 15  | 0.74             | 4.1  |
| (H,Y,C)MAHP60D21S |                 |    |    |                    |         | 5.1          | 15  | 0.74             | 4.1  |
| (H,Y,C)MAHP60D22S |                 |    |    |                    |         | 5.5          | 15  | 0.74             | 4.4  |

VOL: Rated Unit Power Supply Voltage (V)

PH: Phase

HZ: Frequency (Hz)

MCA: Minimum Circuit Ampacity (A)

MFA: Maximum Fuse Ampacity (A)

OPT: Rated Motor Output (kW)

FLA: Full Load Ampacity (A)

### NOTE:

Power supply voltage should be satisfied with the following.

Supply Voltage: Rated Voltage within  $\pm 10\%$

Starting Voltage: Rated Voltage within  $-15\%$

Operating Voltage: Rated Voltage within  $\pm 10\%$


## 2.10 Sound Data

Will be available later.

## 2.11 Control System

### 2.11.1 Refrigerant System

Models: EXV-018E, EXV-024E, EXV-030E, EXV-036E, EXV-048E, EXV-060E

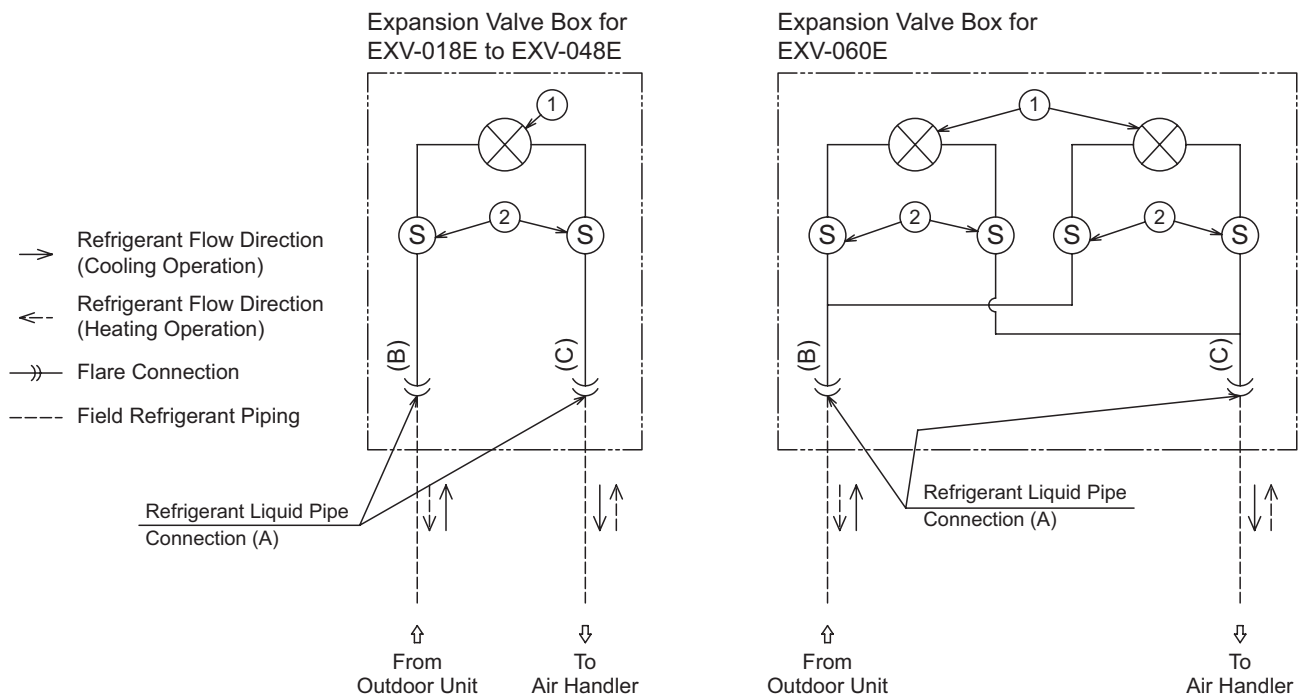

|                 |                        |
|-----------------|------------------------|
| Design Pressure | 601 PSIG<br>(4.15 MPa) |
|-----------------|------------------------|

| Mark | Part Name                  |
|------|----------------------------|
| ①    | Electronic Expansion Valve |
| ②    | Strainer                   |

Unit: inch (mm)

| Model   | (A) Liquid Pipe Connection | (B) (OD×T)                | (C) (OD×T)                |
|---|----------------------------|---------------------------|---------------------------|
| EXV-018E, EXV-024E, EXV-030E,<br>EXV-036E, EXV-048E, EXV-060E | φ3/8<br>(9.52)             | φ1/2×t0.039<br>(12.7×1.0) | φ1/2×t0.039<br>(12.7×1.0) |

## 2.11.2 Standard Operation Sequence

### ■ Cooling Operation

The sequence may be different depending on the outdoor unit model to be connected. Refer to the “Outdoor Unit Engineering Manual” for details.

### ■ Dry Operation


The sequence may be different depending on the outdoor unit model to be connected. Refer to the “Outdoor Unit Engineering Manual” for details.

### ■ Heating Operation

The sequence may be different depending on the outdoor unit model to be connected. Refer to the “Outdoor Unit Engineering Manual” for details.

### ■ Automatic Cooling and Heating Operation

It is applicable only for the Heat Recovery System.

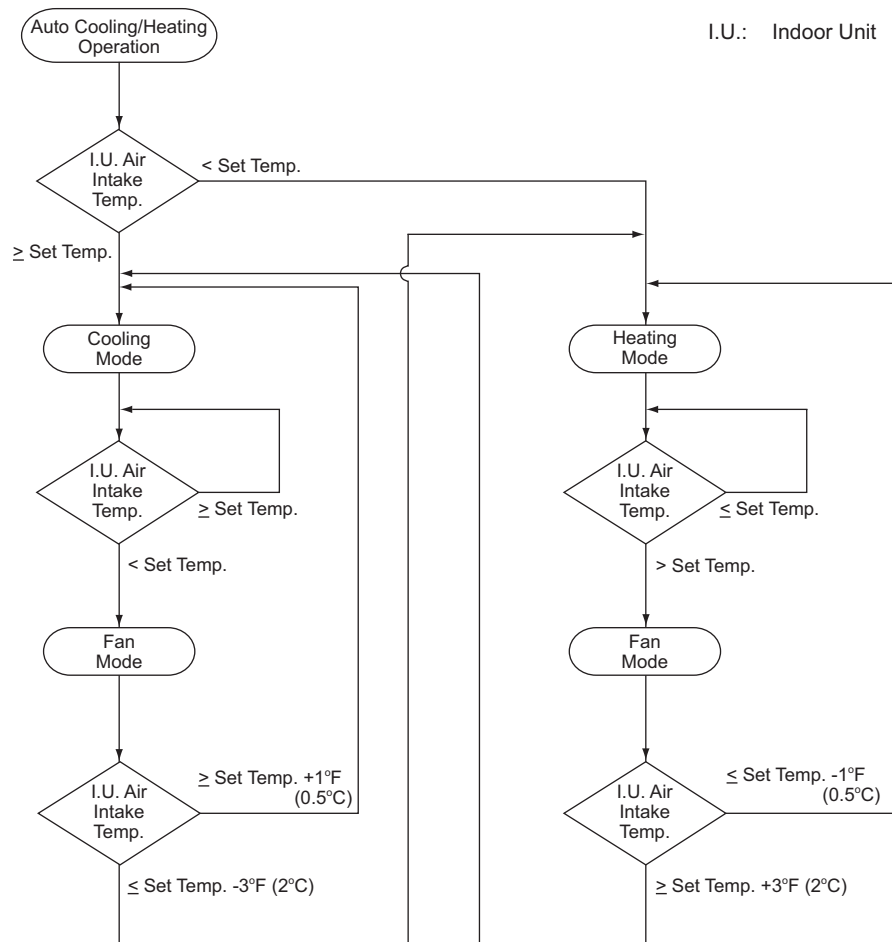


#### NOTE:

I.U fan operates continuously when in Cooling, Heating and Fan Mode.


### ■ Defrosting Operation

The sequence may be different depending on the outdoor unit model to be connected. Refer to the “Outdoor Unit Engineering Manual” for details.

## ■ Freezing Protection Control during Cooling or Dry Operation

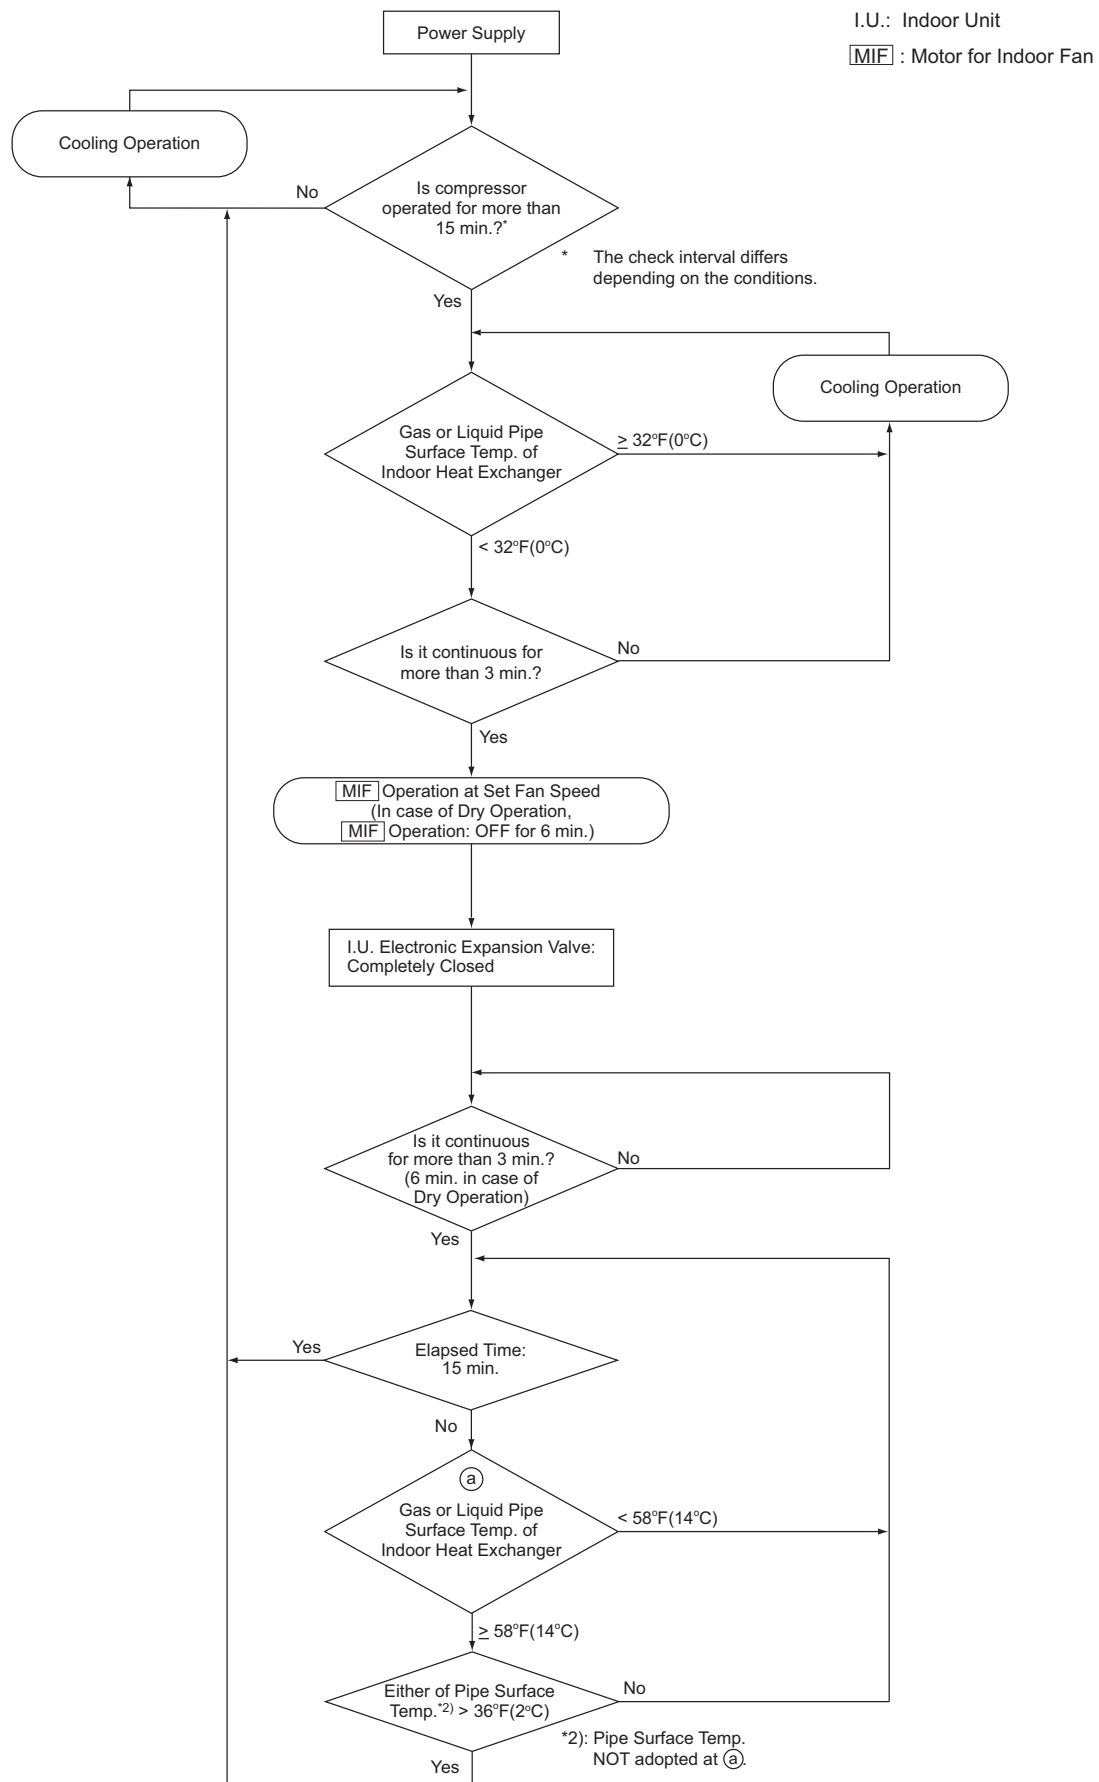

■ Prevention Control for Excessively High Outlet Air Temperature

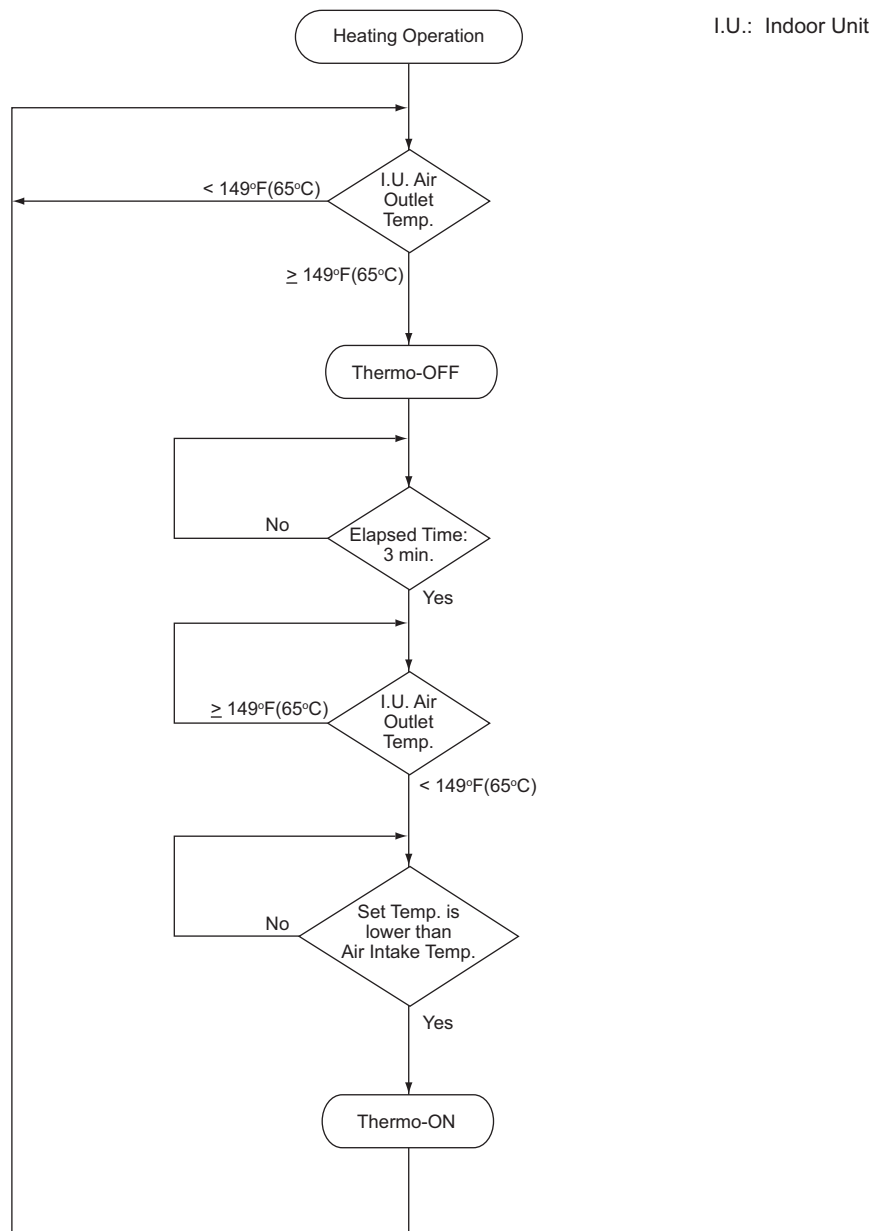

Thermo-ON/OFF Control for Indoor Unit

**NOTE:**

Thermo-ON: The outdoor unit and some indoor units are running.


Thermo-OFF: The outdoor unit and some indoor units stay on, but don't run.



- Heating Operation with Electric Heater Kit

When “Air Handler with Heater Kit” setting is enabled.

**MIF** : Motor for Indoor Fan

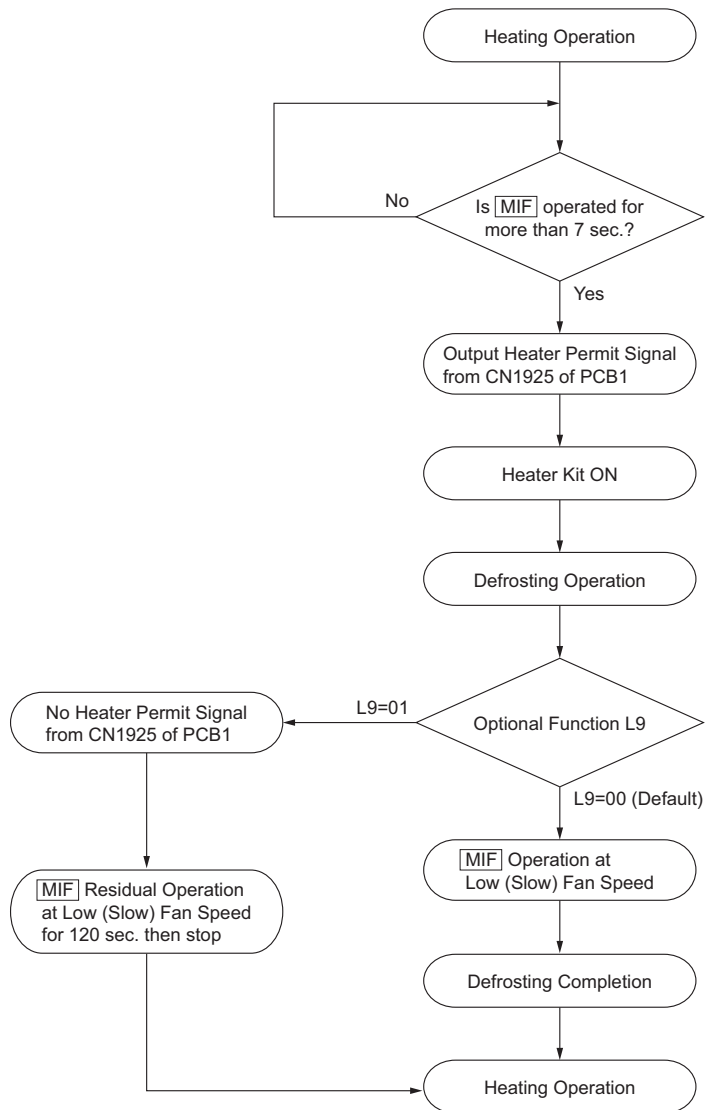

### 2.11.3 Safety and Control Device Setting


#### DX-KIt

|                                      |   |  |
|--------------------------------------|---|--|
| Model                                |   | EXV-018E, EXV-024E, EXV-030E, EXV-036E, EXV-048E, EXV-060E |
| For Control Circuit<br>Fuse Capacity | A | 5  |

#### Air Handler

|   |            |  |
|---|------------|--|
| Model   |            | AP18BX21, AP24BX21, AP30BX21, AP36BX21, AP36CX21, AP48CX21, AP48DX21, AP60CX21, AP60DX21, AP60DX22 |
| For Evaporator Fan<br>Motor Internal Thermostat |            | Automatic Reset, Non-Adjustable  |
| Cut-Out   | °F<br>(°C) | 293<br>(145)   |
| Cut-In  | °F<br>(°C) | 201<br>(94)  |

#### 2.11.4 Wiring Diagram of DX-Kit

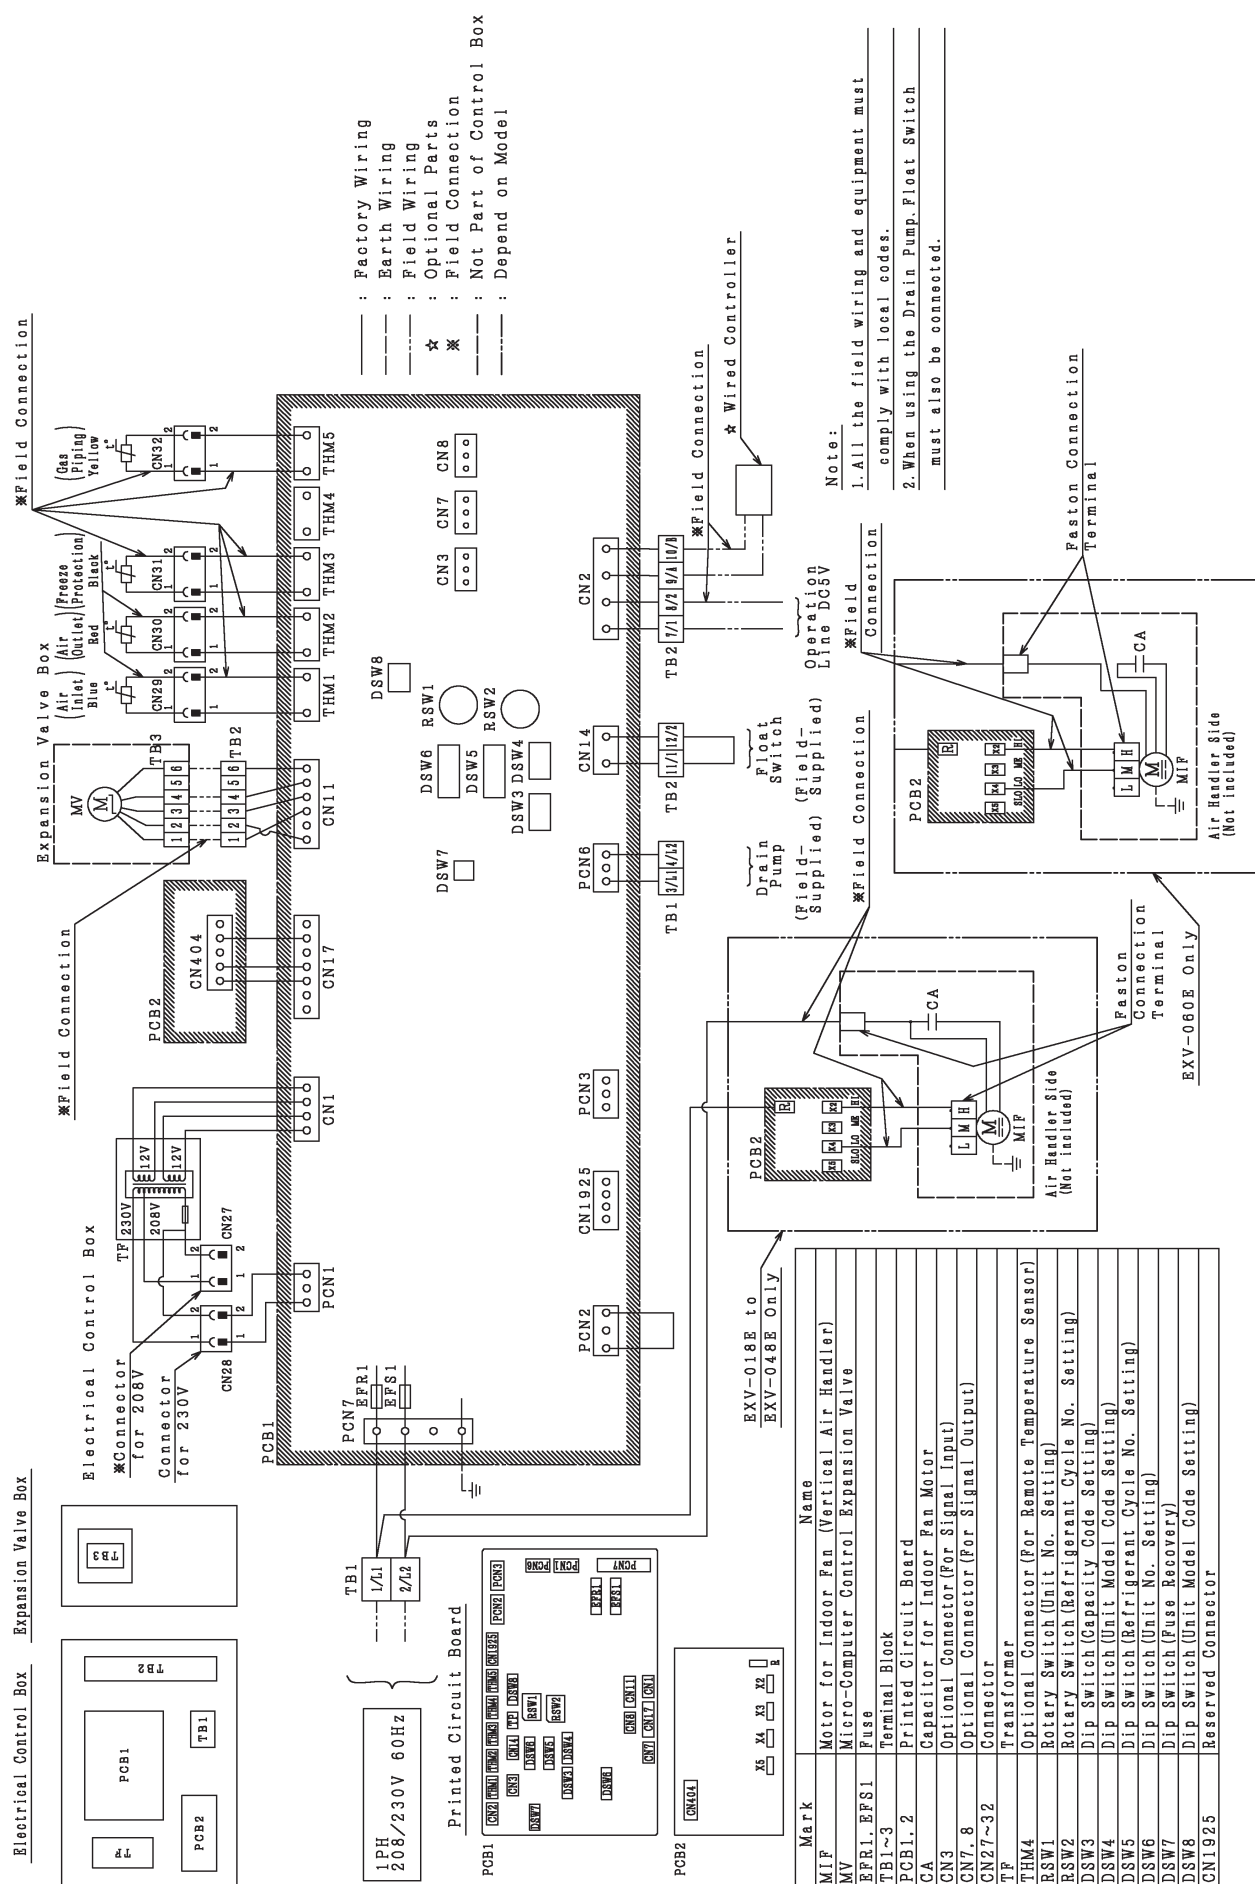

### 3. Optional Parts

#### 3.1 Line Up

| Item No. | Optional Parts                                     | Optional Parts Model Name |
|----------|--|---------------------------|
| 3.2      | Electric Heater Kit                                | 6HK Series                |
| 3.3      | Infrared (IR) Receiver Kit                         | CWDIRK01                  |
| 3.4      | 3P Connector Cable                                 | PCC-1A                    |
| 3.5      | Remote Sensor                                      | THM-R2A                   |
| 3.6      | Relay and 3 Pin Connector Kit                      | PSC-5RA                   |
| 3.7      | Wired Controller                                   | CIW01                     |
| 3.8      | Simplified Wired Controller                        | CIS01                     |
| 3.9      | Wireless Controller                                | CIR01                     |
| 3.10     | Mini Central Controller                            | CCM01                     |
| 3.11     | Large Central Controller                           | CCL01                     |
| 3.12     | Computerized Central Controller Software / Adapter | CCCS01 / CCCA01           |

Refer to the Engineering Manual of Control for details of item 3.7 to 3.12.

### 3.2 Electric Heater Kit: 6HK Series

Electric heater kits are available as single phase kits (2.5kW to 25kW, 208/230V) and 3-phase kits (10kW to 25kW).

Refer to the following table for selecting heater kit compatible with the air handler combination.

| Heater Kit Models <sup>1, 2, 3</sup> | Nominal kW @240V | Air Handler Models |           |           |           |           |           |           |           |           |           |
|--------------------------------------|------------------|--------------------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|-----------|
|                                      |                  | AP 18BX21          | AP 24BX21 | AP 30BX21 | AP 36BX21 | AP 36CX21 | AP 48CX21 | AP 48DX21 | AP 60CX21 | AP 60DX21 | AP 60DX22 |
| 6HK(0,1)6500206                      | 2.4kW            | ○                  | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(0,1)6500506                      | 4.8kW            | ○                  | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(0,1)6500806                      | 7.7kW            | —                  | —         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(0,1)6501006<br>6HK36501025       | 9.6kW            | —                  | —         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(1,2)6501306                      | 12.5kW           | —                  | —         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(1,2)6501506<br>6HK36501525       | 14.4kW           | —                  | —         | ○         | ○         | ○         | ○         | ○         | ○         | ○         | ○         |
| 6HK(1,2)6501806<br>6HK36501825       | 17.3kW           | —                  | —         | —         | ○         | ○         | ○         | ○         | ○         | ○         | —         |
| 6HK(1,2)6502006<br>6HK46502025       | 19.2kW           | —                  | —         | —         | ○         | —         | ○         | ○         | —         | ○         | —         |
| 6HK(1,2)6502506<br>6HK46502525       | 24kW             | —                  | —         | —         | —         | —         | —         | ○         | —         | ○         | —         |


○: Compatible, —: Not Compatible

- (0,1) - 0 = no service disconnect OR 1 = with service disconnect.
- (1,2) - 1 = with service disconnect, no breaker jumper bar OR 2 = with service disconnect & breaker jumper bar.
- 6HK3 = 3-Phase with terminal block connectors only, 6HK4 = 3-Phase with service disconnect.


These heater kits include sequential operation and temperature dual limit switches for safe, efficient operation.

### Single Phase (208/230V 1PH 60Hz) Heater Kit Wiring Diagram


#### Single Stage Heater Kit (2.5 and 5kW)

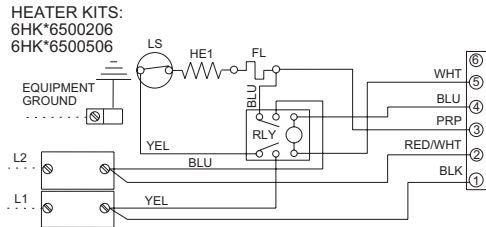


#### Single Stage Heater Kit (8 and 10kW)

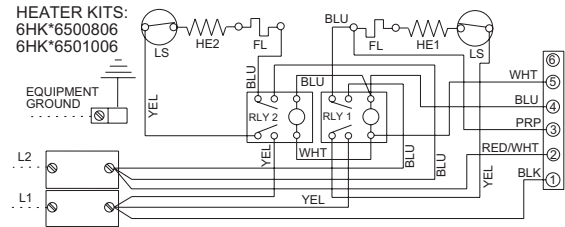


#### Two Stage Heater Kit (13 and 15kW)

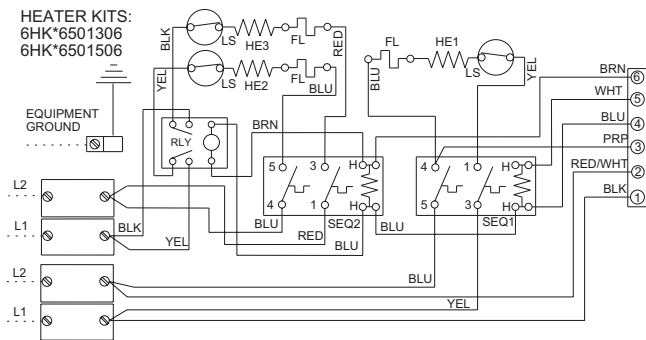

#### Two Stage Heater Kit (18 and 20kW)

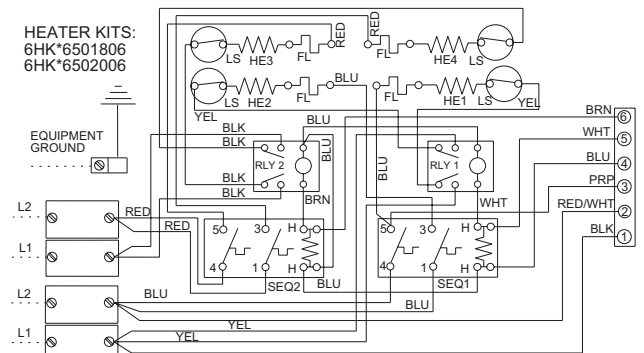

#### Two Stage Heater Kit (25kW)

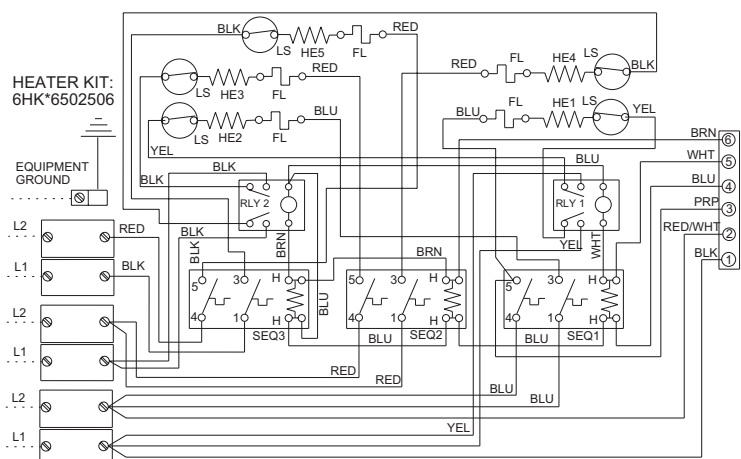


**LEGEND**  
LS - LIMIT SWITCH  
SEQ - SEQUENCER  
HE - HEATING ELEMENT  
FL - FUSIBLE LINK  
H - SEQUENCER HEATER  
RC - RUN CAPACITOR  
RLY - RELAY


## OPTIONAL PARTS

### 3-Phase (208/230V 3PH 60Hz) Heater Kit Wiring Diagram

#### Single Stage Heater Kit (10 and 15kW)

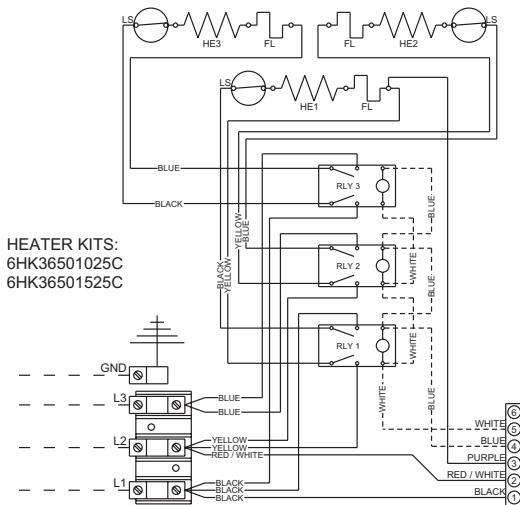

#### Two Stage Heater Kit (18kW)

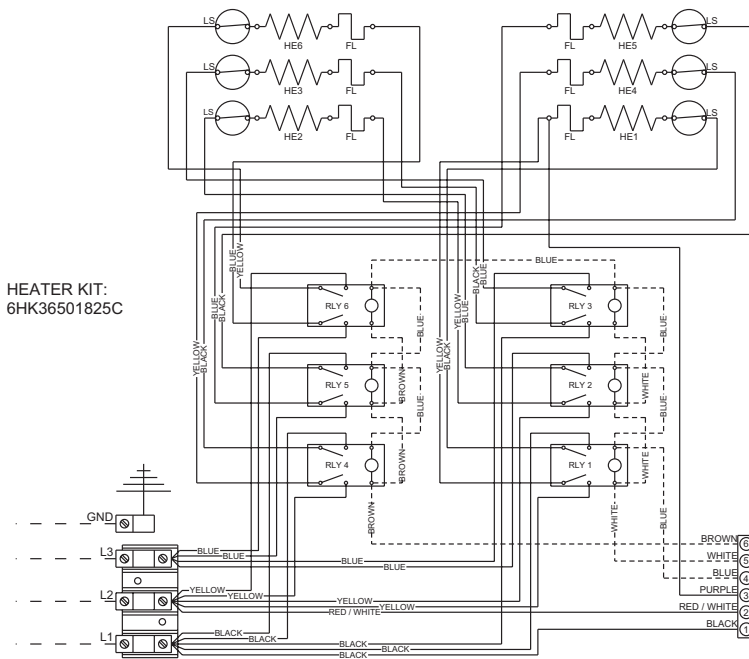


**LEGEND**  
FL - FUSIBLE LINK  
GND - EQUIPMENT GROUND  
HE - HEATING ELEMENT  
LS - LIMIT SWITCH  
RLY - RELAY  
SD - SERVICE DISCONNECT

--- FIELD POWER WIRING  
(208/230V)  
--- FACTORY WIRING  
(208/230V)  
--- FACTORY WIRING  
LOW VOLTAGE



## Two Stage Heater Kit (20 and 25kW)

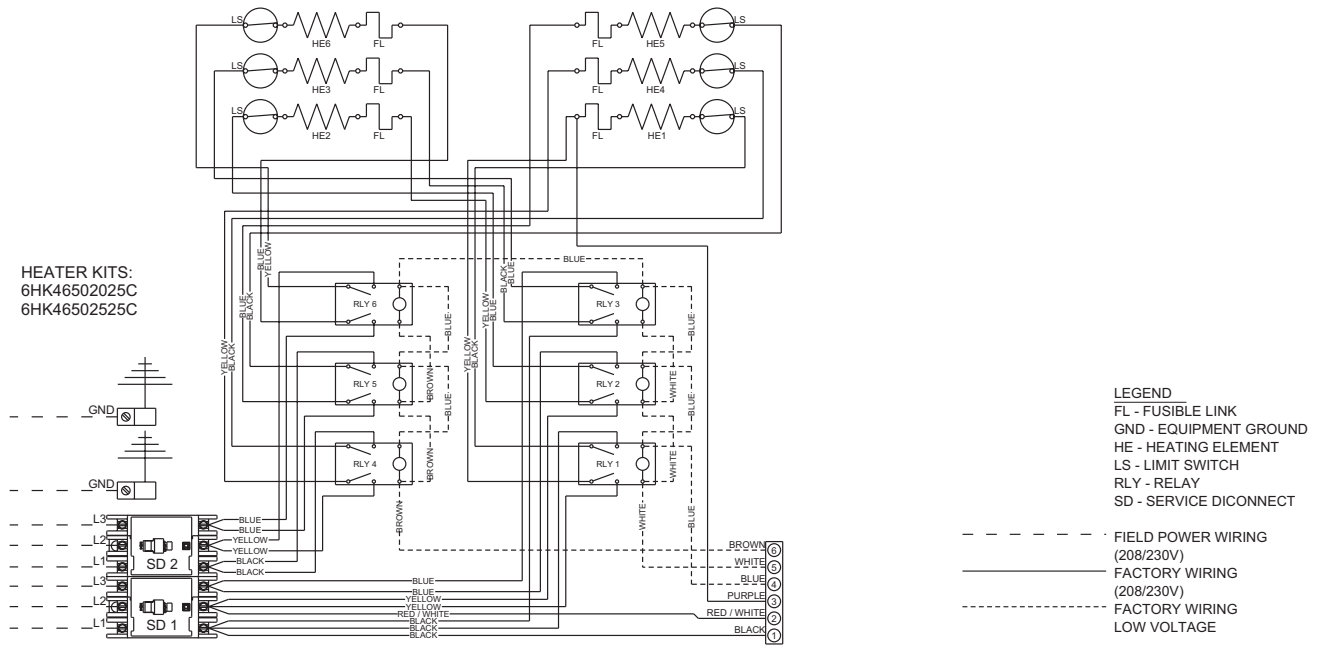

### 3.3 Infrared (IR) Receiver Kit: CWDIRK01


This IR receiver kit is installed with the wall mount to use with the wireless controller.

#### 3.3.1 Specifications

| Model                            | CWDIRK01  |
|----------------------------------|---|
| Outer Dimension<br>< W × H × D > | 3-9/16 × 4-3/4 × 1-1/8 inch<br>(90 × 120 × 28 mm) |

#### 3.3.2 Dimensions




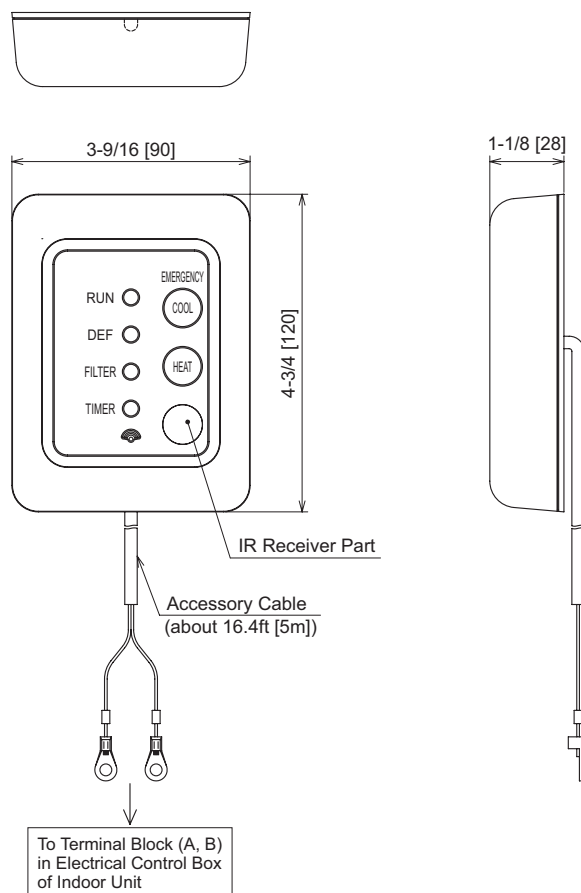

Unit: inch [mm]



#### 3.3.3 Applicable Models
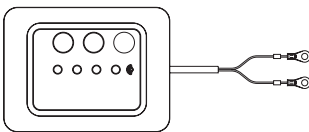
| Model                          | CWDIRK01        |
|--------------------------------|-----------------|
| Applicable Indoor Unit Model   | General-Purpose |
| Applicable Wireless Controller | CIR01           |

### 3.3.4 Accessories / Options

| No. | Accessory  | Qty | Remarks                        |
|-----|--|-----|--------------------------------|
| ①   | IR Receiver Kit<br>CWDIRK01<br> | 1   | With Connecting Cable          |
| ②   | Cable Band<br>                  | 1   | For Clamping Cable             |
| ③   | Securing Screw<br>              | 4   | For Installing IR Receiver Kit |
| ④   | Securing Screw<br>              | 2   | For Fixing Cable Clamp         |
| ⑤   | Cable Clamp<br>                 | 2   | For Clamping Cable             |

### 3.3.5 Installation

#### **⚠ WARNING**


- Turn OFF the power supply completely before setting the DIP switch, installation work, and electrical wiring work for the IR receiver kit. If not, it may cause an electric shock.
- Perform securely the installation work referring to this manual. If the installation is not completed correctly, the IR receiver kit may fall and cause injury.
- Do not install the IR receiver kit where flammable gases may generate or enter. It may cause heat generation or a fire.
- Correctly perform the electrical wiring work. If electrical work is not completed correctly, heat generation at the connection, a fire or an electric shock may occur.
- Make sure that the electrical wires are securely fixed so that no external force affects the terminal connections of the wiring. Not doing so may cause heat generation or a fire.

#### **NOTICE**

- When the IR receiver kit is installed near ambient lighting, it may not receive a signal from the wireless controller. Therefore, pay particular attention to the installation position of the IR receiver kit.
- Do not run the connecting cable for the IR receiver kit and the power supply cable (208/230V) in parallel. It may cause a malfunction of the IR receiver kit.
- To ensure correct performance, read this manual together with the “Installation and Maintenance Manual” for the indoor unit and the wireless controller. Forward this information to the building owner and request that they maintain all the equipment manuals.
- CWDIRK01 is for a general-purpose IR receiver kit. It is applied for ducted, cassette, wall mount, ceiling-suspended, and floor type indoor units.


## OPTIONAL PARTS

- 1 Perform the installation work for the IR receiver kit while the indoor unit is being installed.
- 2 Turn OFF the power supply for the indoor unit if the IR receiver kit is attached after the indoor unit is installed.
- 3 Install the IR receiver kit using the length of connecting cable (accessory).  
The cable length is approximately 17 ft. (5m).
- 4 Open the cover of the IR receiver kit.  
Push the slotted screwdriver with a tip width of approximately 1/4 inch (6mm) into the slot of the IR receiver kit cover and rotate it to open the cover as shown in the figure at the right.
- 5 Mount the IR receiver kit onto the wall or the ceiling surface as shown below.

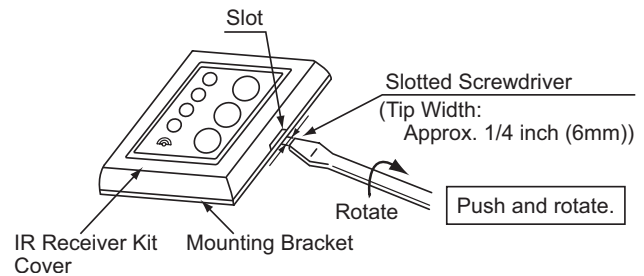


### Situation A

- (1) Secure the bracket.

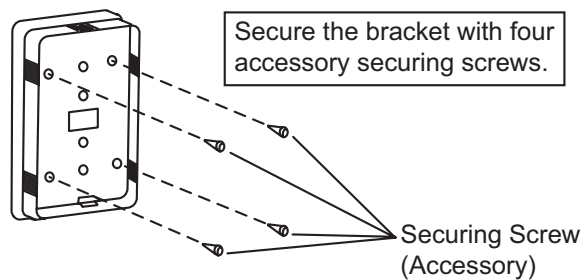


### Situation B


- (1) Prepare the field-supplied switch box (JIS Box). (JIS C8340)

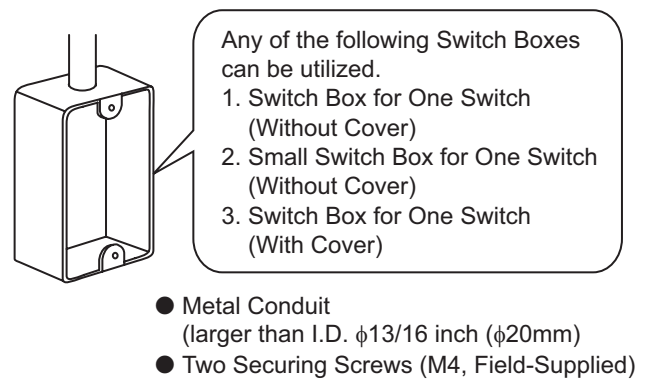


- (2) Select the connecting cable outlet direction and cut out one of the knock-out holes on the cover.

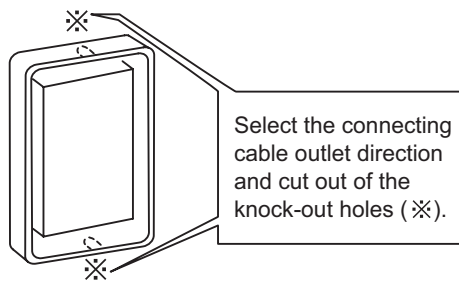


- (2) Run the connecting cable into the metal conduit.

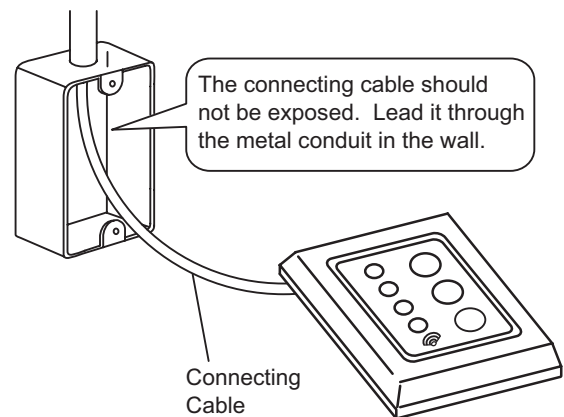

- (3) Lead the connecting cable through the knock-out hole.

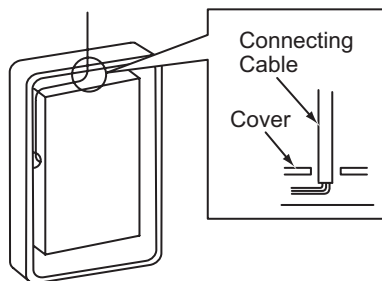


- (3) Secure the bracket.

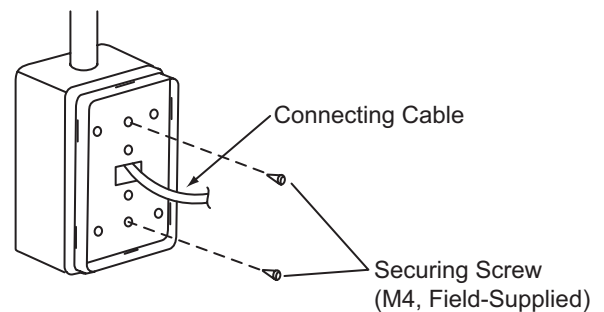


- (4) Attach the IR receiver kit.


Do not pinch the cable between the bracket and the IR receiver kit cover when attaching the IR receiver kit. Attach the IR receiver kit cover following these directions.

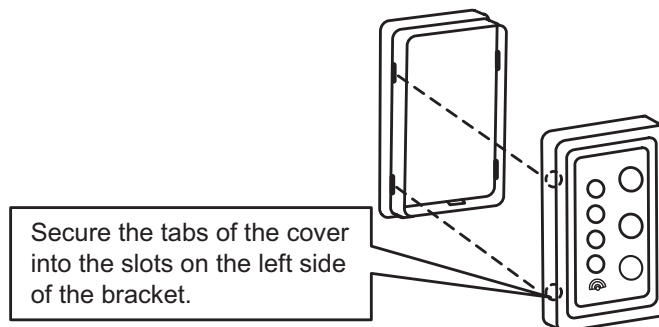

### Situation A

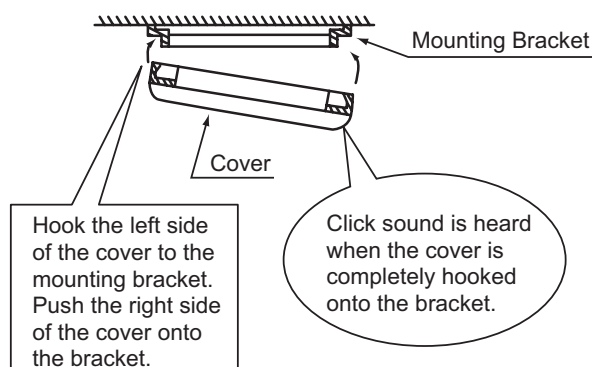

### Situation B

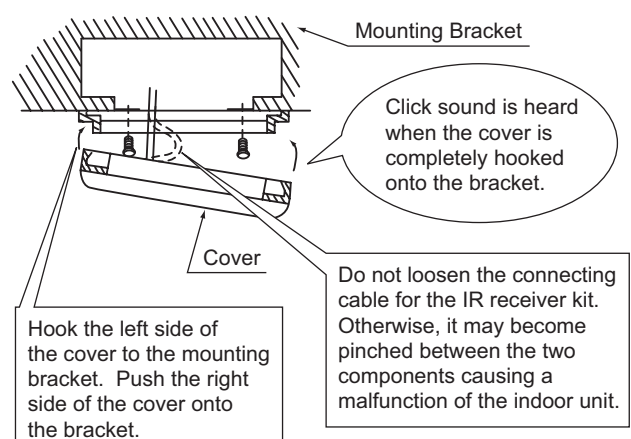


### 3.3.6 Electrical Wiring

The terminal block (TB2) for the controller cable is located as shown in the figure below. Connect the connecting cable for the IR receiver kit to terminals A and B at TB2. (There is no polarity between terminals A and B.) The details for wiring methods can be found in the “Installation and Maintenance Manual” for the indoor unit.


The following wiring method is an example for wall mount indoor units

**NOTE:**


After running the connecting cable, clamp the extra length of the connecting cable using the accessory cable band and place it in the electrical box.

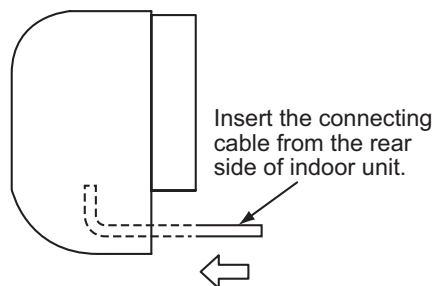

**TIWM006 - 012B21S**

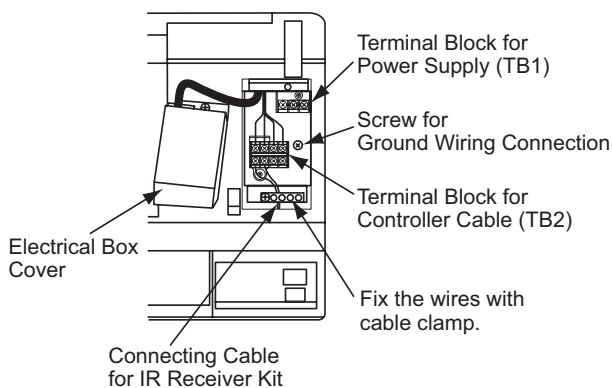

**TIWM015 - 030B21S**

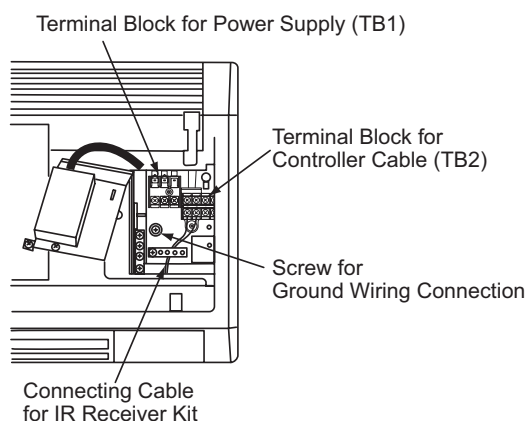


### 3.3.7 Setting DIP Switches on Indoor Unit Side


Instructions for setting DIP switches for other indoor units can be found in the Installation and Maintenance Manual for indoor units. The following DIP switch setting is an example for wall mount indoor units.

- 1 The factory setting of SW2 before shipment is “Wireless”. When using an IR receiver kit (CWDIRK01), set the SW2 to “Wired”. If not doing so, the operation is not available.
- 2 Turn OFF the power supply of the indoor and outdoor units completely before setting the DIP switch. If not turning off the power, the setting becomes invalid.
- 3 The positions of the DIP switches are shown below.  
Open the switch cover. After the DIP switch is set, re-attach the switch cover. The details for setting DIP switches for an indoor unit can be found in the Installation and Maintenance Manual for indoor units.


**TIWM006 - 012B21S**

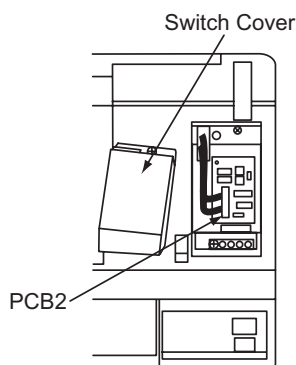

**TIWM015 - 030B21S**

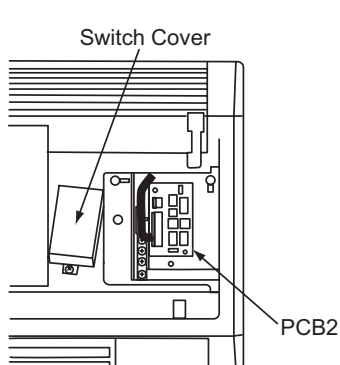

**DIP Switch PCB (PCB2)**

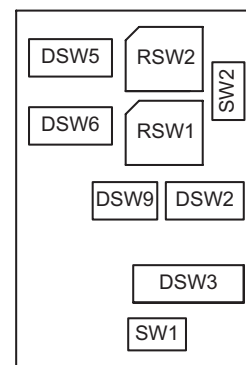

### 3.3.8 Setting DIP Switch on IR Receiver Kit Side


#### **WARNING**

Turn OFF the power supply completely before setting the DIP switch for an IR receiver kit.  
Not doing so may cause an electric shock.

- 1 The following switches are on the IR receiver kit.

#### **NOTE:**

When the case is closed, pay particular attention to the outlet position for connecting cable.

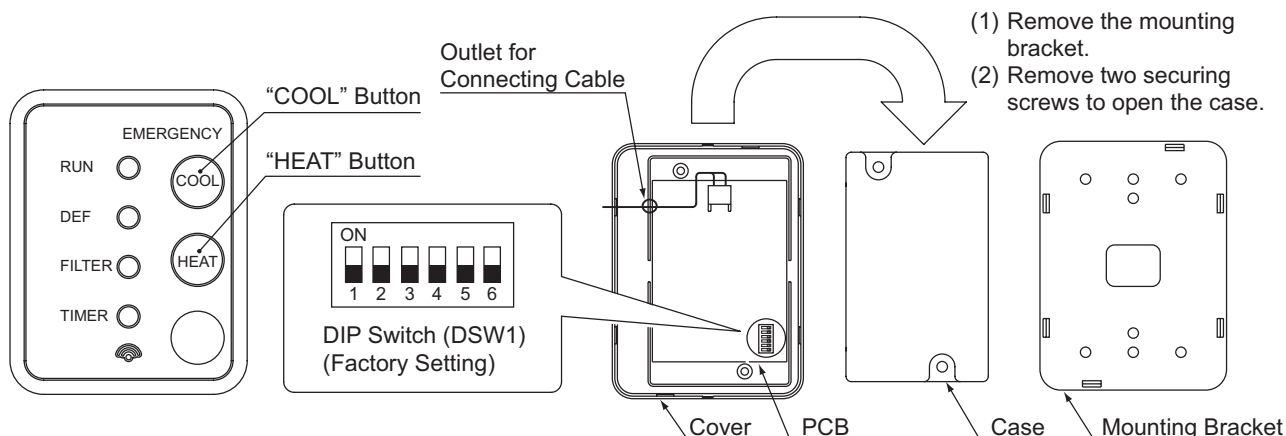

- 2 Emergency Operation Setting

"COOL" and "HEAT" switches are used for emergency operation when the batteries for the wireless controller are low.

- (1) Switch "COOL": Press "COOL" so that the cooling operation is started.  
Press "COOL" again so that the cooling operation is stopped.
- (2) Switch "HEAT": Press "HEAT" so that the heating operation is started.  
Press "HEAT" again so that the heating operation is stopped.

#### **NOTE:**

During an emergency operation, a yellow light "📶" flashes (0.5 second ON/0.5 second OFF).

The temperature setpoint and the fan speed for the cooling/heating operation are the same as before starting an emergency operation.

- 3 The DIP switch (DSW1) is for the optional function selection. If the optional function selection is required, set the DIP switch as follows.

| Optional Function                 | DIP Switch Setting (DSW1) |   |   |   |   |   | Details   |
|-----------------------------------|---------------------------|---|---|---|---|---|---|
|                                   | 1                         | 2 | 3 | 4 | 5 | 6 |   |
| Main/Sub Setting                  | O                         | X | X | X | X | X | Change main (OFF setting)/ sub (ON setting) wireless controller for a two-wireless controller system. |
| Identifying of Indoor Unit        | X                         | O | X | X | X | X | It functions as B Mode (identification of indoor unit) of the wireless controller when it is "ON".    |
| Invalidity of Emergency Operation | X                         | X | X | O | X | X | The switches for emergency operation are invalid.   |

O: ON

X: OFF

#### **NOTICE**

Review the following optional function settings when a function for the IR receiver kit is selected from the wireless controller or the centralized controller.

- The optional functions "Cooling Lower Limit for Setting Temperature" and "Heating Upper Limit for Setting Temperature" are not available with the wireless controller.
- The optional function setting "Fixing of Setting Temperature" is not available. When the operation mode is changed from the wireless controller, the indicated temperature on the wireless controller becomes the set temperature of the wired controller.

### 3.3.9 Identifying Indoor Units Installed in a Side-by-Side Operation


#### **⚠ WARNING**

Turn OFF the power supply completely before setting the DIP switch for the IR receiver kit. Not doing so can cause an electric shock.

When two indoor units are installed side by side, the commands from the wireless controller may be received by both indoor units. The function, "Identifying of Indoor Units Installed Side by Side" enables operation of the individual unit correctly without interfering with the other unit's operation. As shown in the figure at the right, the IR receiver kit of A and B are set side by side. In this instance, unit B is set as "Identifying Indoor Units Installed Side by Side".

#### NOTE:

This function setting is required at the receiver side. It should be set according to the Installation Manual for indoor units. Contact your distributor for details.

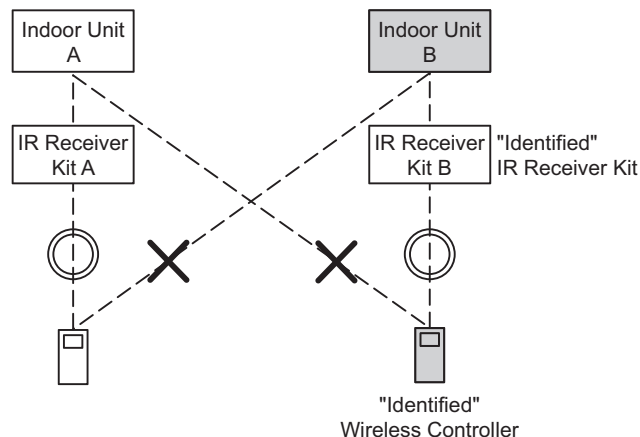

#### **Setting of Identifying of Indoor Units Installed Side by Side**

- 1 IR Receiver Kit Setting  
Set the Number 2 pin of the IR receiver kit DIP switch (DSW1) at the "Identified" Unit B "ON" side.
- 2 Wireless Controller  
Set the wireless controller according to the Installation and Maintenance Manual for the Wireless Controller.

#### **Cancellation of Identifying of Indoor Units Installed Side by Side**

- 1 IR Receiver Kit Setting  
Set the Number 2 pin of the IR receiver kit DIP switch (DSW1) "OFF" side for cancellation.
- 2 Wireless Controller  
Cancel the wireless controller setting according to the Installation and Maintenance Manual for the Wireless Controller.



### 3.3.10 Simultaneous Operation

#### ⚠ WARNING

- Turn OFF the power supply completely before setting the DIP switch and electrical wiring work for the IR receiver kit. Not doing so can cause an electric shock.
- Accurately perform the electrical wiring work. If the electrical work is not completed correctly, heat generation at the connection, a fire, or an electric shock may occur.
- Make sure that the electrical wires are adequately clamped with a cable clamp and not in a manner that applies too much external force to the terminal connections of the wirings. If done correctly, the result could cause heat generation or a fire.


#### NOTICE

- Do not run the connecting cable for IR receiver kit and the power supply cable (208/230V) in parallel. It may cause a malfunction of the IR receiver kit.

Up to 16 indoor units can be simultaneously controlled using one wireless controller. When multiple indoor units are installed in a large room, all the indoor units can be controlled to start/stop with only one wireless controller.

#### NOTE:

Do not apply a simultaneous operation for the indoor units installed separately in different rooms. Some units may be left without turning OFF the power supply.

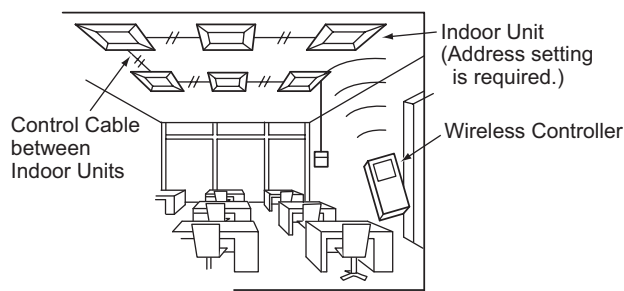


Control Example of Simultaneous Operation of Multiple Units

(Example of 4-way cassette type indoor units.)

#### Installation of IR Receiver Kit


In an instance of simultaneous operation of multiple (up to 16 ) indoor units by the wireless controller, install the IR receiver kit only to the unit to be operated. Other units should be the standard units without the IR receiver kit. If multiple IR receiver kits are required to be installed, two IR receiver kits are the maximum.

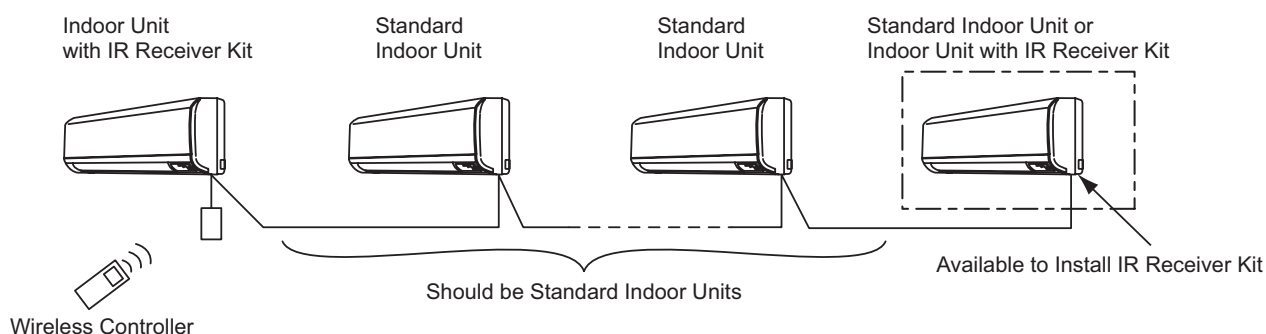

## Electrical Wiring Connecting and Setting

- 1 Connection between Indoor Units  
Perform the connection work as shown below.

Power Supply Cable 208/230V

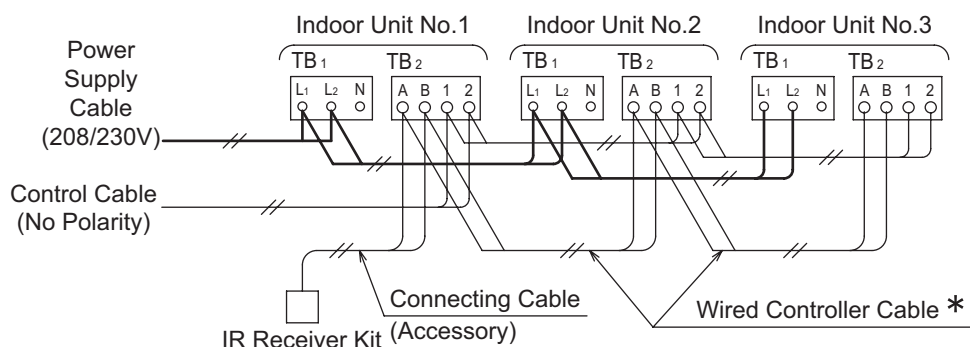

\* For twin, triple or quad combinations, a communication cable for the wireless controller is not required.

Use the field-supplied communication cable (AWG18) for the wired controller cable. The total length should be within 1640ft (500m). If the total length is less than 98ft (30m), AWG22 cables can be used.

- 2 Do not run the connected wireless controller cable and the power supply cable (208/230V) in parallel in the indoor units.  
Stabilize the cable with cable bands. Along with the wiring outside the indoor units, the control cables should not run with the power supply cable (208/230V). Keep a separation of more than 12 inches (30cm) or run the cable through a grounded metal conduit.

- 3 Unit Number Setting  
The indoor unit numbers are set by the auto-address function. Therefore, an indoor unit number setting is not required. If the indoor unit number is fixed, set the unit number of all indoor units respectively and serially. It is recommended that the unit number settings begin with "1". The setting is set not to overlap the unit number.

### Unit Number Setting

| DSW6 (Tens Digit)  | RSW1 (Units Digit) | Ex.: Set for No. 16 Unit     |
|--|--------------------|------------------------------|
|  |                    |                              |
| Factory setting for DSW6 and RSW1 were set to "0".<br>Max. 63 units are available for setting. |                    | Set No.1 pin ON. Set at "6". |

### 3.3.11 Test Run by Wireless Controller (CIR01)

After all installations are completed, a test run should be performed.

- (1) Perform the test run according to the Installation Manual of the wireless controller.
- (2) The test run from the wireless controller switch takes two hours to complete.

**NOTE:**

For the wall mount indoor units, if the TIMER indicator (green) is flashing (0.5 second ON/0.5 second OFF) after two hours, an alarm may occur. Operate the indoor unit ,and check for abnormality.

### 3.3.12 Alarm Indication


#### NOTICE

- If a malfunction occurs, such as safety device actuation, during the test run or the normal operation, "RUN" (red light) flashes (0.5 second ON / 0.5 second OFF).
- The alarm codes are indicated by the number of LED flashes of "DEF" (green light) and "FILTER" (yellow light).

The first LED light is green. The number of times this LED flashes (0.5 second ON and OFF) will tell you the "DEF" Alarm Code.

The second LED light is yellow. The number of times this LED flashes (0.5 second ON and OFF) will tell you the "FILTER" Alarm Code.

Example

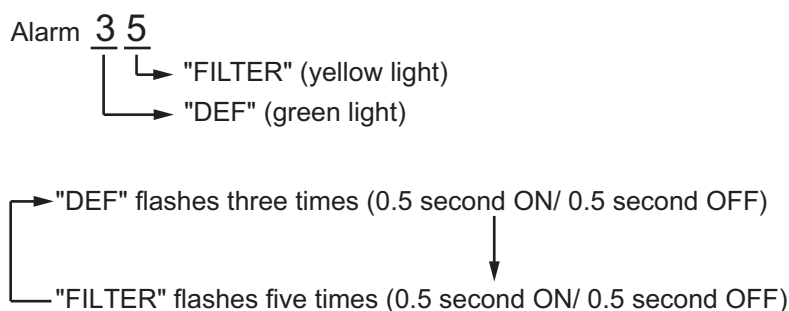

These signals are repeated until the alarm is reset.


- "RUN" (red light) flashing (1 second ON/1 second OFF) indicates an abnormal transmission (connector loose, connector disconnection, broken wire, or incorrect wiring, or something similar) between the indoor unit and the IR receiver kit.
- When the IR receiver kit is connected to multiple indoor units, the alarm code is indicated for each indoor unit in order.

#### Alarm Code Table

Further details for alarm codes can be found in the "Installation and Maintenance Manual" for the indoor unit.

### 3.4 3P Connector Cable: PCC-1A

This accessory connector is utilized to provide remote start/stop capability (binary input) to an indoor unit and provide operating status (binary output) of an indoor unit's functions. (System Parts: One set contains five 3P cords.)

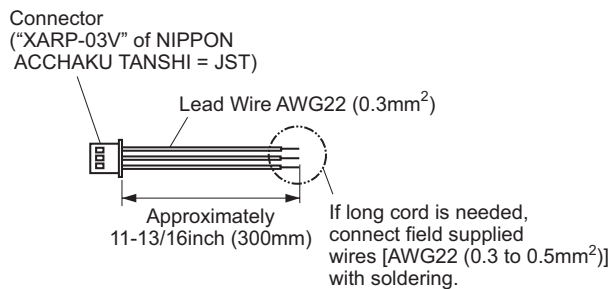


|         |  |
|---------|--|
| Name    | 3P Connector Cable                         |
| Model   | PCC-1A                                     |
| Remarks | One set contains five 3P connector cables. |

3P Connector Cable

### 3.5 Remote Sensor: THM-R2A

When a remote temperature sensor is installed with an indoor unit, the indoor unit is configurable to use the temperature at the location of the remote sensor OR the average of the unit's return air temperature and the temperature at the location of the remote sensor to control that unit. (reference the specific controller Installation Manual for function configuration details)

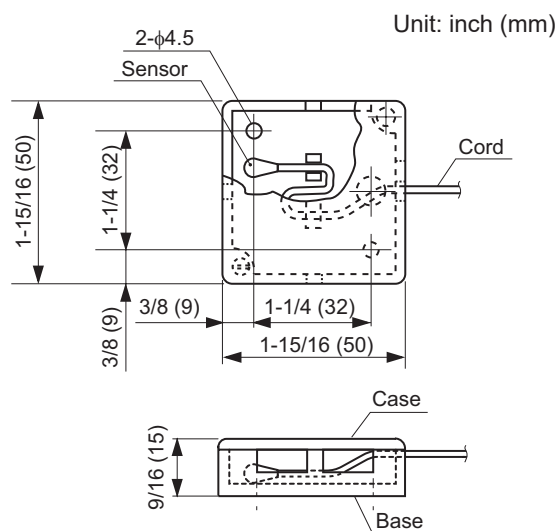



#### Specifications

| Item   |             | Specification      |
|--------|-------------|--------------------|
| Model  |             | THM-R2A            |
| Case   | Material    | ABS Resin          |
|        | Color       | Silky White        |
| Base   | Material    | ABS Resin          |
|        | Color       | Silky White        |
| Sensor | Part Name   | Thermistor         |
|        | Cord Length | approx. 26 ft (8m) |

### 3.6 Relay and 3 Pin Connector Kit: PSC-5RA

This relay kit provides for basic input/output integration functionality (indoor unit ON/OFF, operating mode, alarm status) to third party controllers and Building Management Systems (BMS).

Unit: inch (mm)

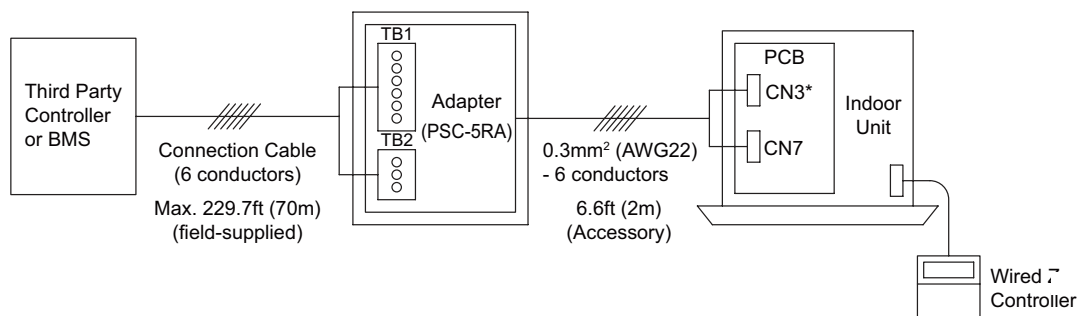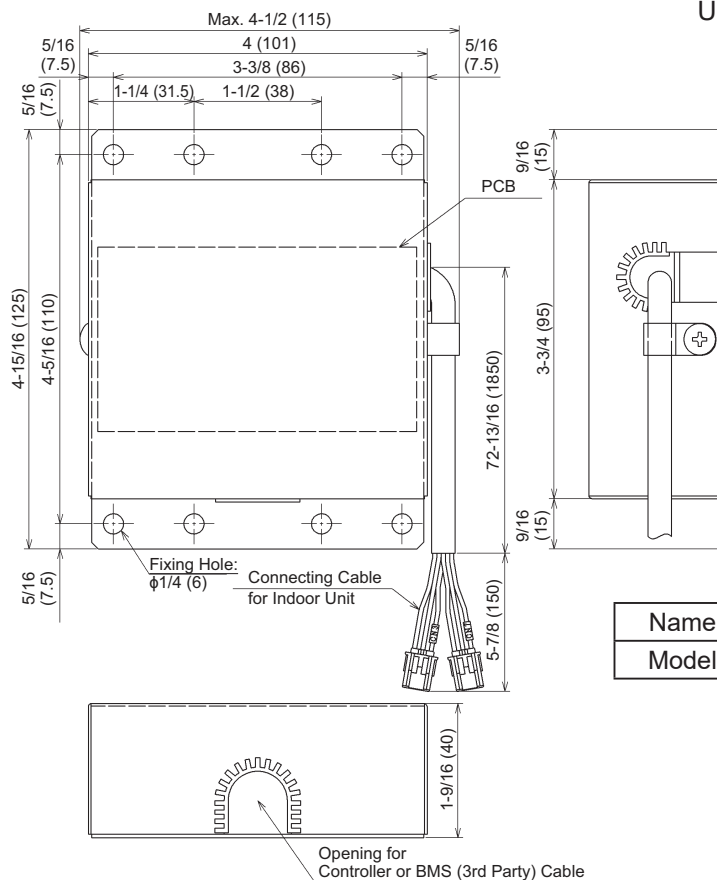

\*: Refer to Service Manual for connector numbers.

| Item                          | Signal   | Description   | Specifications   |
|-------------------------------|----------|---|--|
| Third Party Controller or BMS | Input 1  | Input level signal or pulse signal for voltage from the third party controller or BMS | Voltage: 12VDC, 10mA<br>Voltage: 24VDC, 10mA<br>Pulse Range: 500ms or more |
|                               | Input 2  |   |  |
| Third Party Controller or BMS | Output 1 | Output signal from the wired controller   | 24VDC<br>From 10mA to 1A   |
|                               | Output 2 |   |  |

Refer to the Indoor Unit Manual for Input/Output mode setting by the wired controller.



## 4. Selection Data

### 4.1 Selection Guide

Refer to Engineering Manual for the Outdoor Unit.

### 4.2 Capacity Table

#### 4.2.1 Cooling Capacity

##### ■ Air Handler with DX-Kit

| Model    | Indoor Air Temp<br>(°F WB)  | 61          |              | 63          |              | 65          |              | 67          |              | 69          |              | 71          |              | 73          |              |
|----------|-----------------------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|
|          | Outdoor Air<br>Temp (°F DB) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) |
| AP18BX21 | 70                          | 18.6        | 14.9         | 19.0        | 15.0         | 19.4        | 15.0         | 19.5        | 15.1         | 20.2        | 15.2         | 20.7        | 15.3         | 21.2        | 15.4         |
|          | 80                          | 18.1        | 14.6         | 18.4        | 14.7         | 18.7        | 14.7         | 18.9        | 14.9         | 19.6        | 14.9         | 20.1        | 15.0         | 20.6        | 15.2         |
|          | 95                          | 16.9        | 14.1         | 17.3        | 14.2         | 17.6        | 14.3         | 18.0        | 14.5         | 18.6        | 14.5         | 19.2        | 14.7         | 19.6        | 14.8         |
|          | 110                         | 12.1        | 10.4         | 11.9        | 11.8         | 11.6        | 9.7          | 11.4        | 11.4         | 11.5        | 11.5         | 11.6        | 9.5          | 11.7        | 11.7         |
|          | 114                         | 10.2        | 8.7          | 10.1        | 10.1         | 10.0        | 8.8          | 9.9         | 9.9          | 9.9         | 9.9          | 10.0        | 8.2          | 10.1        | 10.1         |
|          | 118                         | 8.3         | 7.2          | 8.3         | 8.3          | 8.3         | 7.3          | 8.3         | 8.3          | 8.4         | 8.4          | 8.4         | 7.1          | 8.4         | 8.4          |
| AP24BX21 | 70                          | 24.8        | 20.0         | 25.3        | 20.1         | 25.9        | 20.2         | 26.1        | 20.2         | 26.9        | 20.4         | 27.7        | 20.5         | 28.3        | 20.7         |
|          | 80                          | 24.1        | 19.6         | 24.5        | 19.7         | 24.9        | 19.8         | 25.2        | 20.0         | 26.1        | 20.0         | 26.8        | 20.2         | 27.4        | 20.4         |
|          | 95                          | 22.6        | 18.9         | 23.0        | 19.0         | 23.5        | 19.2         | 24.0        | 19.5         | 24.8        | 19.6         | 25.6        | 19.8         | 26.1        | 19.8         |
|          | 110                         | 16.2        | 15.5         | 15.8        | 15.2         | 15.5        | 15.0         | 15.2        | 14.9         | 15.3        | 14.9         | 15.5        | 15.0         | 15.5        | 15.1         |
|          | 114                         | 13.6        | 13.1         | 13.5        | 12.3         | 13.3        | 13.3         | 13.2        | 13.2         | 13.2        | 12.1         | 13.3        | 13.3         | 13.4        | 12.2         |
|          | 118                         | 11.1        | 11.1         | 11.1        | 10.4         | 11.1        | 11.1         | 11.1        | 10.3         | 11.2        | 10.2         | 11.2        | 11.2         | 11.2        | 10.5         |
| AP30BX21 | 70                          | 31.0        | 24.5         | 31.7        | 24.7         | 32.3        | 24.7         | 32.6        | 24.8         | 33.7        | 25.0         | 34.6        | 25.2         | 35.4        | 25.3         |
|          | 80                          | 30.2        | 24.0         | 30.7        | 24.2         | 31.2        | 24.2         | 31.6        | 24.4         | 32.6        | 24.5         | 33.5        | 24.7         | 34.3        | 24.9         |
|          | 95                          | 28.2        | 23.1         | 28.8        | 23.3         | 29.4        | 23.4         | 30.0        | 23.7         | 31.0        | 23.9         | 32.0        | 24.1         | 32.7        | 24.3         |
|          | 110                         | 16.2        | 15.3         | 19.8        | 18.8         | 19.4        | 18.6         | 19.0        | 18.5         | 19.2        | 18.6         | 19.3        | 18.7         | 19.4        | 18.8         |
|          | 114                         | 17.0        | 17.0         | 16.8        | 16.8         | 16.7        | 15.1         | 16.5        | 16.5         | 16.6        | 15.0         | 16.7        | 16.7         | 16.8        | 16.8         |
|          | 118                         | 13.8        | 13.8         | 13.9        | 12.6         | 13.9        | 12.8         | 13.9        | 13.9         | 14.0        | 13.2         | 14.0        | 14.0         | 14.0        | 13.3         |
| AP36BX21 | 70                          | 37.2        | 30.1         | 38.0        | 30.3         | 38.8        | 30.4         | 39.1        | 30.5         | 40.4        | 30.8         | 41.5        | 31.0         | 42.5        | 31.2         |
|          | 80                          | 36.2        | 29.5         | 36.8        | 29.7         | 37.4        | 29.8         | 37.9        | 30.1         | 39.1        | 30.2         | 40.2        | 30.5         | 41.2        | 30.7         |
|          | 95                          | 33.8        | 28.5         | 34.6        | 28.7         | 35.3        | 28.9         | 36.0        | 29.3         | 37.2        | 29.5         | 38.4        | 29.8         | 39.2        | 30.0         |
|          | 110                         | 24.2        | 23.4         | 23.8        | 23.0         | 23.3        | 22.7         | 22.8        | 22.6         | 23.0        | 22.6         | 23.2        | 22.8         | 23.3        | 22.9         |
|          | 114                         | 20.4        | 20.4         | 20.2        | 20.2         | 20.0        | 20.0         | 19.7        | 19.7         | 19.9        | 19.9         | 20.0        | 20.0         | 20.1        | 20.1         |
|          | 118                         | 16.6        | 16.6         | 16.6        | 16.6         | 16.7        | 16.7         | 16.7        | 16.7         | 16.7        | 16.7         | 16.8        | 16.8         | 16.8        | 16.8         |
| AP36CX21 | 70                          | 37.2        | 29.9         | 38.0        | 30.1         | 38.8        | 30.2         | 39.1        | 30.4         | 40.4        | 30.6         | 41.5        | 30.8         | 42.5        | 31.0         |
|          | 80                          | 36.2        | 29.4         | 36.8        | 29.5         | 37.4        | 29.6         | 37.9        | 29.9         | 39.1        | 30.0         | 40.2        | 30.3         | 41.2        | 30.6         |
|          | 95                          | 33.8        | 28.3         | 34.6        | 28.5         | 35.3        | 28.7         | 36.0        | 29.1         | 37.2        | 29.3         | 38.4        | 29.5         | 39.2        | 29.8         |
|          | 110                         | 24.2        | 23.2         | 23.8        | 22.9         | 23.3        | 22.6         | 22.8        | 22.4         | 23.0        | 22.4         | 23.2        | 22.6         | 23.3        | 22.7         |
|          | 114                         | 20.4        | 20.3         | 20.2        | 20.1         | 20.0        | 20.0         | 19.7        | 19.7         | 19.9        | 19.9         | 20.0        | 20.0         | 20.1        | 20.1         |
|          | 118                         | 16.6        | 16.1         | 16.6        | 16.1         | 16.7        | 16.7         | 16.7        | 16.3         | 16.7        | 16.7         | 16.8        | 16.5         | 16.8        | 16.8         |

TC: Total Capacity

SHC: Sensible Heat Capacity

Refer to Outdoor Unit Capacity Tables as actual performance data affected by indoor and outdoor unit combination.

# SELECTION DATA

| Model    | Indoor Air Temp<br>(°F WB)  | 61          |              | 63          |              | 65          |              | 67          |              | 69          |              | 71          |              | 73          |              |
|----------|-----------------------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|-------------|--------------|
|          | Outdoor Air<br>Temp (°F DB) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) | TC<br>(MBH) | SHC<br>(MBH) |
| AP48CX21 | 70                          | 49.6        | 39.6         | 50.6        | 39.9         | 51.7        | 39.9         | 52.1        | 40.1         | 53.9        | 40.4         | 55.3        | 40.7         | 56.6        | 40.9         |
|          | 80                          | 48.3        | 38.8         | 49.0        | 39.0         | 49.8        | 39.1         | 50.5        | 39.5         | 52.2        | 39.6         | 53.6        | 40.0         | 54.9        | 40.3         |
|          | 95                          | 45.1        | 37.4         | 46.1        | 37.7         | 47.0        | 37.9         | 48.0        | 38.5         | 49.6        | 38.7         | 51.2        | 39.0         | 52.2        | 39.3         |
|          | 110                         | 32.3        | 30.8         | 31.7        | 30.3         | 31.0        | 29.8         | 30.4        | 29.6         | 30.6        | 29.6         | 30.9        | 29.9         | 31.1        | 29.9         |
|          | 114                         | 27.2        | 27.2         | 26.9        | 26.9         | 26.6        | 26.6         | 26.3        | 25.1         | 26.5        | 26.4         | 26.6        | 26.6         | 26.8        | 25.8         |
|          | 118                         | 22.1        | 22.1         | 22.2        | 20.9         | 22.2        | 22.2         | 22.2        | 21.0         | 22.3        | 20.9         | 22.4        | 22.4         | 22.4        | 21.1         |
| AP48DX21 | 70                          | 49.6        | 40.4         | 50.6        | 40.8         | 51.7        | 40.9         | 52.1        | 41.1         | 53.9        | 41.4         | 55.3        | 41.8         | 56.6        | 42.0         |
|          | 80                          | 48.3        | 39.7         | 49.0        | 40.0         | 49.8        | 40.1         | 50.5        | 40.5         | 52.2        | 40.6         | 53.6        | 41.1         | 54.9        | 41.4         |
|          | 95                          | 45.1        | 38.3         | 46.1        | 38.7         | 47.0        | 38.9         | 48.0        | 39.5         | 49.6        | 39.8         | 51.2        | 40.1         | 52.2        | 40.4         |
|          | 110                         | 32.3        | 31.4         | 31.7        | 31.0         | 31.0        | 30.6         | 30.4        | 30.4         | 30.6        | 30.4         | 30.9        | 30.8         | 31.1        | 30.9         |
|          | 114                         | 27.2        | 27.2         | 26.9        | 26.9         | 26.6        | 26.6         | 26.3        | 26.3         | 26.5        | 26.5         | 26.6        | 26.6         | 26.8        | 26.8         |
|          | 118                         | 22.1        | 22.1         | 22.2        | 22.2         | 22.2        | 22.2         | 22.2        | 22.2         | 22.3        | 22.3         | 22.4        | 22.4         | 22.4        | 22.4         |
| AP60CX21 | 70                          | 62.0        | 50.4         | 63.3        | 50.8         | 64.7        | 51.0         | 65.2        | 51.2         | 67.4        | 51.7         | 69.2        | 52.1         | 70.8        | 52.3         |
|          | 80                          | 60.4        | 49.5         | 61.3        | 49.9         | 62.3        | 50.0         | 63.1        | 50.5         | 65.2        | 50.7         | 67.1        | 51.2         | 68.6        | 51.6         |
|          | 95                          | 56.4        | 47.7         | 57.6        | 48.2         | 58.8        | 48.5         | 60.0        | 49.2         | 62.0        | 49.6         | 64.0        | 50.0         | 65.3        | 50.3         |
|          | 110                         | 40.4        | 39.2         | 39.6        | 38.7         | 38.8        | 38.1         | 38.0        | 37.9         | 38.3        | 37.9         | 38.7        | 38.3         | 38.9        | 38.4         |
|          | 114                         | 34.0        | 34.0         | 33.7        | 33.7         | 33.3        | 33.3         | 32.9        | 32.9         | 33.1        | 33.1         | 33.3        | 33.3         | 33.5        | 33.5         |
|          | 118                         | 27.7        | 27.7         | 27.7        | 27.7         | 27.8        | 27.8         | 27.8        | 27.8         | 27.9        | 27.9         | 28.0        | 28.0         | 28.1        | 28.1         |
| AP60DX21 | 70                          | 62.0        | 50.5         | 63.3        | 50.9         | 64.7        | 51.1         | 65.2        | 51.4         | 67.4        | 51.7         | 69.2        | 52.2         | 70.8        | 52.5         |
|          | 80                          | 60.4        | 49.6         | 61.3        | 50.0         | 62.3        | 50.1         | 63.1        | 50.6         | 65.2        | 50.8         | 67.1        | 51.3         | 68.6        | 51.8         |
|          | 95                          | 56.4        | 47.9         | 57.6        | 48.3         | 58.8        | 48.7         | 60.0        | 49.3         | 62.0        | 49.7         | 64.0        | 50.1         | 65.3        | 50.5         |
|          | 110                         | 40.4        | 39.3         | 39.6        | 38.7         | 38.8        | 38.2         | 38.0        | 38.0         | 38.3        | 38.0         | 38.7        | 38.4         | 38.9        | 38.5         |
|          | 114                         | 34.0        | 34.0         | 33.7        | 33.7         | 33.3        | 33.3         | 32.9        | 32.9         | 33.1        | 33.1         | 33.3        | 33.3         | 33.5        | 33.5         |
|          | 118                         | 27.7        | 27.7         | 27.7        | 27.7         | 27.8        | 27.8         | 27.8        | 27.8         | 27.9        | 27.9         | 28.0        | 28.0         | 28.1        | 28.1         |
| AP60DX22 | 70                          | 62.0        | 50.5         | 63.3        | 51.0         | 64.7        | 51.1         | 65.2        | 51.0         | 67.4        | 51.8         | 69.2        | 52.2         | 70.8        | 52.5         |
|          | 80                          | 60.4        | 49.6         | 61.3        | 50.0         | 62.3        | 50.1         | 63.1        | 50.3         | 65.2        | 50.8         | 67.1        | 51.3         | 68.6        | 51.8         |
|          | 95                          | 56.4        | 47.9         | 57.6        | 48.3         | 58.8        | 48.6         | 60.0        | 49.0         | 62.0        | 49.7         | 64.0        | 50.1         | 65.3        | 50.5         |
|          | 110                         | 40.4        | 39.3         | 39.6        | 38.8         | 38.8        | 38.2         | 38.0        | 37.9         | 38.3        | 38.0         | 38.7        | 38.5         | 38.9        | 38.6         |
|          | 114                         | 34.0        | 34.0         | 33.7        | 33.7         | 33.3        | 33.3         | 32.9        | 32.9         | 33.1        | 33.1         | 33.3        | 33.3         | 33.5        | 33.5         |
|          | 118                         | 27.7        | 27.7         | 27.7        | 27.7         | 27.8        | 27.8         | 27.8        | 27.8         | 27.9        | 27.9         | 28.0        | 28.0         | 28.1        | 28.1         |

TC: Total Capacity

SHC: Sensible Heat Capacity

Refer to Outdoor Unit Capacity Tables as actual performance data affected by indoor and outdoor unit combination.



## 4.2.2 Heating Capacity

## ■ Air Handler with DX-Kit

| Model    | Indoor Air Temp<br>(°F DB)  | 63          | 66          | 68          | 70          | 74          | 77          |
|----------|-----------------------------|-------------|-------------|-------------|-------------|-------------|-------------|
|          | Outdoor Air<br>Temp (°F WB) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) |
| AP18BX21 | 21                          | 15.7        | 15.7        | 15.7        | 15.8        | 15.6        | 15.5        |
|          | 25                          | 16.5        | 16.5        | 16.5        | 16.5        | 16.3        | 16.1        |
|          | 29                          | 17.3        | 17.3        | 17.3        | 17.3        | 17.0        | 16.7        |
|          | 33                          | 18.1        | 18.1        | 18.1        | 18.1        | 17.7        | 17.4        |
|          | 37                          | 18.9        | 18.9        | 18.9        | 18.8        | 18.4        | 18.0        |
|          | 41                          | 19.7        | 19.6        | 19.6        | 19.6        | 19.1        | 18.7        |
|          | 43                          | 20.1        | 20.0        | 20.0        | 20.0        | 19.4        | 19.0        |
|          | 47                          | 20.8        | 20.8        | 20.8        | 20.8        | 20.0        | 19.0        |
|          | 51                          | 21.6        | 21.6        | 21.6        | 21.4        | 20.0        | 19.0        |
|          | 55                          | 22.7        | 22.4        | 21.9        | 21.4        | 20.0        | 19.0        |
|          | 59                          | 22.7        | 22.4        | 21.9        | 21.4        | 20.0        | 19.0        |
| AP24BX21 | 21                          | 21.2        | 21.2        | 21.3        | 21.3        | 21.0        | 20.9        |
|          | 25                          | 22.3        | 22.3        | 22.3        | 22.3        | 22.0        | 21.7        |
|          | 29                          | 23.4        | 23.3        | 23.4        | 23.4        | 22.9        | 22.6        |
|          | 33                          | 24.4        | 24.4        | 24.4        | 24.4        | 23.9        | 23.5        |
|          | 37                          | 25.5        | 25.5        | 25.4        | 25.4        | 24.8        | 24.3        |
|          | 41                          | 26.5        | 26.5        | 26.5        | 26.5        | 25.7        | 25.2        |
|          | 43                          | 27.1        | 27.0        | 27.0        | 27.0        | 26.2        | 25.6        |
|          | 47                          | 28.1        | 28.1        | 28.1        | 28.0        | 27.0        | 25.6        |
|          | 51                          | 29.2        | 29.2        | 29.1        | 28.8        | 27.0        | 25.6        |
|          | 55                          | 30.6        | 30.2        | 29.5        | 28.8        | 27.0        | 25.6        |
|          | 59                          | 30.6        | 30.2        | 29.5        | 28.8        | 27.0        | 25.6        |
| AP30BX21 | 21                          | 26.7        | 26.7        | 26.8        | 26.8        | 26.5        | 26.3        |
|          | 25                          | 28.1        | 28.1        | 28.1        | 28.1        | 27.7        | 27.4        |
|          | 29                          | 29.4        | 29.4        | 29.4        | 29.4        | 28.9        | 28.5        |
|          | 33                          | 30.7        | 30.7        | 30.7        | 30.7        | 30.1        | 29.5        |
|          | 37                          | 32.1        | 32.1        | 32.0        | 32.0        | 31.2        | 30.6        |
|          | 41                          | 33.4        | 33.4        | 33.4        | 33.3        | 32.4        | 31.7        |
|          | 43                          | 34.1        | 34.0        | 34.0        | 34.0        | 33.0        | 32.3        |
|          | 47                          | 35.4        | 35.4        | 35.3        | 35.3        | 34.0        | 32.3        |
|          | 51                          | 36.8        | 36.7        | 36.7        | 36.3        | 34.0        | 32.3        |
|          | 55                          | 38.6        | 38.1        | 37.2        | 36.3        | 34.0        | 32.3        |
|          | 59                          | 38.6        | 38.1        | 37.2        | 36.3        | 34.0        | 32.3        |
| AP36BX21 | 21                          | 31.4        | 31.4        | 31.5        | 31.5        | 31.2        | 30.9        |
|          | 25                          | 33.0        | 33.0        | 33.0        | 33.1        | 32.6        | 32.2        |
|          | 29                          | 34.6        | 34.6        | 34.6        | 34.6        | 34.0        | 33.5        |
|          | 33                          | 36.2        | 36.1        | 36.1        | 36.1        | 35.4        | 34.7        |
|          | 37                          | 37.8        | 37.7        | 37.7        | 37.7        | 36.7        | 36.0        |
|          | 41                          | 39.3        | 39.3        | 39.2        | 39.2        | 38.1        | 37.3        |
|          | 43                          | 40.1        | 40.1        | 40.0        | 40.0        | 38.8        | 38.0        |
|          | 47                          | 41.7        | 41.6        | 41.6        | 41.5        | 40.0        | 38.0        |
|          | 51                          | 43.3        | 43.2        | 43.1        | 42.7        | 40.0        | 38.0        |
|          | 55                          | 45.4        | 44.8        | 43.8        | 42.7        | 40.0        | 38.0        |
|          | 59                          | 45.4        | 44.8        | 43.8        | 42.7        | 40.0        | 38.0        |
| AP36CX21 | 21                          | 31.4        | 31.4        | 31.5        | 31.5        | 31.2        | 30.9        |
|          | 25                          | 33.0        | 33.0        | 33.0        | 33.1        | 32.6        | 32.2        |
|          | 29                          | 34.6        | 34.6        | 34.6        | 34.6        | 34.0        | 33.5        |
|          | 33                          | 36.2        | 36.1        | 36.1        | 36.1        | 35.4        | 34.7        |
|          | 37                          | 37.8        | 37.7        | 37.7        | 37.7        | 36.7        | 36.0        |
|          | 41                          | 39.3        | 39.3        | 39.2        | 39.2        | 38.1        | 37.3        |
|          | 43                          | 40.1        | 40.1        | 40.0        | 40.0        | 38.8        | 38.0        |
|          | 47                          | 41.7        | 41.6        | 41.6        | 41.5        | 40.0        | 38.0        |
|          | 51                          | 43.3        | 43.2        | 43.1        | 42.7        | 40.0        | 38.0        |
|          | 55                          | 45.4        | 44.8        | 43.8        | 42.7        | 40.0        | 38.0        |
|          | 59                          | 45.4        | 44.8        | 43.8        | 42.7        | 40.0        | 38.0        |

TC: Total Capacity

Refer to Outdoor Unit Capacity Tables as actual performance data affected by indoor and outdoor unit combination.

# SELECTION DATA

| Model    | Indoor Air Temp<br>(°F DB)  | 63          | 66          | 68          | 70          | 74          | 77          |
|----------|-----------------------------|-------------|-------------|-------------|-------------|-------------|-------------|
|          | Outdoor Air<br>Temp (°F WB) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) | TC<br>(MBH) |
| AP48CX21 | 21                          | 42.4        | 42.4        | 42.5        | 42.6        | 42.1        | 41.7        |
|          | 25                          | 44.6        | 44.6        | 44.6        | 44.6        | 44.0        | 43.5        |
|          | 29                          | 46.7        | 46.7        | 46.7        | 46.7        | 45.8        | 45.2        |
|          | 33                          | 48.8        | 48.8        | 48.8        | 48.8        | 47.7        | 46.9        |
|          | 37                          | 51.0        | 50.9        | 50.9        | 50.9        | 49.6        | 48.6        |
|          | 41                          | 53.1        | 53.0        | 53.0        | 53.0        | 51.5        | 50.4        |
|          | 43                          | 54.2        | 54.1        | 54.0        | 54.0        | 52.4        | 51.2        |
|          | 47                          | 56.3        | 56.2        | 56.1        | 56.1        | 54.0        | 51.2        |
|          | 51                          | 58.4        | 58.3        | 58.2        | 57.7        | 54.0        | 51.2        |
|          | 55                          | 61.2        | 60.5        | 59.1        | 57.7        | 54.0        | 51.2        |
|          | 59                          | 61.2        | 60.5        | 59.1        | 57.7        | 54.0        | 51.2        |
| AP48DX21 | 21                          | 42.4        | 42.4        | 42.5        | 42.6        | 42.1        | 41.7        |
|          | 25                          | 44.6        | 44.6        | 44.6        | 44.6        | 44.0        | 43.5        |
|          | 29                          | 46.7        | 46.7        | 46.7        | 46.7        | 45.8        | 45.2        |
|          | 33                          | 48.8        | 48.8        | 48.8        | 48.8        | 47.7        | 46.9        |
|          | 37                          | 51.0        | 50.9        | 50.9        | 50.9        | 49.6        | 48.6        |
|          | 41                          | 53.1        | 53.0        | 53.0        | 53.0        | 51.5        | 50.4        |
|          | 43                          | 54.2        | 54.1        | 54.0        | 54.0        | 52.4        | 51.2        |
|          | 47                          | 56.3        | 56.2        | 56.1        | 56.1        | 54.0        | 51.2        |
|          | 51                          | 58.4        | 58.3        | 58.2        | 57.7        | 54.0        | 51.2        |
|          | 55                          | 61.2        | 60.5        | 59.1        | 57.7        | 54.0        | 51.2        |
|          | 59                          | 61.2        | 60.5        | 59.1        | 57.7        | 54.0        | 51.2        |
| AP60CX21 | 21                          | 50.3        | 50.3        | 50.4        | 50.4        | 49.9        | 49.5        |
|          | 25                          | 52.8        | 52.8        | 52.9        | 52.9        | 52.1        | 51.5        |
|          | 29                          | 55.4        | 55.3        | 55.4        | 55.4        | 54.3        | 53.6        |
|          | 33                          | 57.9        | 57.8        | 57.8        | 57.8        | 56.6        | 55.6        |
|          | 37                          | 60.4        | 60.3        | 60.3        | 60.3        | 58.8        | 57.7        |
|          | 41                          | 62.9        | 62.8        | 62.8        | 62.8        | 61.0        | 59.7        |
|          | 43                          | 64.2        | 64.1        | 64.0        | 64.0        | 62.1        | 60.7        |
|          | 47                          | 66.7        | 66.6        | 66.5        | 66.5        | 64.0        | 60.7        |
|          | 51                          | 69.2        | 69.1        | 69.0        | 68.3        | 64.0        | 60.7        |
|          | 55                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |
|          | 59                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |
| AP60DX21 | 21                          | 50.3        | 50.3        | 50.4        | 50.4        | 49.9        | 49.5        |
|          | 25                          | 52.8        | 52.8        | 52.9        | 52.9        | 52.1        | 51.5        |
|          | 29                          | 55.4        | 55.3        | 55.4        | 55.4        | 54.3        | 53.6        |
|          | 33                          | 57.9        | 57.8        | 57.8        | 57.8        | 56.6        | 55.6        |
|          | 37                          | 60.4        | 60.3        | 60.3        | 60.3        | 58.8        | 57.7        |
|          | 41                          | 62.9        | 62.8        | 62.8        | 62.8        | 61.0        | 59.7        |
|          | 43                          | 64.2        | 64.1        | 64.0        | 64.0        | 62.1        | 60.7        |
|          | 47                          | 66.7        | 66.6        | 66.5        | 66.5        | 64.0        | 60.7        |
|          | 51                          | 69.2        | 69.1        | 69.0        | 68.3        | 64.0        | 60.7        |
|          | 55                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |
|          | 59                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |
| AP60DX22 | 21                          | 50.3        | 50.3        | 50.4        | 50.4        | 49.9        | 49.5        |
|          | 25                          | 52.8        | 52.8        | 52.9        | 52.9        | 52.1        | 51.5        |
|          | 29                          | 55.4        | 55.3        | 55.4        | 55.4        | 54.3        | 53.6        |
|          | 33                          | 57.9        | 57.8        | 57.8        | 57.8        | 56.6        | 55.6        |
|          | 37                          | 60.4        | 60.3        | 60.3        | 60.3        | 58.8        | 57.7        |
|          | 41                          | 62.9        | 62.8        | 62.8        | 62.8        | 61.0        | 59.7        |
|          | 43                          | 64.2        | 64.1        | 64.0        | 64.0        | 62.1        | 60.7        |
|          | 47                          | 66.7        | 66.6        | 66.5        | 66.5        | 64.0        | 60.7        |
|          | 51                          | 69.2        | 69.1        | 69.0        | 68.3        | 64.0        | 60.7        |
|          | 55                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |
|          | 59                          | 72.6        | 71.7        | 70.0        | 68.3        | 64.0        | 60.7        |

TC: Total Capacity

Refer to Outdoor Unit Capacity Tables as actual performance data affected by indoor and outdoor unit combination.

## Important Notices about Indoor Units Produced in September 2019 or Later\*<sup>1</sup>


\*<sup>1</sup> Refer to Technical Bulletin for applicable serial numbers.




 



 


 

 

 


 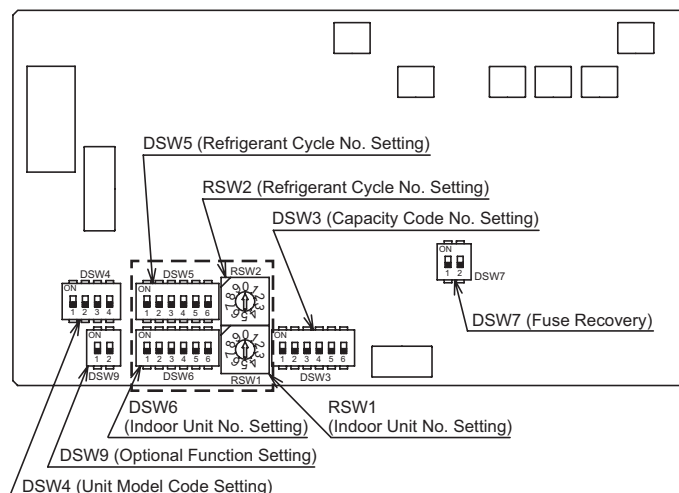


 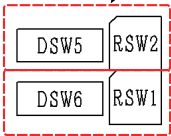


 

 

 


 

 

 







### 2. Indoor Unit Type

#### 2.11.4 Wiring Diagram (Continued)

Control PCB for the following models are changed and layout of rotary switch and DIP switch settings are changed. Due to this change, wiring diagrams are also changed.

  
- 4-Way Cassette [ (H,Y,C)IC4008 to 048B21S ]
- 2-Way Cassette [ (H,Y,C)IC2018, 024B21S ]
- 1-Way Cassette [ (H,Y,C)IC1006 to 015B21S ]
- 4-Way Cassette Mini [ (H,Y,C)ICM008 to 018B21S ]
- Ceiling Suspended [ (H,Y,C)ICS015 to 036B21S ]




| Produced in August 2019 or Earlier  | Produced in September 2019 or Later   |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
|---|---|--|------------------------|---|--|--|---|--|--|---|-------------------|--------------------|------------------------|---|--|--|---|--|--|
| <div>Arrangement of Rotary Switch and DIP Switch</div> <div>Refrigerant Cycle No. Setting (Yellow)</div> <div></div> <div>Unit No. Setting (Red)</div>   | <div>Arrangement of Rotary Switch and DIP Switch</div> <div>Refrigerant Cycle No. Setting (Yellow)</div> <div></div> <div>Unit No. Setting (Red)</div> |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Unit No. Setting (RSW1 and DSW6)</div> <table><tr><th>DSW6 (Tens Digit)</th><th>RSW1 (Units Digit)</th><th>Ex.) Set at No.16 Unit</th></tr><tr><td></td><td><div>Setting Position<br/></div><div>Set by inserting slotted screwdriver into the groove.</div></td><td><div>DSW6<br/></div><div>Set No.1 Pin at ON side</div></td></tr><tr><td colspan="3"><div>Before shipment, DSW6 and RSW1 are set at "0".</div><div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div></td></tr></table> <div><div>RSW1<br/></div><div>Set at "6"</div></div>        | DSW6 (Tens Digit)   | RSW1 (Units Digit)   | Ex.) Set at No.16 Unit |  | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div> | <div>DSW6<br/></div> <div>Set No.1 Pin at ON side</div> | <div>Before shipment, DSW6 and RSW1 are set at "0".</div> <div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div>  |  |  | <div>Unit No. Setting (RSW2 and DSW6)</div> <table><tr><th>DSW6 (Tens Digit)</th><th>RSW2 (Units Digit)</th><th>Ex.) Set at No.16 Unit</th></tr><tr><td></td><td><div>Setting Position<br/></div><div>Set by inserting slotted screwdriver into the groove.</div></td><td><div>DSW6<br/></div><div>Set No.1 Pin at ON side</div></td></tr><tr><td colspan="3"><div>Before shipment, DSW6 and RSW2 are set at "0".</div><div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div></td></tr></table> <div><div>RSW2<br/></div><div>Set at "6"</div></div>        | DSW6 (Tens Digit) | RSW2 (Units Digit) | Ex.) Set at No.16 Unit |  | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div> | <div>DSW6<br/></div> <div>Set No.1 Pin at ON side</div> | <div>Before shipment, DSW6 and RSW2 are set at "0".</div> <div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div>  |  |  |
| DSW6 (Tens Digit)   | RSW1 (Units Digit)  | Ex.) Set at No.16 Unit   |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
|    | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div>  | <div>DSW6<br/></div> <div>Set No.1 Pin at ON side</div>   |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Before shipment, DSW6 and RSW1 are set at "0".</div> <div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div>  |   |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| DSW6 (Tens Digit)   | RSW2 (Units Digit)  | Ex.) Set at No.16 Unit   |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
|    | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div>  | <div>DSW6<br/></div> <div>Set No.1 Pin at ON side</div> |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Before shipment, DSW6 and RSW2 are set at "0".</div> <div>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</div>  |   |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Refrigerant Cycle No. Setting (RSW2 and DSW5)</div> <table><tr><th>DSW5 (Tens Digit)</th><th>RSW2 (Units Digit)</th><th>Ex.) Set at No.5 Cycle</th></tr><tr><td></td><td><div>Setting Position<br/></div><div>Set by inserting slotted screwdriver into the groove.</div></td><td><div>DSW5<br/></div><div>Set All Pins OFF</div></td></tr><tr><td colspan="3"><div>Before shipment, DSW5 and RSW2 are set at "0".</div><div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div></td></tr></table> <div><div>RSW2<br/></div><div>Set at "5"</div></div> | DSW5 (Tens Digit)   | RSW2 (Units Digit)   | Ex.) Set at No.5 Cycle |  | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div> | <div>DSW5<br/></div> <div>Set All Pins OFF</div>        | <div>Before shipment, DSW5 and RSW2 are set at "0".</div> <div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div> |  |  | <div>Refrigerant Cycle No. Setting (RSW1 and DSW5)</div> <table><tr><th>DSW5 (Tens Digit)</th><th>RSW1 (Units Digit)</th><th>Ex.) Set at No.5 Cycle</th></tr><tr><td></td><td><div>Setting Position<br/></div><div>Set by inserting slotted screwdriver into the groove.</div></td><td><div>DSW5<br/></div><div>Set All Pins OFF</div></td></tr><tr><td colspan="3"><div>Before shipment, DSW5 and RSW1 are set at "0".</div><div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div></td></tr></table> <div><div>RSW1<br/></div><div>Set at "5"</div></div> | DSW5 (Tens Digit) | RSW1 (Units Digit) | Ex.) Set at No.5 Cycle |  | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div> | <div>DSW5<br/></div> <div>Set All Pins OFF</div>        | <div>Before shipment, DSW5 and RSW1 are set at "0".</div> <div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div> |  |  |
| DSW5 (Tens Digit)   | RSW2 (Units Digit)  | Ex.) Set at No.5 Cycle   |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
|    | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div>  | <div>DSW5<br/></div> <div>Set All Pins OFF</div>          |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Before shipment, DSW5 and RSW2 are set at "0".</div> <div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div>   |   |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| DSW5 (Tens Digit)   | RSW1 (Units Digit)  | Ex.) Set at No.5 Cycle   |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
|    | <div>Setting Position<br/></div> <div>Set by inserting slotted screwdriver into the groove.</div>  | <div>DSW5<br/></div> <div>Set All Pins OFF</div>        |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |
| <div>Before shipment, DSW5 and RSW1 are set at "0".</div> <div>For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0-63)</div>   |   |  |                        |   |  |  |   |  |  |   |                   |                    |                        |   |  |  |   |  |  |

## 4-Way Cassette Type Indoor Unit


Models: (H,Y,C)IC4008B21S, (H,Y,C)IC4012B21S, (H,Y,C)IC4015B21S, (H,Y,C)IC4018B21S, (H,Y,C)IC4024B21S, (H,Y,C)IC4030B21S, (H,Y,C)IC4036B21S and (H,Y,C)IC4048B21S with Decorative Panel P-AP160NA2

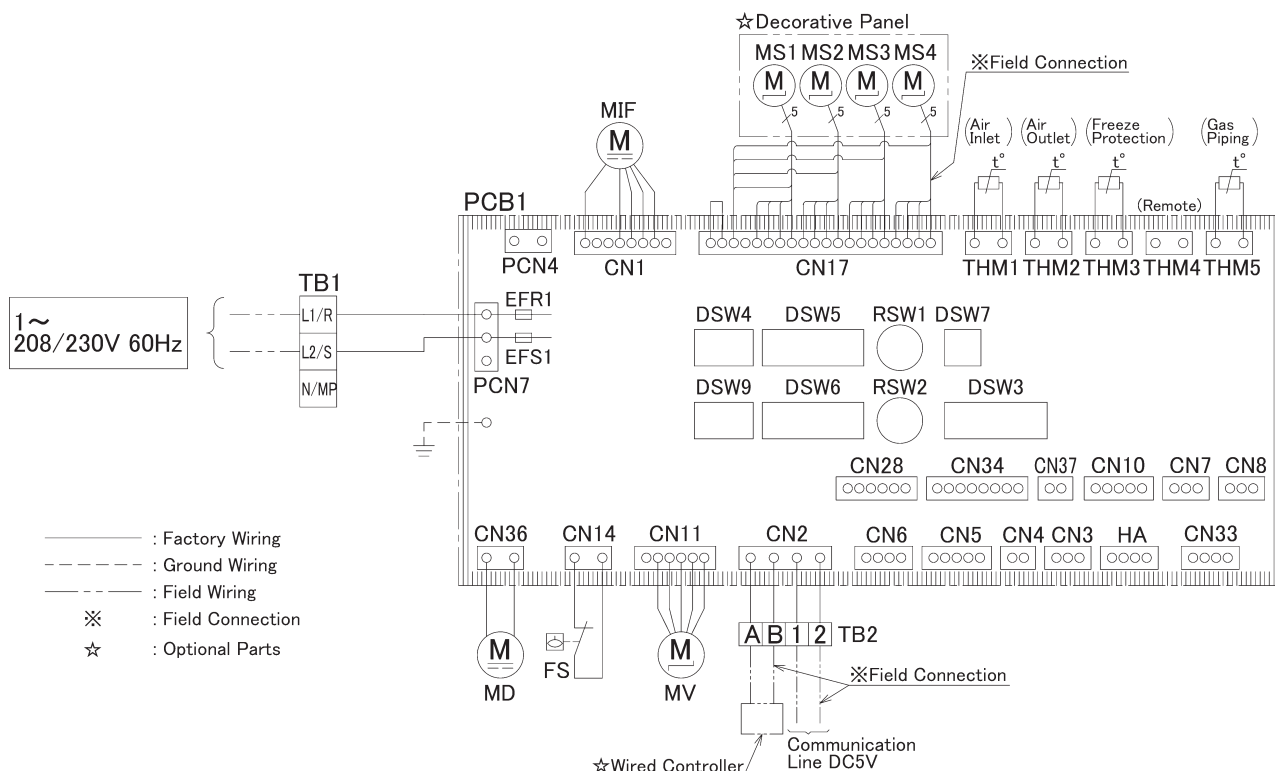

Electrical Control Box of Indoor Unit

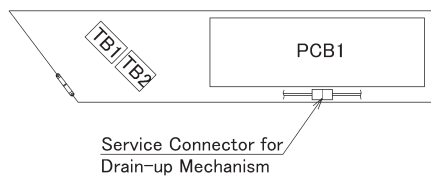

Printed Circuit Board

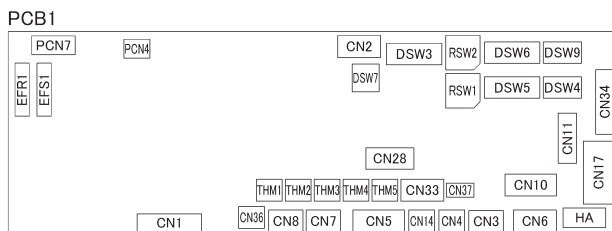


### NOTE:


1. All the field wiring and equipment must comply with local codes.

| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7,8                           | Optional Connector (For Signal Output)                       |
| CN33                            | Optional Connector (For Motion and Radiation Sensors)        |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFR1, EFS1                      | Fuse   |
| FS                              | Float Switch   |
| MIF                             | Motor for Indoor Fan   |
| MS1~4                           | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| MD                              | Motor for Drain-up Mechanism                                 |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1.2                           | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 10, 28, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |


Models: (H,Y,C)IC4008B21S, (H,Y,C)IC4012B21S, (H,Y,C)IC4015B21S, (H,Y,C)IC4018B21S,  
(H,Y,C)IC4024B21S, (H,Y,C)IC4030B21S, (H,Y,C)IC4036B21S and (H,Y,C)IC4048B21S  
with Decorative Panel P-AP160NAE1

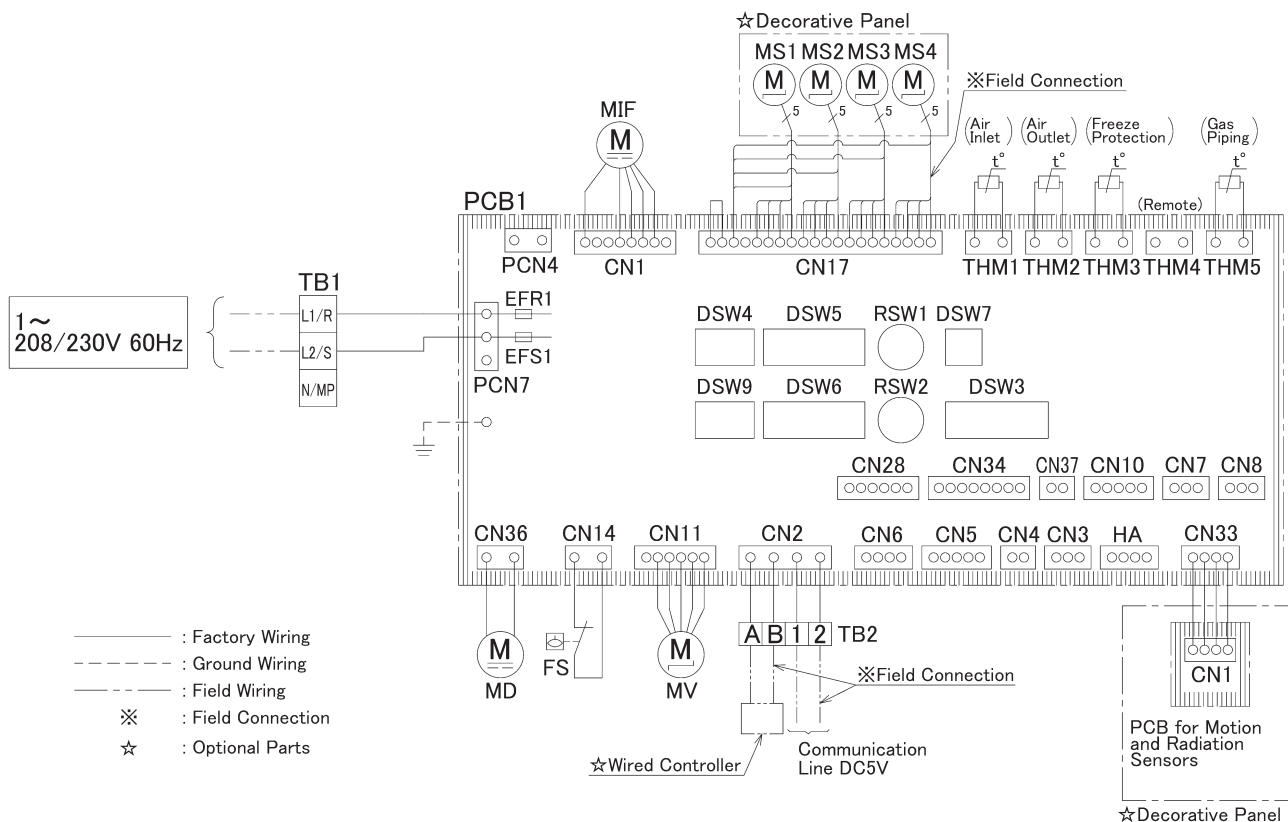

Electrical Control Box of Indoor Unit

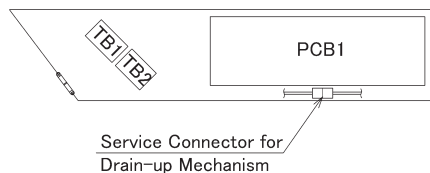

Printed Circuit Board

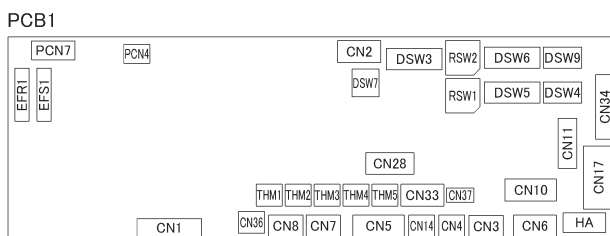


**NOTE:**


1. All the field wiring and equipment must comply with local codes.

| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7,8                           | Optional Connector (For Signal Output)                       |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFR1, EFS1                      | Fuse   |
| FS                              | Float Switch   |
| MIF                             | Motor for Indoor Fan   |
| MS1~4                           | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| MD                              | Motor for Drain-up Mechanism                                 |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1,2                           | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 10, 28, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |


# 2-Way Cassette Type Indoor Unit Models: (H,Y,C)IC2018B21S and (H,Y,C)IC2024B21S

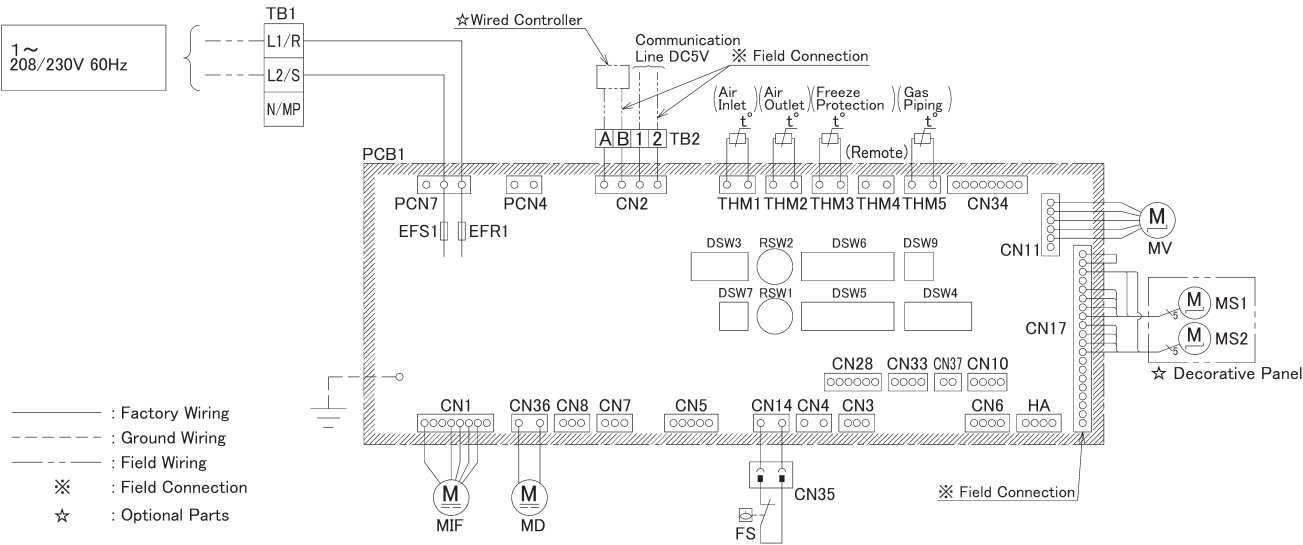

Printed Circuit Board

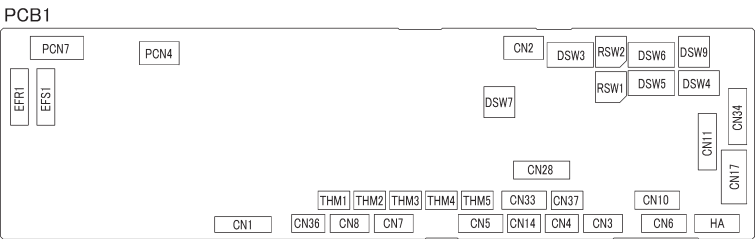

Electrical Control Box of Indoor Unit

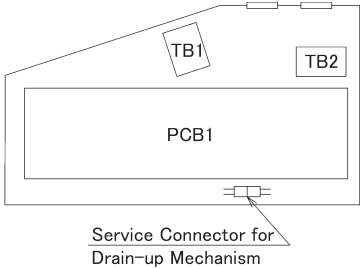


**NOTE:**

1. All the field wiring and equipment must comply with local codes.


| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7,8                           | Optional Connector (For Signal Output)                       |
| CN10                            | Optional Connector (For Motion Sensor)                       |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFR1, EFS1                      | Fuse   |
| MIF                             | Motor for Indoor Fan   |
| MS1, 2                          | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| MD                              | Motor for Drain-up Mechanism                                 |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1,2                           | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 28, 33, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |

## 1-Way Cassette Type Indoor Unit


Models: (H,Y,C)IC1006B21S, (H,Y,C)IC1008B21S, (H,Y,C)IC1012B21S and (H,Y,C)IC1015B21S

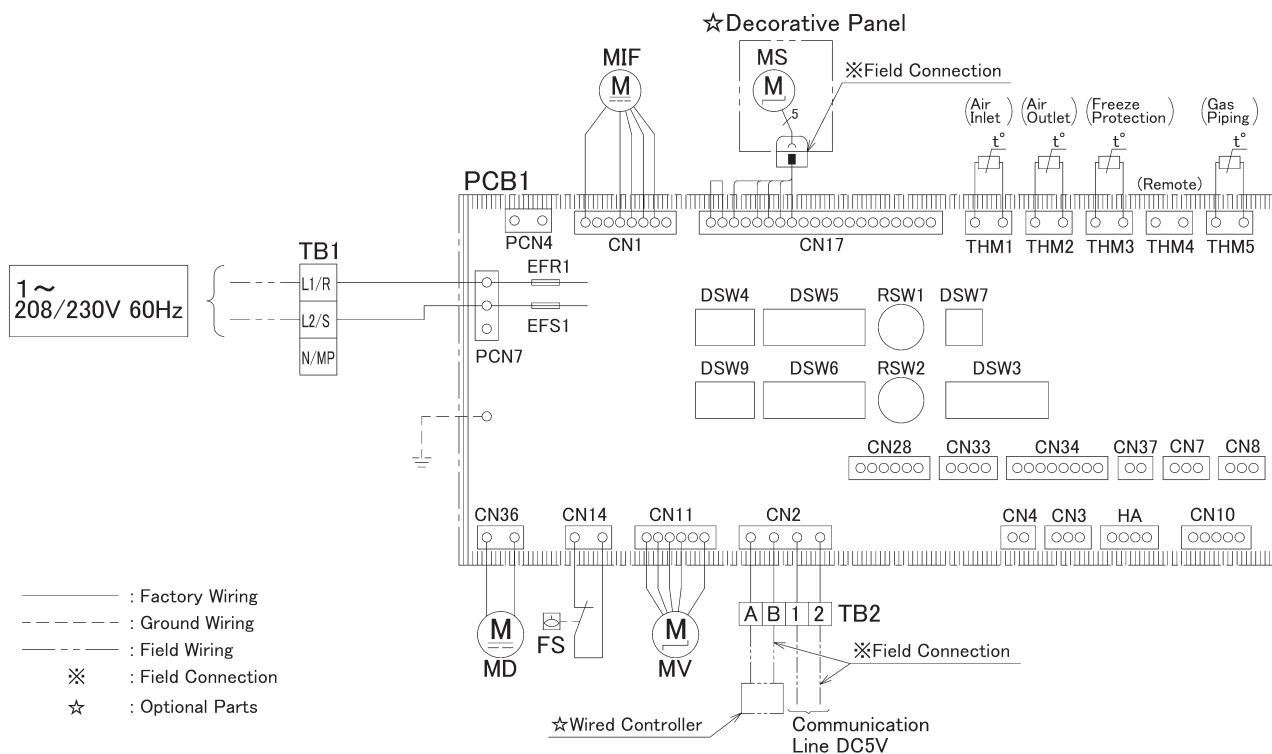

### Electrical Control Box of Indoor Unit

 

### Printed Circuit Board

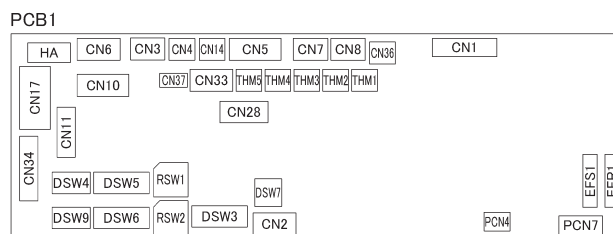


#### Note:

1. All the field wiring and equipment must comply with local codes.


| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7,8                           | Optional Connector (For Signal Output)                       |
| CN10                            | Optional Connector (For Motion Sensor)                       |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFR1, EFS1                      | Fuse   |
| FS                              | Float Switch   |
| MIF                             | Motor for Indoor Fan   |
| MS                              | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| MD                              | Motor for Drain-up Mechanism                                 |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1,2                           | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 28, 33, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |

## 4-Way Cassette Mini Type Indoor Unit


Models: (H,Y,C)ICM008B21S, (H,Y,C)ICM012B21S, (H,Y,C)ICM015B21S and (H,Y,C)ICM018B21S

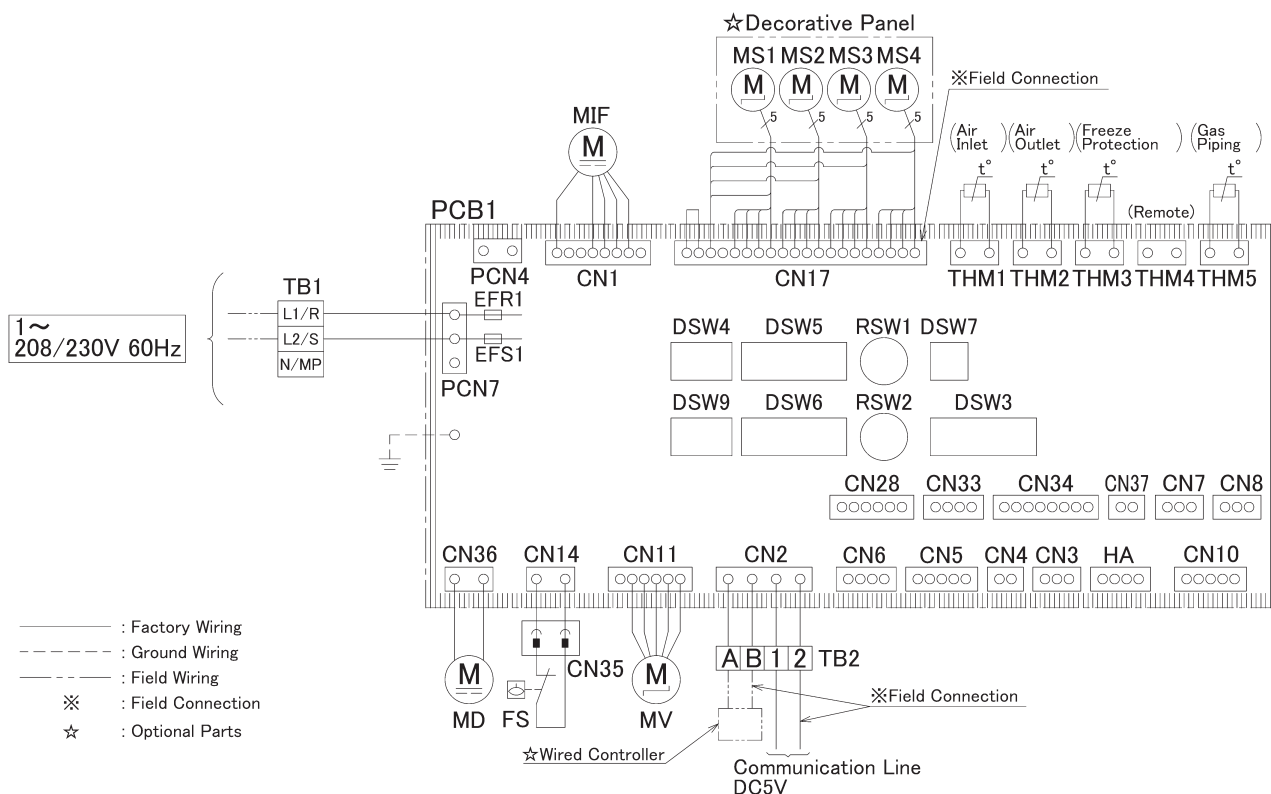

Electrical Control Box of Indoor Unit

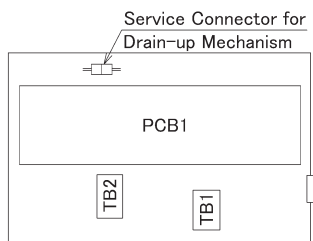

Printed Circuit Board

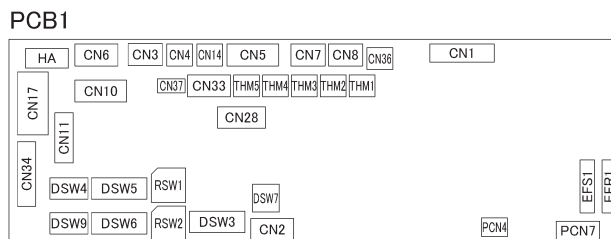

### NOTE:


1. All the field wiring and equipment must comply with local codes.

| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7,8                           | Optional Connector (For Signal Output)                       |
| CN10                            | Optional Connector (For Motion Sensor)                       |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFRI, EFS1                      | Fuse   |
| MIF                             | Motor for Indoor Fan   |
| MS1~4                           | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| MD                              | Motor for Drain-up Mechanism                                 |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1,2                           | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 28, 33, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |



## Ceiling Suspended Type Indoor Unit

Models: (H,Y,C)ICS015B21S, (H,Y,C)ICS024B21S, (H,Y,C)ICS030B21S and (H,Y,C)ICS036B21S

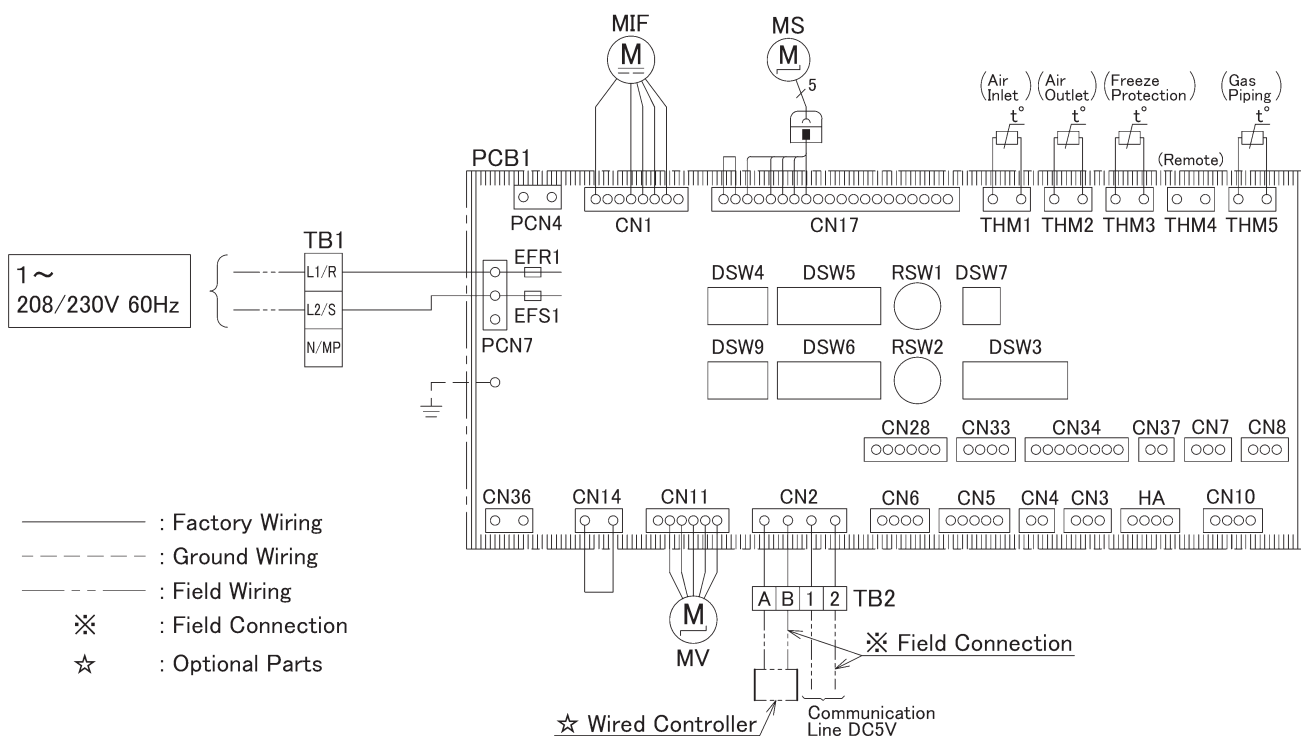


### Electrical Control Box of Indoor Unit



### Printed Circuit Board

#### PCB1

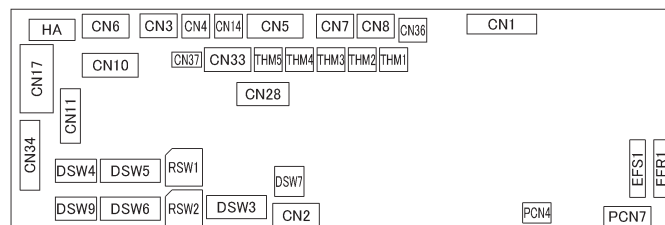

#### NOTE:

1. All the field wiring and equipment must comply with local codes.

| Mark                            | Name   |
|---------------------------------|--|
| CN3                             | Optional Connector (For Signal Input)                        |
| CN7, 8                          | Optional Connector (For Signal Output)                       |
| CN10                            | Optional Connector (For Motion Sensor)                       |
| CN14, 36                        | Optional Connector (For Drain Pump Kit)                      |
| DSW3, 4, 7, 9                   | DIP Switch for Setting                                       |
| EFRI, EFS1                      | Fuse   |
| MIF                             | Motor for Indoor Fan   |
| MS                              | Motor for Automatic Swing Louver                             |
| MV                              | Electronic Expansion Valve                                   |
| PCB1                            | Printed Circuit Board  |
| RSW1                            | Rotary Switch for Refrigerant Cycle No. Setting (Ones Digit) |
| DSW5                            | DIP Switch for Refrigerant Cycle No. Setting (Tens Digit)    |
| RSW2                            | Rotary Switch for Unit No. Setting (Ones Digit)              |
| DSW6                            | DIP Switch for Unit No. Setting (Tens Digit)                 |
| TB1, 2                          | Terminal Block   |
| THM1~3, 5                       | Thermistor   |
| THM4                            | Optional Connector (For Remote Temperature Sensor)           |
| CN4~6, 28, 33, 34, 37, HA, PCN4 | Reserved Connector on PCB                                    |

### 3. Optional Parts

#### 3.1 Line Up (Continued)


| Item No. | Optional Parts  | Adopting Unit Type                      | Adopting Model Name      | Optional Parts Model Name |
|----------|-----------------|---|--------------------------|---------------------------|
| 1        | Connector Cable | Ducted (Medium Static) [1st Generation] | (H,Y,C)IDM006 to 048B21S | PCC-CN8-H                 |
|          |                 | Ducted (Slim)                           | (H,Y,C)IDS006 to 018B21S |                           |
|          |                 | Ducted (EconoFresh)                     | (H,Y,C)IDM030 to 048B21E |                           |
|          |                 | Wall Mount                              | TIWM006 to 030B22S       |                           |
|          |                 | 2-Way Cassette                          | (H,Y,C)IC2018, 024B21S   |                           |
|          |                 | 4-Way Cassette Mini                     | (H,Y,C)ICM008 to 018B21S |                           |
|          |                 | 4-Way Cassette                          | (H,Y,C)IC4008 to 048B21S |                           |
|          |                 | 1-Way Cassette                          | (H,Y,C)IC1006 to 015B21S |                           |
|          |                 | Ceiling Suspended                       | (H,Y,C)ICS015 to 036B21S |                           |
| 2        | Connector Cable | Ducted (High Static) [1st Generation]   | (H,Y)IDH018 to 096B21S   | PCC-CN1925-H              |
|          |                 | Floor Exposed                           | (H,Y,C)IFE006 to 015B21S |                           |
|          |                 | Floor Concealed                         | (H,Y,C)IFC006 to 015B21S |                           |
|          |                 | DX-Kit for UPG VAH                      | EXV-018 to 060E          |                           |

## 1. Connector Cable: PCC-CN8-H

This optional connector is utilized to provide auxiliary heater signal output capability from indoor unit PCB connector (CN8) to PSC-5RA connector (CN7) for auxiliary heater installation. (System Parts: One set contains one connector cable.)

|         |                                       |
|---------|---------------------------------------|
| Name    | Connector Cable                       |
| Model   | PCC-CN8-H                             |
| Remarks | One set contains one connector cable. |

Connect the connector cable as shown below.

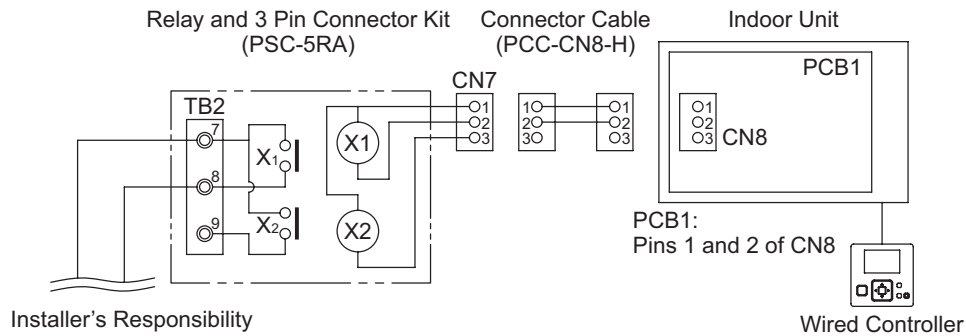


During installation, refer also to the “Installation and Maintenance Manual” for connecting indoor unit.

## 2. Connector Cable: PCC-CN1925-H

This optional connector is utilized to provide auxiliary heater signal output capability from indoor unit PCB connector (CN1925) to PSC-5RA connector (CN7) for auxiliary heater installation. (System Parts: One set contains one connector cable.)

|         |                                       |
|---------|---------------------------------------|
| Name    | Connector Cable                       |
| Model   | PCC-CN1925-H                          |
| Remarks | One set contains one connector cable. |

Connect the connector cable as shown below.

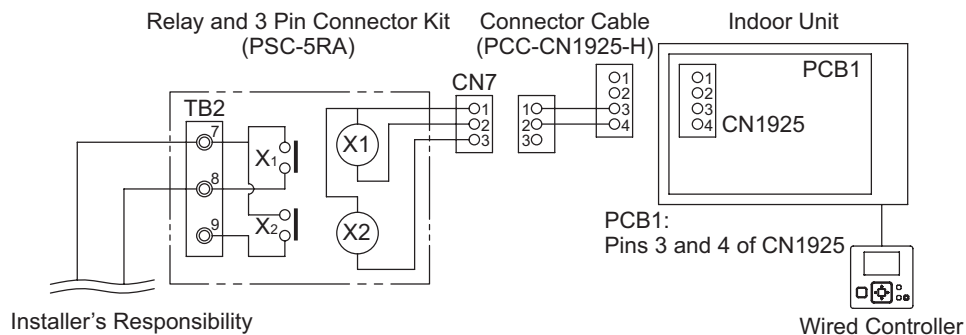

During installation, refer also to the “Installation and Maintenance Manual” for connecting indoor unit.

