

FOR OPERATION MANUAL

5. Operation Method (Continued)

Important Notices about Indoor Units Produced in September 2019 or Later*1

Read the following instructions before proceeding with operation and making any changes.

*1 Refer to Technical Bulletin for applicable new functions and serial numbers.

Setback operation, Dual Setpoint operation, and Auxiliary Heater (Baseboard Heater/Duct Heater) operation requires extra settings. Duct heater function is only available for the ducted type indoor units. Contact your distributor or contractor for details.

Emergency Heat Control


The display on the right indicates that emergency heat control is in progress.

This control is activated when a malfunction of the outdoor unit or communication failure between the indoor unit and outdoor unit occurs.

Heating by the auxiliary heater only is performed during this time, and normal operation can not be performed.

If problem still remains even after following the section "Troubleshooting," or other problems not mentioned in the previous issues occur, stop using the product and contact your distributor or contractor.


During Emergency Heat Control

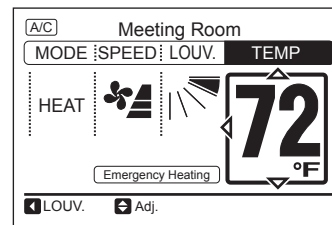

On/Off indicator flashes red.



“Emergency Heating” and “Alarm Code: 03” are indicated alternately.

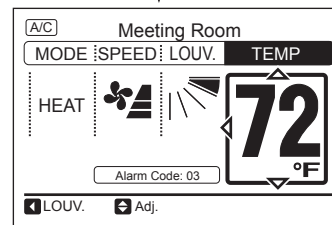

On/Off indicator flashes red.

