

MODEL: DXF-015A1

- 1 -

MODEL: DXF-030A1

- 2 -

MODEL: DXF-048A1

- 3 -

MODEL: DXF-096A1

- 4 -

MODEL: DXF-192A1


- 5 -

MODEL: DXF-288A1

- 6 -

LOCATION OF SPARE PARTS IN THE UNIT for DX-Kit (AHU Integration)
CONTROL BOX


- DXF-015A1
- DXF-030A1
- DXF-048A1
- DXF-096A1
- DXF-192A1
- DXF-288A1

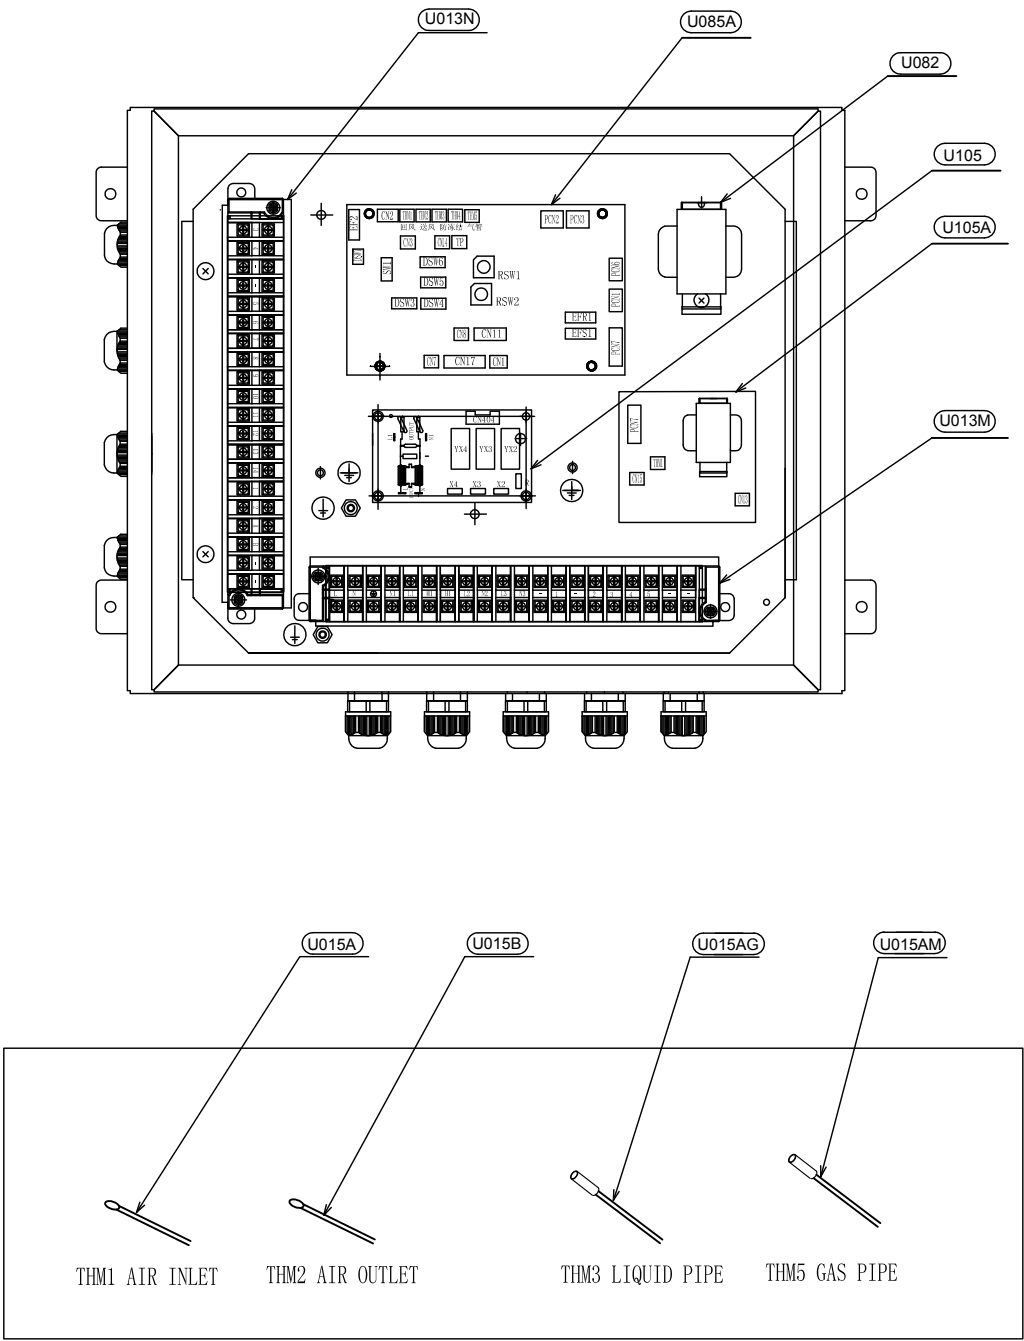

LOCATION OF SPARE PARTS IN THE UNIT for DX-Kit (AHU Integration)

EXPANSION VALVE BOX

DXF-015A1

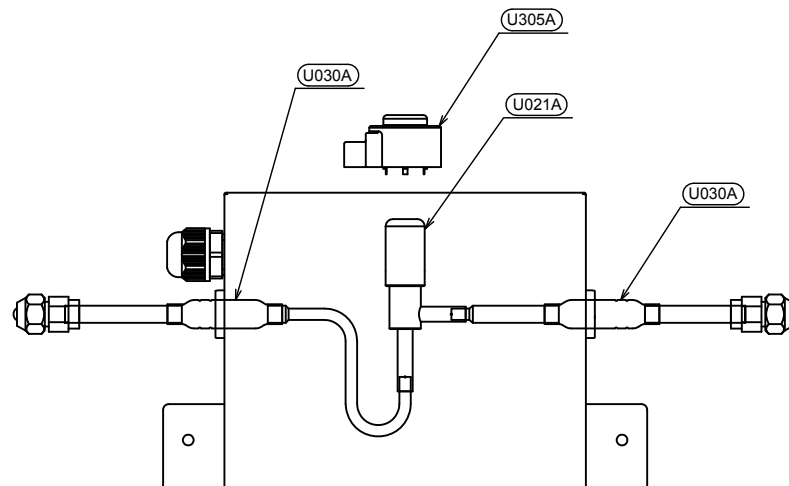

DXF-030A1
DXF-048A1
DXF-096A1
DXF-192A1
DXF-288A1

