

# SERVICE PARTS LIST for Air Handler with DX-Kit

MODEL: EXV-018E, EXV-024E, EXV-030E,  
EXV-036E, EXV-048E, EXV-060E


					(P0167x-01)					
					Voltage					
					208/230V, 60Hz					
No.	Part Name	Replacement Part		Remarks	Q'ty Per Unit					
		Draw. No.	Part No.		EXV-018E	EXV-024E	EXV-030E	EXV-036E	EXV-048E	EXV-060E
1	Terminal Block	XEK25709A	E05041	TB1	1	1	1	1	1	1
2	Terminal Block	XEK25709C	E05043	TB2	1	1	1	1	1	1
3	Terminal Block	XEK25709B	E05042	TB3	1	1	1	1	1	1
4	Earth Screw	17H28092A	-		1	1	1	1	1	1
5	Spacer	XEK30992B	E04603	for Fixing PCB1, PCB2	8	8	8	8	8	8
6	Transformer	17B42533A	P28822		1	1	1	1	1	1
7	Printed Circuit Board	17H15588J	P31156	for PCB1 (PI065)	1	1	1	1	1	1
8	Relay PCB	17G49967A	P23888	for PCB2 (PI005)	1	1	1	1	1	1
9	Expansion Valve Coil Assy	XEK25701A	E05136		1	1	1	1	1	
10	Expansion Valve Coil Assy	XEK25722A	E05137							1
11	Cover Stay	XEK25712A	E05129	E-Box	1	1	1	1	1	1
12	E-Box Final Assy	XEK25720A	E05110	Assembly (Include all THM & Blower Motor Wiring)	1					
13	E-Box Final Assy	XEK25720B	E05111	Assembly (Include all THM & Blower Motor Wiring)		1				
14	E-Box Final Assy	XEK25720C	E05112	Assembly (Include all THM & Blower Motor Wiring)			1			
15	E-Box Final Assy	XEK25720D	E05113	Assembly (Include all THM & Blower Motor Wiring)				1		
16	E-Box Final Assy	XEK25720E	E05114	Assembly (Include all THM & Blower Motor Wiring)					1	
17	E-Box Final Assy	XEK25720F	E05115	Assembly (Include all THM & Blower Motor Wiring)						1
18	Cover Stay	XEK25736A	E05109	Exp. Valve Assy	1	1	1	1	1	1
19	Cover Stay	XEK25707A	E05130	Terminal Block Cover in Exp. Valve Assy	1	1	1	1	1	1
20	TB Stay	XEK25708A	E05131	Terminal Block Stay in Exp. Valve Assy	1	1	1	1	1	1
21	EXP Valve Sub Assy 1	XEK25697A	E05122	Assy (Exclude Valve Coil and Cover)	1	1	1			
22	EXP Valve Sub Assy 1	XEK25697B	E05123	Assy (Exclude Valve Coil and Cover)				1	1	
23	EXP Valve Sub Assy 2	XEK25698A	E05124	Assy (Exclude Valve Coil and Cover)						1
24	EXP. Valve Assy 1	XEK25695A	E05116	Assembly (Include Valve Coil and Cover)	1					
25	EXP. Valve Assy 1	XEK25695B	E05117	Assembly (Include Valve Coil and Cover)		1				
26	EXP. Valve Assy 1	XEK25695C	E05118	Assembly (Include Valve Coil and Cover)			1			
27	EXP. Valve Assy 1	XEK25695D	E05119	Assembly (Include Valve Coil and Cover)				1		
28	EXP. Valve Assy 1	XEK25695E	E05120	Assembly (Include Valve Coil and Cover)					1	
29	EXP. Valve Assy 2	XEK25696A	E05121	Assembly (Include Valve Coil and Cover)						1
30	Thermistor	17B24598F	P28745	for Air Inlet, THM1; Blue socket	1	1	1	1	1	1
31	Thermistor	17B24598H	P23588	for Air Outlet, THM2; Red socket	1	1	1	1	1	1
32	Thermistor	X17C74419J	E01198	for Liquid Pipe, THM3; Black socket	1	1	1	1	1	1
33	Thermistor	X17B41046E	E02443	for Gas Pipe, THM5; Yellow socket	1	1	1	1	1	1
34	Thermistor Extension Cord	XEK25735C	E05127	for Air Inlet Thermistor, THM1; Blue socket	1	1	1	1	1	1
35	Thermistor Extension Cord	XEK25735A	E05125	for Air Outlet Thermistor, THM2; Red socket	1	1	1	1	1	1
36	Thermistor Extension Cord	XEK25735B	E05126	for Liquid Pipe Thermistor, THM3; Black socket	1	1	1	1	1	1
37	Thermistor Extension Cord	XEK25735D	E05128	for Gas Pipe Thermistor, THM5; Yellow socket	1	1	1	1	1	1
38	Accessory Kit	XEK50063A	E05133	Set of accessories shipped with the product (Includes Reducer, Thermistor, etc.)	1	1	1	1		
39	Accessory Kit	XEK50064A	E05134	Set of accessories shipped with the product (Includes Reducer, Thermistor, etc.)					1	
40	Accessory Kit	XEK50065A	E05135	Set of accessories shipped with the product (Includes Reducer, Thermistor, etc.)						1

## NOTE:

The parts without order number are the custom-ordered, and these are not mentioned in the price list. When ordering them, the part name and the drawing number are required.  
Contact your distributor for the delivery date and price of parts.

LOCATION OF SERVICE PARTS IN THE ELECTRICAL CONTROL BOX  
for Air Handler with DX-Kit


MODEL: EXV-018E  
EXV-024E  
EXV-030E  
EXV-036E  
EXV-048E  
EXV-060E

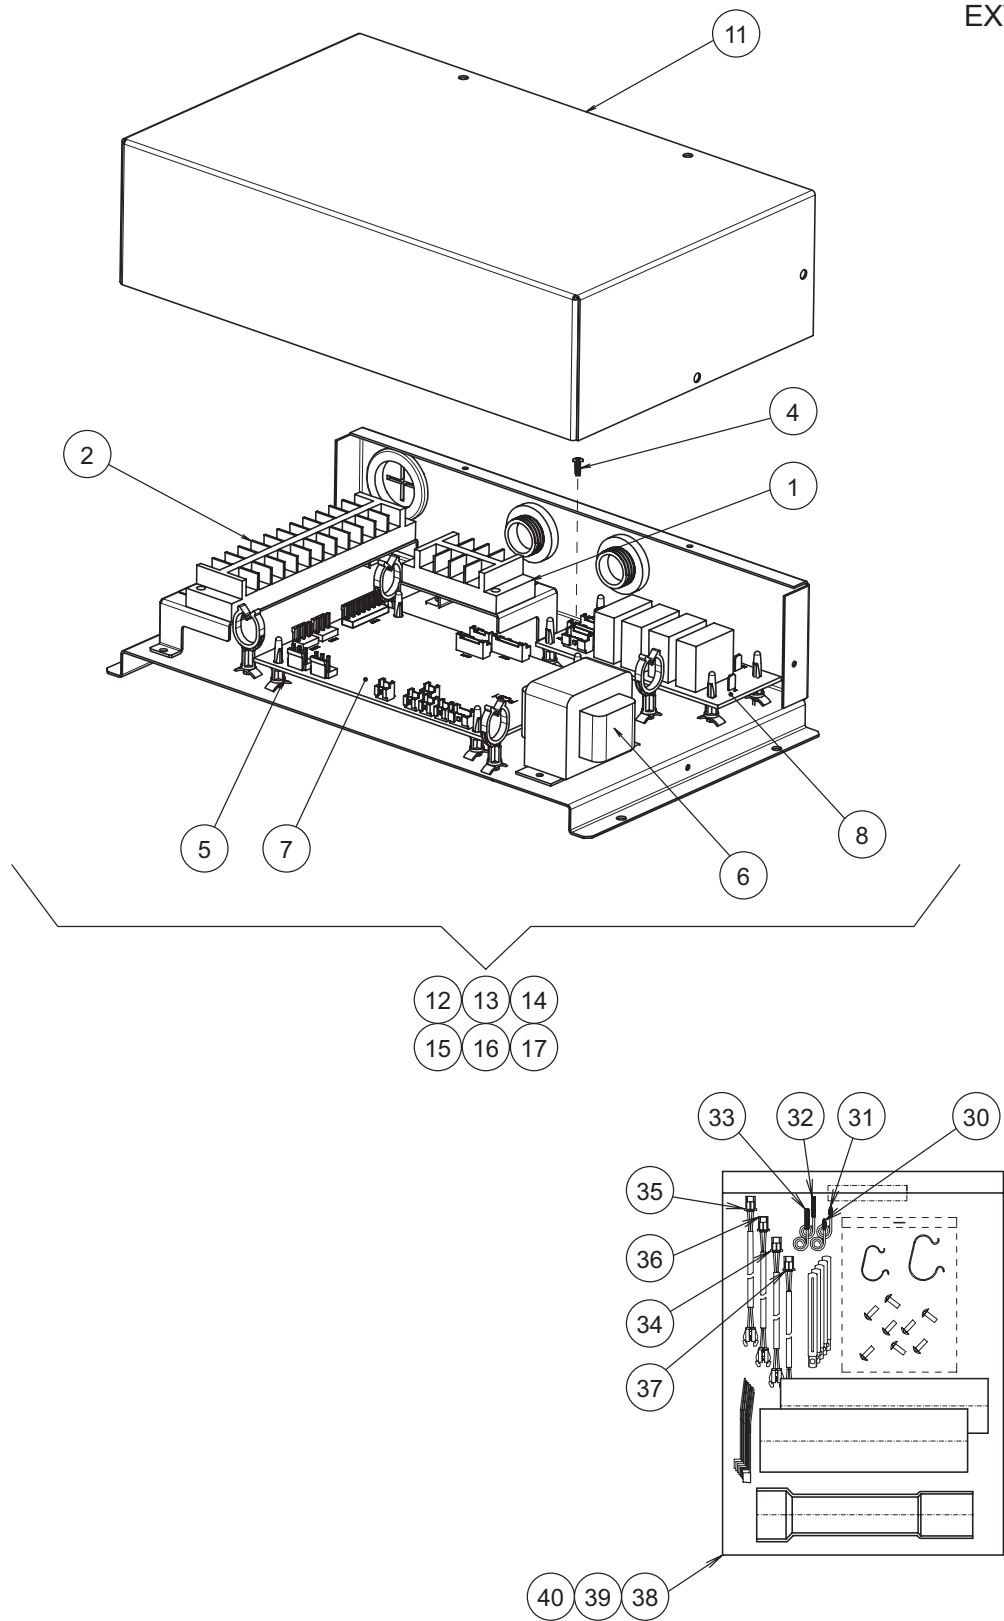

**NOTE:**  
The parts without order number are the custom-ordered, and these are not mentioned in the price list. When ordering them, the part name and the drawing number are required.  
Contact your distributor for the delivery date and price of parts.

LOCATION OF SERVICE PARTS IN THE EXPANSION VALVE BOX  
for Air Handler with DX-Kit

MODEL: EXV-018E  
EXV-024E  
EXV-030E  
EXV-036E  
EXV-048E  
EXV-060E

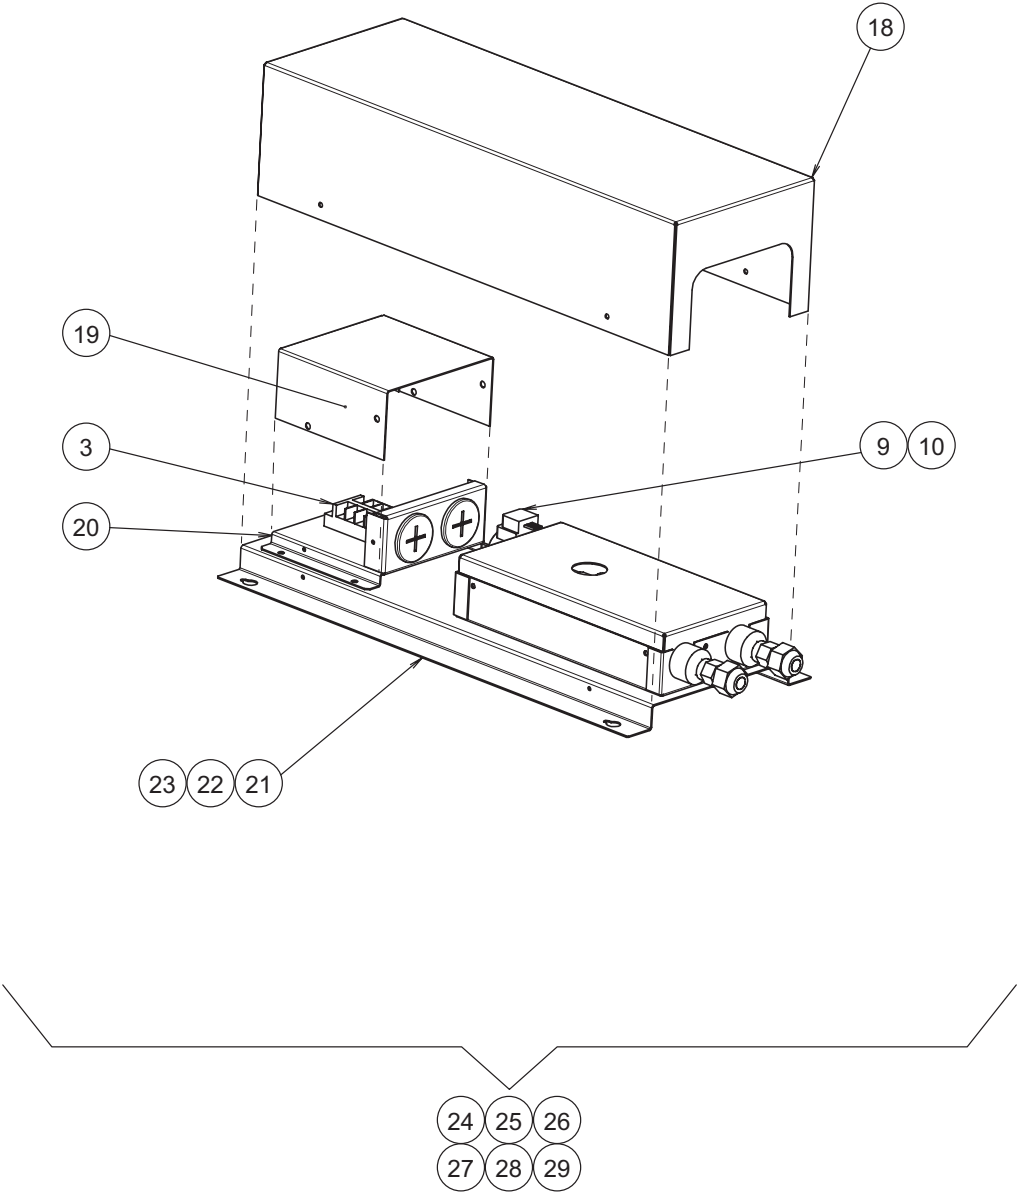

**NOTE:**  
The parts without order number are the custom-ordered, and these are not mentioned in the price list. When ordering them, the part name and the drawing number are required.  
Contact your distributor for the delivery date and price of parts.