


Installation and Maintenance Manual

***INVERTER-DRIVEN
MULTI-SPLIT SYSTEM
HEAT PUMP
AIR CONDITIONERS***

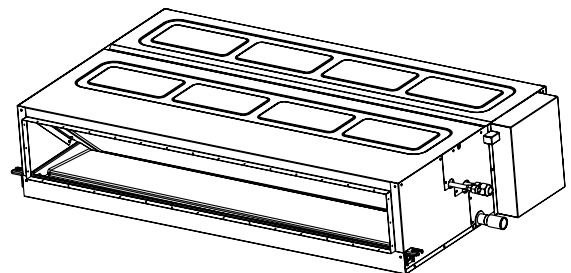

Type	Model
Ducted (Medium Static)	(H,Y,C)IDM006B21S
	(H,Y,C)IDM008B21S
	(H,Y,C)IDM012B21S
	(H,Y,C)IDM015B21S
	(H,Y,C)IDM018B21S
	(H,Y,C)IDM024B21S
	(H,Y,C)IDM030B21S
	(H,Y,C)IDM036B21S
	(H,Y,C)IDM048B21S

IMPORTANT:

***READ AND UNDERSTAND
THIS MANUAL BEFORE
INSTALLING THIS HEAT
PUMP AIR CONDITIONER.
KEEP THIS MANUAL FOR
FUTURE REFERENCE.***

P01433Q

ATTENTION

Each model number and all matching model numbers within a system must have the same version of software.

Follow these steps to verify that your product model numbers have the same version of software.

- Access the main printed circuit board in each product.
- Locate a white sticker with a P-XXXX number or
- Connect a service checker and locate the ROM number.

For further assistance, please contact our Technical Support Center at **1 (844) 873-4445** and select **Option 2**.

Important Notice

- Johnson Controls Inc. pursues a policy of continuing improvement in design and performance in its products. As such, Johnson Controls Inc. reserves the right to make changes at any time without prior notice.
- Johnson Controls Inc. cannot anticipate every possible circumstance that might involve a potential hazard.
- This heat pump air conditioning unit is designed for standard air conditioning applications only. Do not use this unit for anything other than the purposes for which it was intended.
- The installer and system specialist shall safeguard against leakage in accordance with local codes. The following standards may be applicable, if local regulations are not available. International Organization for Standardization: (ISO 5149 or European Standard, EN 378). No part of this manual may be reproduced in any way without the expressed written consent of Johnson Controls Inc.
- This heat pump air conditioning unit will be operated and serviced in the United States of America and comes with a full complement of the appropriate Safety, Danger, and Caution, Warnings.
- If you have questions, please contact your distributor or dealer.
- This manual provides common descriptions, basic and advanced information to maintain and service this heat pump air conditioning unit which you operate as well for other models.
- This heat pump air conditioning unit has been designed for a specific temperature range. For optimum performance and long life, operate this unit within the range limits according to the table below.

Temperature

		Maximum	Minimum
Cooling Operation	Indoor	89°F DB/73°F WB (32°C DB/23°C WB)	69°F DB/59°F WB (21°C DB/15°C WB)
	Outdoor	118°F DB (48°C DB) *	14°F DB (-10°C DB) *
Heating Operation	Indoor	80°F DB (27°C DB)	59°F DB (15°C DB)
	Outdoor	59°F WB (15°C WB) *	-4°F WB (-20°C WB) *

DB: Dry Bulb, WB: Wet Bulb

* The temperature may change depending on the outdoor unit.

- This manual should be considered as a permanent part of the air conditioning equipment and should remain with the air conditioning equipment.

Product Inspection upon Arrival

1. Upon receiving this product, inspect it for any damages incurred in transit. Claims for damage, either apparent or concealed, should be filed immediately with the shipping company.
2. Check the model number, electrical characteristics (power supply, voltage, and frequency rating), and any accessories to determine if they agree with the purchase order.
3. The standard utilization for this unit is explained in these instructions. Use of this equipment for purposes other than what it designed for is not recommended.
4. Please contact your local agent or contractor as any issues involving installation, performance, or maintenance arise. Liability does not cover defects originating from unauthorized modifications performed by a customer without the written consent of Johnson Controls, Inc. Performing any mechanical alterations on this product without the consent of the manufacturer will render your warranty null and void.

TABLE OF CONTENTS

1. Introduction	1
2. Safety Instructions	1
3. Before Installation	7
3.1 Combination of Outdoor Unit and Indoor Unit	7
3.2 Transportation and Handling	7
3.3 Factory-Supplied Accessories	7
3.4 Necessary Tools and Instrument List for Installation	7
4. Installation Location	8
5. Installation Work	8
5.1 Suspension Bolts	8
5.2 Marking Positions for Suspension Bolts and Piping Connections	9
5.3 Mounting Indoor Unit	9
5.4 Adjusting Level of Unit	10
5.5 Connecting the Supply Duct	11
5.6 Setting the External Pressure	12
5.7 Installation of Auxiliary Heater (Field-Supplied)	13
5.7.1 Selection of Auxiliary Heater	14
5.7.2 Auxiliary Heater Connection	15
5.7.3 Setting for Auxiliary Heater	15
6. Refrigerant Piping Work	16
6.1 Piping Materials	16
6.2 Piping Connection	17
7. Condensate Piping	19
8. Electrical Wiring	21
8.1 General Check	21
8.2 Electrical Wiring Capacity	22
8.2.1 Field Minimum Wire Sizes for Power Supply	22
8.2.2 Details of Electrical Wiring Connection	22
8.3 Position of Electrical Wiring Connection	24
8.4 Wiring Connection	28
8.5 DIP Switch Settings	29
8.6 External Static Pressure Setting	30
8.7 Function Selection by Wired Controller	31
8.8 Setback Operation	33
9. Test Run	34
9.1 Before Test Run	34
9.2 Test Run	34
9.3 Alarm Code	36
10. Fan Performance Curves	37

1. Introduction

Read following sections carefully before installing this product.

Read over the "Installation and Maintenance Manual" for the outdoor unit as well.



Forward this information, and the warranty to all installers and users.

Ask end users to maintain copies for future reference.


(Refrigerant Piping Work) → (Electrical Wiring Work) → (Ref. Charge Work) → (Test Run) → (User)

- For details on wiring between the indoor unit and the outdoor unit, refer to the "Installation and Maintenance Manual" for the outdoor unit.
- For details on the optional controller, refer to the "Installation and Maintenance Manual" for that optional controller module.
- For details on each optional part, refer to the "Installation and Maintenance Manual" for each optional part.
- For central controller, refer to the "Installation and Maintenance Manual" for the central controller.

2. Safety Instructions

Signal Words	
 WARNING	Indicates a hazardous situation that, if not avoided, could result in death or serious injury.
 CAUTION	Indicates a hazardous situation that, if not avoided, could result in minor or moderate injury.
NOTICE	Indicates information considered important, but not hazard-related (for example, messages relating to property damage).

General Precautions

 WARNING	To reduce the risk of serious injury or death, read these instructions thoroughly and follow all warnings or cautions included in all manuals that accompanied the product and are attached to the unit. <i>Refer back to these safety instructions as needed.</i>
--	--

- This system should be installed by personnel certified by Johnson Controls, Inc. Personnel must be qualified according to local, state and national building and safety codes and regulations. Incorrect installation could cause leaks, electric shock, fire or explosion. In areas where "Seismic Performance" requirements are specified, the appropriate measures should be taken during installation to guard against possible damage or injury that might occur in an earthquake if the unit is not installed correctly, injuries may occur due to a falling unit.
- Use appropriate Personal Protective Equipment (PPE), such as gloves and protective goggles and, where appropriate, have a gas mask nearby. Also use electrical protection equipment and tools suited for electrical operation purposes. Keep a wet cloth and a fire extinguisher nearby during brazing. Use care in handling, rigging, and setting of bulky equipment.
- When transporting, be careful when picking up, moving and mounting these units. Although the unit may be packed using plastic straps, do not use them for transporting the unit from one location to another. Do not stand on or put any material on the unit. Get a partner to help, and bend with your knees when lifting to reduce strain on your back. Sharp edges or thin aluminum fins on the air conditioner can cut fingers, so wear protective gloves.

- Do not touch or adjust any safety devices inside the indoor or outdoor units. All safety features, disengagement, and interlocks must be in place and functioning correctly before the equipment is put into operation. If these devices are improperly adjusted or tampered with in any way, a serious accident can occur. Never bypass or jump-out any safety device or switch.
- Before servicing, turn-OFF the power supply and use accepted lockout and tag out procedures at all main switches.
- This unit is the pressurized system. Never loosen threaded joints while the system is under pressure and never open pressurized system parts.
- Johnson Controls will not assume any liability for injuries or damage caused by not following steps outlined or described in this manual. Unauthorized modifications to Johnson Controls products are prohibited as they...
 - May create hazards which could result in death, serious injury or equipment damage;
 - Will void product warranties;
 - May invalidate product regulatory certifications;
 - May violate OSHA standards;

NOTICE

Take the following precautions to reduce the risk of property damage.

- Be careful that moisture, dust, or variant refrigerant compounds not enter the refrigerant cycle during installation work. Foreign matter could damage internal components or cause blockages.
- If air filters are required on this unit, do not operate the unit without the air filter set in place. If the air filter is not installed, dust may accumulate and breakdown may result.
- Do not install this unit in any place where silicon gases can coalesce. If the silicon gas molecules attach themselves to the surface of the heat exchanger, the finned surfaces will repel water. As a result, any amount of drainage moisture condensate can overflow from the condensate pan and could run inside of the electrical box, possibly causing electrical failures.
- When installing the unit in a hospital or other facility where electromagnetic waves are generated from nearby medical and/or electronic devices, be prepared for noise and electronic interference Electromagnetic Interference (EMI). Do not install where the waves can directly radiate into the electrical box, controller cable, or controller. Inverters, appliances, high-frequency medical equipment, and radio communications equipment may cause the unit to malfunction. The operation of the unit may also adversely affect these same devices. Install the unit at least 10 ft. (3m) away from such devices.
- When a wireless controller is used, locate at a distance of at least 3.3 ft. (1m) between the indoor unit and electric lighting. If not, the receiver part of the unit may have difficulty receiving operation commands.
- Do not install the unit in any location where animals and plants can come into direct contact with the outlet air stream. Exposure could adversely affect the animals and plants.
- Do not install the unit with any downward slope to the side of the condensate pipe. If you do, you may have drain water flowing back which may cause leaks.
- Be sure the condensate hose discharges water properly. If connected incorrectly, it may cause leaks.
- Do not install the unit in any place where oil can seep onto the units, such as table or seating areas in restaurants, and so forth. For these locations or social venues, use specialized units with oil-resistant features built into them. In addition, use a specialized ceiling fan designed for restaurant use. These specialized oil-resistant units can be ordered for such applications. However, in places where large quantities of oil can splash onto the unit, such as a factory, even the specialized units cannot be used. These products should not be installed in such locations.

Installation Precautions

! WARNING

To reduce the risk of serious injury or death, the following installation precautions must be followed.

- When installing the unit into...
 - A wall: Make sure the wall is strong enough to hold the unit's weight. It may be necessary to construct a strong wood or metal frame to provide added support.
 - A room: Properly insulate any refrigerant tubing run inside a room to prevent "sweating" that can cause dripping and water damage to wall and floors.

- Damp or uneven areas: Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the unit to prevent water damage and abnormal vibration.
- An area with high winds: Securely anchor the outdoor unit down with bolts and a metal frame. Provide a suitable wind baffle.
- A snowy area: Install the outdoor unit on a raised platform that is higher than drifting snow. Provide snow protection hood.
- Do not install the unit in the following places. Doing so can result in an explosion, fire, deformation, corrosion, or product failure.
 - Explosive or flammable atmosphere
 - Where a fire, oil, steam or powder can directly enter the unit, such as nearby or above a kitchen stove.
 - Where oil (including machinery oil) may be present.
 - Where corrosive gases such as chlorine, bromine, or sulfide can accumulate, such as near a hot tub or a hot spring.
 - Where dense, salt-laden airflow is heavy, such as in coastal regions.
 - Where the air quality is of high acidity.
 - Where harmful gases can be generated from decomposition.
- Do not position the condensate pipe for the indoor unit near any sanitary sewers where corrosive gases may be present. If you do, toxic gases can seep into breathable air spaces and can cause respiratory injuries. If the condensate pipe is installed incorrectly, water leakage and damage to the ceiling, floor, furniture, or other possessions may result. If the condensate pipe becomes clogged, water may drip from the indoor unit. Do not install the indoor unit where such dripping can cause moisture damage or uneven locations: Use a raised concrete pad or concrete blocks to provide a solid, level foundation for the unit to prevent water damage and abnormal vibration.
- Before performing any brazing work, be sure that there are no flammable materials or open flames nearby.
- Perform a test run to ensure normal operation. Safety guards, shields, barriers, covers, and protective devices must be in place while the compressor/unit is operating. During the test run, keep fingers and clothing away from any moving parts.
- Clean up the site when finished, remembering to check that no metal scraps or bits of wiring have been left inside the unit being installed.

After installation work for the system has been completed, explain the “Safety Precautions,” the proper use and maintenance of this unit to the customer according to the information in all manuals that came with the system. All manuals and warranty information must be given to the user or left near the Indoor Unit.

Refrigerant Precautions

WARNING

To reduce the risk of serious injury or death, the following refrigerant precautions must be followed.

- As originally manufactured, this unit contains refrigerant installed by Johnson Controls. Johnson Controls uses only refrigerants that have been approved for use in the unit's intended home country or market. Johnson Controls distributors similarly are only authorized to provide refrigerants that have been approved for use in the countries or markets they serve. The refrigerant used in this unit is identified on the unit's faceplate and/or in the associated manuals. Any additions of refrigerant into this unit must comply with the country's requirements with regard to refrigerant use and should be obtained from Johnson Controls distributors. Use of any non-approved refrigerant substitutes will void the warranty and will increase the potential risk of injury or death.
- If installed in a small room, take measures to prevent the refrigerant from exceeding the maximum allowable concentration in the event that refrigerant gases should escape. The installation should meet the requirements in ASHRAE Standards 15 and 34. If refrigerant gas has leaked during the installation work, ventilate the room immediately.
- Before installation is complete, make sure that the refrigerant leak test has been performed. If refrigerant gases escape into the air, turn OFF the main switch, extinguish any open flames and contact your service contractor. Refrigerant (Fluorocarbon) for this unit is odorless. If the refrigerant should leak and come into contact with open flames, toxic gas could be generated. Also, because the fluorocarbons are heavier than air, they settle to the floor, which could cause asphyxiation.
- When installing the unit, and connecting refrigerant piping, keep all piping runs as short as possible, and make sure to securely connect the refrigerant piping before the compressor starts operating. If the refrigerant piping is not connected and the compressor activates with the stop valve opened, the refrigerant cycle will become subjected to extremely high pressure, which can cause an explosion or fire.
- Tighten the flare nut with a torque wrench in the specified manner. Do not apply excessive force to the flare nut when tightening. If you do, the flare nut can crack and refrigerant leakage may occur.
- A compressor/unit comprises a pressurized system. Never loosen threaded joints while the system is under pressure and never open pressurized system parts.
- When maintaining, relocating, and disposing of the unit, dismantle the refrigerant piping after the compressor stops.

Electrical Precautions

WARNING

Take the following precautions to reduce the risk of electric shock, fire or explosion resulting in serious injury or death.

- Highly dangerous electrical voltages are used in this system. Carefully refer to the wiring diagram and these instructions when wiring. Improper connections and inadequate grounding can cause serious injury or death.
- Before servicing, open and tag all disconnect switches. Never assume electrical power is disconnected. Check with meter and equipment.
- Only use electrical protection equipment and tools suited for this installation.
- Use specified cables between units.
- Communication cable shall be a minimum of AWG18 (0.82mm²), 2-Conductor, Stranded Copper. Shielded cable must be considered for applications and routing in areas of high EMI and other sources of potentially excessive electrical noise to reduce the potential for communication errors. When shielded cable is applied, proper bonding and termination of the cable shield is required as per Johnson Controls guidelines. Plenum and riser ratings for communication cables must be considered per application and local code requirements.
- Use an exclusive power supply for the air conditioner at the unit's rated voltage.
- Be sure to install circuit breakers (ground fault interrupter, isolating switch, molded case circuit breaker and so on), with the specified capacity. Ensure that the wiring terminals are tightened securely to recommended torque specifications. If a circuit breaker or fuse is frequently activated, shut down the system and contact your service contractor.

- Clamp electrical wires securely with a cable band after all wiring is connected to the terminal block. In addition, run wires securely through the wiring access channel.
- When installing the power lines, do not apply tension to the cables. Secure the suspended cables at regular intervals, but not too tightly.
- Make sure that the terminals do not come into contact with the surface of the electrical box. If the terminals are too close to the surface, it may lead to failures at the terminal connection.
- Turn OFF and disconnect the unit from the power supply when handling the service connector. Do not open the service cover or access panel to the indoor or outdoor units without turning OFF the main power supply.
- After stopping operation, be sure to wait at least five minutes before turning off the main power switch. Otherwise, water leakage or electrical breakdown may result. Disconnect the power supply completely before attempting any maintenance for electrical parts. Check to ensure that no residual voltage is present after disconnecting the power supply.
- Do not clean with, or pour water into, the controller as it could cause electric shock and/or damage the unit. Do not use strong detergent such as a solvent. Clean with a soft cloth.
- Check that the ground wiring is securely connected. Do not connect ground wiring to gas piping, water piping, lighting conductor, or telephone ground wiring.
- If a circuit breaker or fuse is frequently activated, shut down the system and contact your service contractor.
- This equipment can be installed with a Ground Fault Circuit Breaker (GFCI), which is a recognized measure for added protection to a properly grounded unit. Install appropriately-sized breakers / fuses / overcurrent protection switches and wiring in accordance with local, state and NEC codes and requirements. The equipment installer is responsible for understanding and abiding by applicable codes and requirements.

CAUTION

- Proper handling of this unit requires two-people. Safe handling and installing the indoor unit requires the strength of two people. Mounting the unit alone may cause injury due to fall of the unit. Although the unit may be girded with steel banding, do not use it for transportation. Avoid contact with finned surfaces of the heat exchanger as sharp edges can cause severe injury to hands and fingers. Use appropriate work gloves for the job.

NOTICE

- Check to ensure that the condensate hose discharges moisture properly. If connected incorrectly, it can result in leakage and damage to furniture.
- Make sure to use the factory-supplied condensate hose and hose clamp. Other makes can cause moisture leakage.
- Do not bend or twist the factory-supplied condensate hose. This could compromise the seal and result in moisture leakage.
- Do not apply an excessive force to the condensate pipe connection. This can also compromise the seal properties of the connection.
- Verify that the installed unit is level with floor and ceiling surfaces. Any variance or inclination can cause moisture to back up into the condensate pan, overflow, and seepage onto ceiling or wall surfaces, and cause damage to carpeted surfaces or furniture below.
- Do not install this system in close proximity to septic sewer lines where flammable and toxic gases can coalesce.
- Inspect the condensate pan before the onset of winter to drain away all accumulated moisture in the pan.
- The heat exchanger of indoor unit overheats whenever there is a slight amount of refrigerant circulating during slowdown or stoppage. As a result, moisture in the condensate pan evaporates where it can condense on ceiling or wall surfaces.
- After the drain check is completed, insert the rubber plug again and seal the gap with a silicon sealant.

Electrical Installation

WARNING

In some cases, the packaged air conditioner may not be operated normally under the following cases:

- When electrical power for the packaged air conditioner is supplied from the same power transformer as the external equipment.
- When the power supply wiring for the external equipment and the packaged air conditioner are located close to each other.

Regarding that mentioned above, surge voltage may be inducted into the power supply wiring for the crated air conditioner due to a spike in power consumption for this device and an activation of the switch. Check the field regulations and standards before performing any electrical work in order to safeguard the power supply for the crated air conditioner unit.

3. Before Installation

3.1 Combination of Outdoor Unit and Indoor Unit








The combination capacity of indoor unit against the outdoor unit is selected depending on the outdoor unit capacity. Refer to the "Installation and Maintenance Manual" for the outdoor unit to decide the required combination of indoor and outdoor units, and the combination unit capacity.

3.2 Transportation and Handling

- Transport the product as close to the installation location as possible before unpacking.
- Do not lay any objects on the indoor unit.
- The indoor unit comes crated upside-down with the foam polystyrene condensate pan positioned on top. Do not invert the unit until it is ready to be suspended above the floor. Inverting the unit while on the floor will crush the condensate pan. Do not handle the unit by grabbing at the polystyrene pan and other air outlets as they are fragile and will sustain damage.
- The indoor unit handle is fabricated from foam polystyrene and is susceptible to breakage if any excessive force is applied as a result of mishandling of the unit during installation.

3.3 Factory-Supplied Accessories

Check to ensure that the following accessories are packed with the indoor unit.
The screws, washers, and flare nuts are packed in the pipe insulation.

Accessory	Qty.	Purpose
Washer (M10) 	8	For Unit Suspension
Screw (M4) 	16	For Securing Flanges
Hose Clamp 	2	For Condensate Pipe Connection
Cable Band 	5	For Securing PVC Tube
PVC Tube 	2	For Separating Communication Cables and Wired Controller Cables from Power Supply Wirings ID 1/2 inch (12mm)
Condensate Hose 	1	For Condensate Pipe Connection
Rubber Bushing 	1	For Connecting Hole

NOTICE

The controller and branch piping are optional accessories which are not included with the indoor unit.
If necessary, please contact your contractor.

3.4 Necessary Tools and Instrument List for Installation

No.	Tool	No.	Tool
1	Handsaw	11	Wrench
2	Phillips Screwdriver	12	Charging Cylinder
3	Vacuum Pump	13	Manifold Gauge
4	Refrigerant Gas Hose	14	Wire Cutter
5	Megohmmeter	15	Gas Leak Detector
6	Copper Pipe Bender	16	Level
7	Manual Water Pump	17	Clamps for Solderless Terminals
8	Copper Tube Cutter	18	Hoist (for Indoor Unit)
9	Brazing Kit	19	Ammeter
10	Hexagonal Wrench	20	Voltage Meter

NOTE:

Use tools and measuring instruments (vacuum pump, gas hose, charging cylinder, manifold gauge) exclusively for refrigerant R410A.

4. Installation Location

- (1) Install the indoor unit, allowing for proper clearance for operation and maintenance access, as shown in Figure. 4.1.

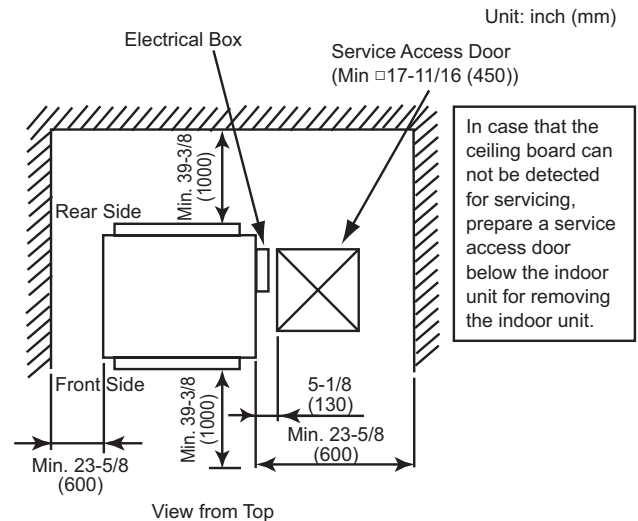


Figure. 4.1 Operation and Installation Space

- (2) Consider the air distribution from the indoor unit to the space of the room, and select a suitable location so that uniform air temperature in the room can be obtained.
- (3) Do not leave combustible materials inside the service space of the indoor unit.
- (4) Avoid obstacles which may hamper the air intake or the air discharge flow.
- (5) Do not install the indoor unit in a machine shop or kitchen where vapor from oil or its mist flows to the indoor unit.
The oil will deposit on the heat exchanger, thereby reducing the indoor unit performance, and may deform and in the worst case, break the plastic parts of the indoor unit.
- (6) Pay attention to the following points when the indoor unit is installed in a hospital or other facilities where there are electronic waves from medical equipment.
 - (a) Do not install the indoor unit where the electromagnetic wave is directly radiated to the electrical box, communication cable or wired controller.
 - (b) Install the indoor unit and components as far away as practical or at least 9.8ft (3m) from any electromagnetic wave radiator.
 - (c) Prepare a steel box and install the wired controller in it. Prepare a steel conduit tube and wire the controller cable in it. Then, connect the ground wiring with the box and the tube.
 - (d) Install a noise filter when the power supply emits harmful noises.
- (7) To avoid any corrosive action to the heat exchangers, do not install the indoor unit in an acid or alkaline environment.

5. Installation Work

5.1 Suspension Bolts

- (1) Determine the final location and installation orientation of the indoor unit with respect to the space allowed for piping, wiring, and maintenance access.
- (2) Mount suspension bolts, as shown in Figure 5.1.


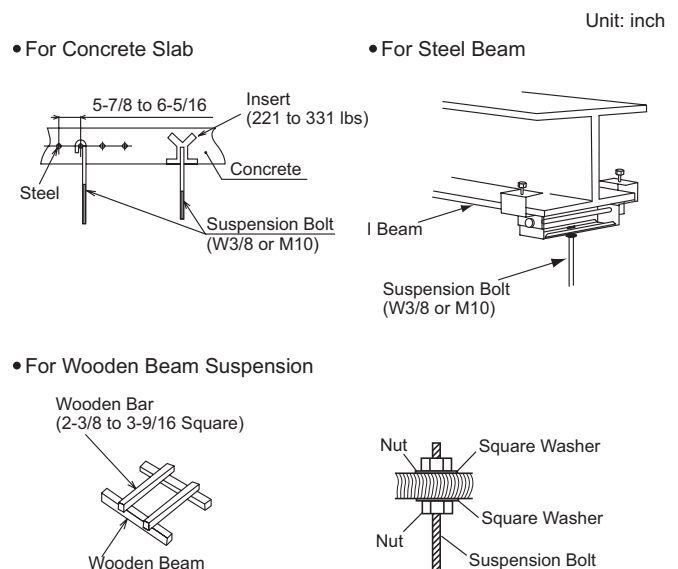


Figure. 5.1 Mounting of Suspension Bolts

5.2 Marking Positions for Suspension Bolts and Piping Connections

- (1) Mark the positions for the suspension bolts, refrigerant pipe connections, and condensate pipe connection.
- (2) Installation dimensions are shown in Figure 5.2.

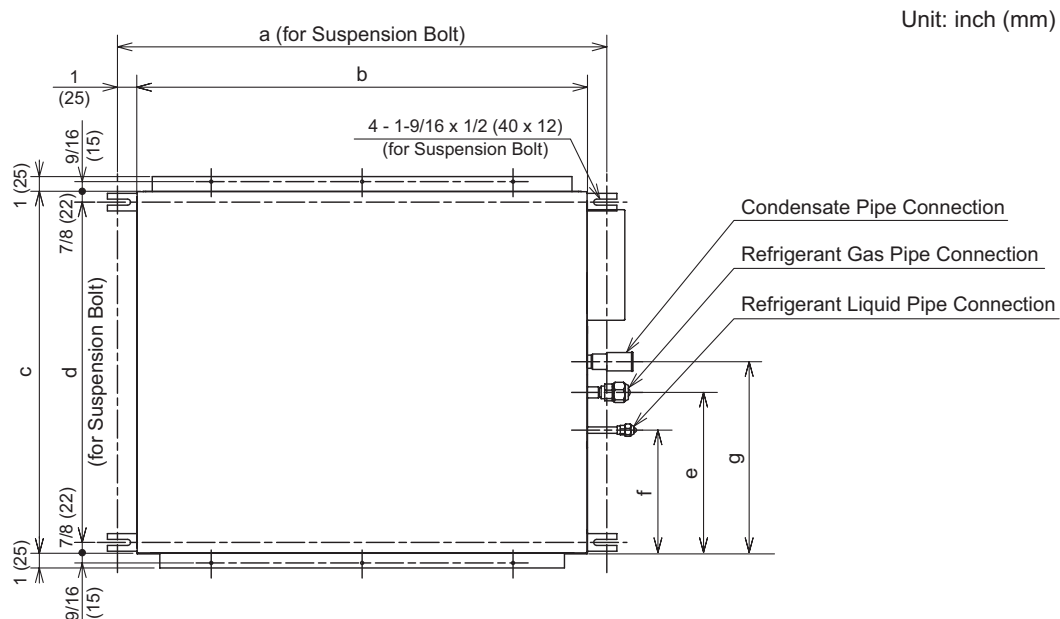

Model \ Dimension	a	b	c	d	e	f	g
(H,Y,C)IDM006B21S (H,Y,C)IDM008B21S (H,Y,C)IDM012B21S	27-9/16 (700)	25-9/16 (650)	28-3/8 (720)	26-5/8 (676)	12-5/8 (321)	9-11/16 (246)	16-1/16 (408)
(H,Y,C)IDM015B21S (H,Y,C)IDM018B21S	37-3/8 (950)	35-7/16 (900)	28-3/8 (720)	26-5/8 (676)	12-5/8 (321)	9-11/16 (246)	16-1/16 (408)
(H,Y,C)IDM024B21S (H,Y,C)IDM030B21S	45-1/4 (1,150)	43-5/16 (1,100)	31-1/2 (800)	29-3/4 (756)	13-9/16 (345)	10-5/8 (270)	16-15/16 (431)
(H,Y,C)IDM036B21S (H,Y,C)IDM048B21S	57-1/16 (1,450)	55-1/8 (1,400)	31-1/2 (800)	29-3/4 (756)	13-9/16 (345)	10-5/8 (270)	16-15/16 (431)

Figure 5.2 Suspension Bolts

5.3 Mounting Indoor Unit

Hang the indoor unit as shown in Figure 5.3.

Field-Supplied Parts

- * Suspension Bolts: 4-M10 or W3/8
- * Nut: 8-M10 or W3/8

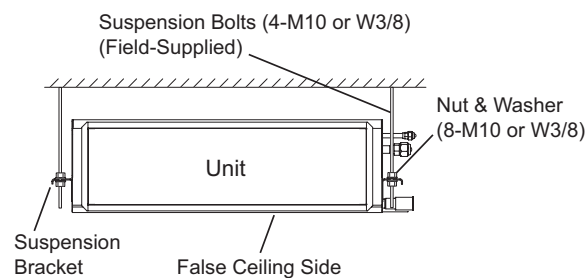


Figure 5.3 Mounting Indoor Unit

- (1) How to install Nuts or Suspension Bolts
Install nuts on each of the four hanging bolts, as shown in Figure 5.4.

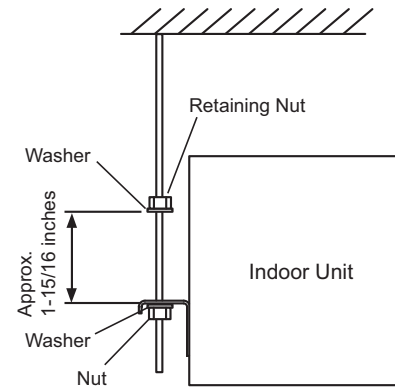


Figure 5.4 Suspension Bolts and Nuts

- (2) Suspending the Indoor Unit

- * Hook the suspension bracket to the nut and washer of each hanging bolt as shown, starting at the opposite side and working over to the service cover side.
 - * After verifying that the nut and washer are correctly affixed to the retainers on the suspension bracket, hook the suspension bracket of the service cover side to the nut and washer.
- (Install the suspension bolts away from the unit when fastening.)

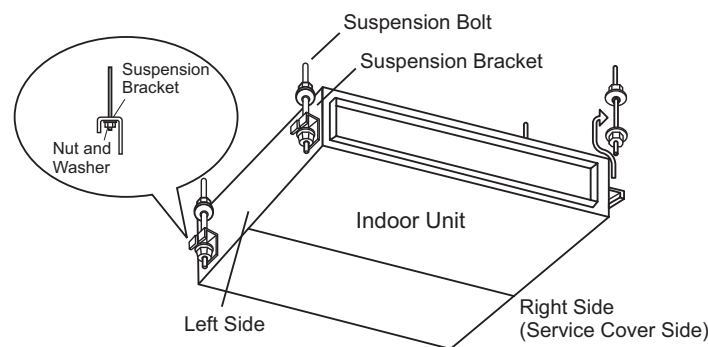


Figure 5.5 Suspended Indoor Unit

5.4 Adjusting Level of Unit

- (1) Use a level to verify that the unit base is perfectly level with the floor. There should be no degree of slope present.

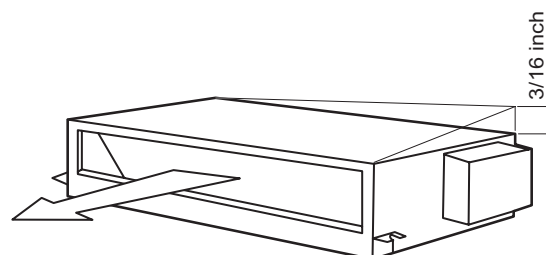


Figure 5.6 Foundation Gradient

- (2) The unit should be installed so that the rear side of the unit is slightly (0 to 3/16 inch (0 to 5mm)) lower than the front side, to allow and promote drainage discharge.
- (3) Tighten the bolts of the suspension nuts with the suspension brackets after adjustment is completed. Special plastic paint must be applied to the bolts in order to prevent them from loosening.

NOTE:

During position the installation process, keep the unit well covered with vinyl cover and related components covered until it is time to hoist into position.

5.5 Connecting the Supply Duct

- (1) The supply duct should be connected to the indoor unit through canvas ducts, in order to avoid abnormal sound vibration (Refer to Figure 5.7). The unit is equipped with a pre-drilled duct flange for the return and supply duct connection.
- (2) Attach the vibration proof rubber to the Suspension Bolt in order to minimize sound from unit operation.
- (3) Duct material should be a non-flammable material type.
- (4) Perform heat insulation work over the duct to prevent condensation.

CAUTION

- If a lower sound level is required, install the field-supplied silencer.
- Design duct arrangement as "Unit External Static Pressure = Pressure Drop of Duct + Pressure Drop of Air Outlet and Air Inlet".
Poorly designed duct will result in sound, comfort and water blow-off issues.

Notice for Outdoor Air Intake (Fresh Air)

This air conditioner unit is NOT designed for outdoor use.

The following items are to be strictly observed when designing a system for fresh air intake from the outdoors.

1) Considering Ventilation Load

Calculate the air-conditioning load properly with the load of the outdoor air intake. If the load of the outdoor air is not considered, it may cause insufficient cooling or heating operation due to an excessive air-conditioning load against the unit capacity.

2) Limits on Outdoor Air Intake

- Do NOT ingest air from the outdoors directly into the indoor unit.

If an outdoor fresh air intake is necessary for air-conditioning, Johnson Controls Inc. recommends the installation of the ERV (Energy Recovery Ventilation) (Field-supplied) system.

The outdoor air shall be processed by the ERV and mixed with indoor air.

Only then, is air that now intermixed can be drawn into the indoor unit.

NOTE:

The temperature of the air that is intermixed should fall within the working range as shown below.

	Heating	Cooling
Working Range of Required Indoor Room Temperature	59 to 80°F DB (15 to 27°C DB)	69°F DB/59°F WB (21°C DB/15°C WB) to 89°F DB/73°F WB (32°C DB/23°C WB)


- If the ERV is not used for processing the outdoor air, it can result in insufficient heating/cooling operation or condensation build-up on the inside surfaces of the indoor unit or duct depending on the outdoor air conditions.
- The volume of fresh air is recommended to be within 20% of the airflow volume "Hi2" according to the specification's table in the technical documentation. If it exceeds 20%, ingested condensation will build-up on the inside surfaces of the indoor unit and the airflow volume of the indoor unit cannot be adjusted due to increasing pressure loss of air intake caused by insufficient internal static pressure.
- When the outdoor air is ingested into the indoor unit, make sure to install an air filter capable of keeping the indoor unit free from dust.

3) Facilities for Outdoor Air Intake

- Use the damper or the duct fan to adjust fresh air volume.
- Do NOT ingest in fresh air from the outdoors directly into the indoor unit.
Installing and integrating ERV as a part of the system mix is recommended if incoming air from outdoors is routinely drawn indoors.
- When using ERV or installing a duct fan, make sure to install the interlock circuit between them and the indoor unit fan motor. Make sure to install an ERV in accordance with this manual.
- Install thermal insulation on surfaces of interconnecting ducts to prevent the build-up of condensation.

⚠ CAUTION

- If a lower sound level is required, install field-supplied silencer.
- The facility design should be “Unit External Static Pressure = Duct Pressure Loss + Suction / Discharge Pressure Loss”.
If duct pressure loss fall below the external static pressure, airspeed will increase and noise levels along with it. Also, water may splash out from unit and the motor protection circuit activated. Problems such as the inability to adjust airspeed can occur if the external unit static pressure fall below the duct pressure loss. Adjust the airflow control damper or shift the static pressure control switch to an equal level between the external static pressure and duct pressure loss. (refer to “Setting the External Pressure” section for the details.)
- Basically, this unit is configured to install the ducts on the inlet side and the outlet side. Ask for more information on using return ducts in the ceiling.

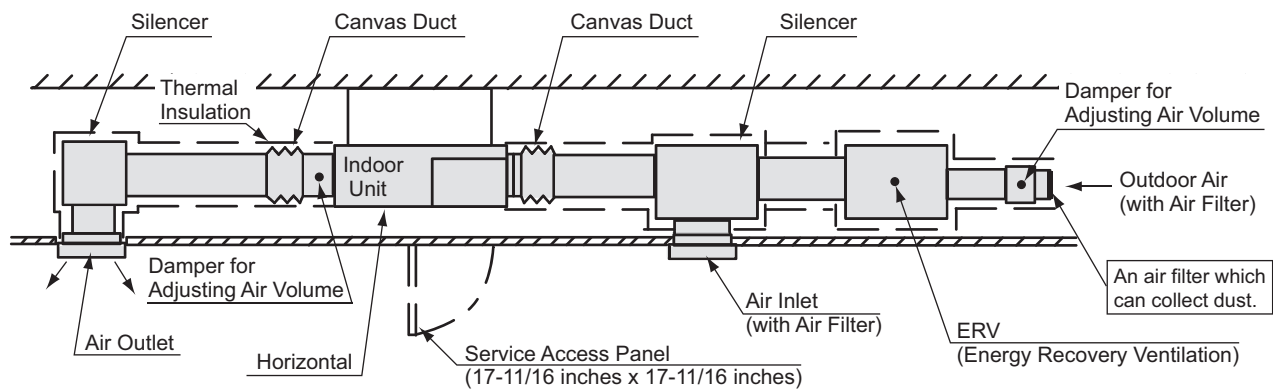

Static Pressure	in.W.G. (Pa)	0.14 - 0.20* - 0.32 (35 - 50* - 80)
-----------------	-----------------	--

*: Before Shipment

Figure 5.7 Duct Connection Example

5.6 Setting the External Pressure

Refer to Section 8.6 "External Static Pressure Setting".

5.7 Installation of Auxiliary Heater (Field-Supplied)

WARNING

- When the auxiliary heater shall be installed and connected, make selection by following local codes, regulations and approved by UL1996, and refer to this manual. Improper installation may result in fire from overheating.
 - When the auxiliary heater shall be installed and connected, do not install in places where heater can come into contact with combustible materials. Otherwise, fire may result.
 - Provide adequate clearance spacing between the auxiliary heater and indoor unit. Refer to the auxiliary heater manual for details. Otherwise, fire may result from over heating the indoor unit.
 - Do not attach the auxiliary heater directly to the indoor unit. Otherwise, fire may result from combustible materials inside the indoor unit.
 - Route the auxiliary heater wiring so that it can not come into contact with any part of the heater. Otherwise, fire may result.
 - When the auxiliary heater shall be installed and connected, duct material should be a sheet metal or non-flammable material. Otherwise, fire may result.
 - Fire may result from debris and dust inside the duct. Indoor unit must be cleaned on a regular basis by following the Service Manual. Also auxiliary heater and duct must be cleaned on a regular basis by following their manuals.
 - Auxiliary heater must be properly selected so that double overheating safety protection devices (Thermal Protector and Thermal Fuse) are built-in. Otherwise, fire may result from over heating of heater when the components such as relays fails.
-

5.7.1 Selection of Auxiliary Heater

Auxiliary heater for connection can only be duct heater type.

When using the auxiliary heater, auxiliary heater capacity must be properly selected. Otherwise, fire may result from abnormal heating of heater. Select the allowable auxiliary heater capacity by following the procedure below.

(1) Confirmation of Actual Airflow Volume

Indoor unit is restricted to the following fan speeds during the auxiliary heater ON and does not correspond to the wired controller setting.

Wired Controller Setting	Fan Speed
Low	High
Medium	High
High	High
High2	High2

Confirm the actual airflow volume of the switched fan speed from the fan performance curves in Section 10.

Be sure to design the duct arrangement so that the actual airflow volume does not exceed the upper limit.

If the actual airflow volume exceeds the upper limit, unwanted noise may occur.

(2) Auxiliary Heater Capacity Selection

Select auxiliary heater capacity with minimum airflow volume requirement smaller than actual airflow volume of indoor unit confirmed in step (1). When the minimum airflow volume requirement for the auxiliary heater is greater than actual airflow volume of indoor unit confirmed in step (1) then failure of indoor unit or fire may result from over heating of heater.

Depending on the temperature setting of the wired controller the maximum air outlet temperature of indoor unit becomes approximately 122°F (50°C) and may exceed the maximum air inlet temperature requirements for the auxiliary heater.

Usage conditions such as minimum airflow volume, temperature range (maximum air inlet temperature) for the auxiliary heater differs by heater manufacturer.

Be sure to follow the usage conditions when selecting the auxiliary heater capacity from the heater manufacturer.

Maximum allowable heater capacity is different depending on indoor unit model.

If cold draft is a problem then select a larger heater capacity within the allowable capacity range.

If cold draft during defrost is a problem then change the optional function L9 to "01" to turn off both heater and fan operation during defrost.


NOTICE

Depending on the Function Setting the heater and fan is turned off for approximately three minutes at defrost recovery.

5.7.2 Auxiliary Heater Connection

When the auxiliary heater shall be used, wire the circuit as shown below.

Example of Electrical Wiring

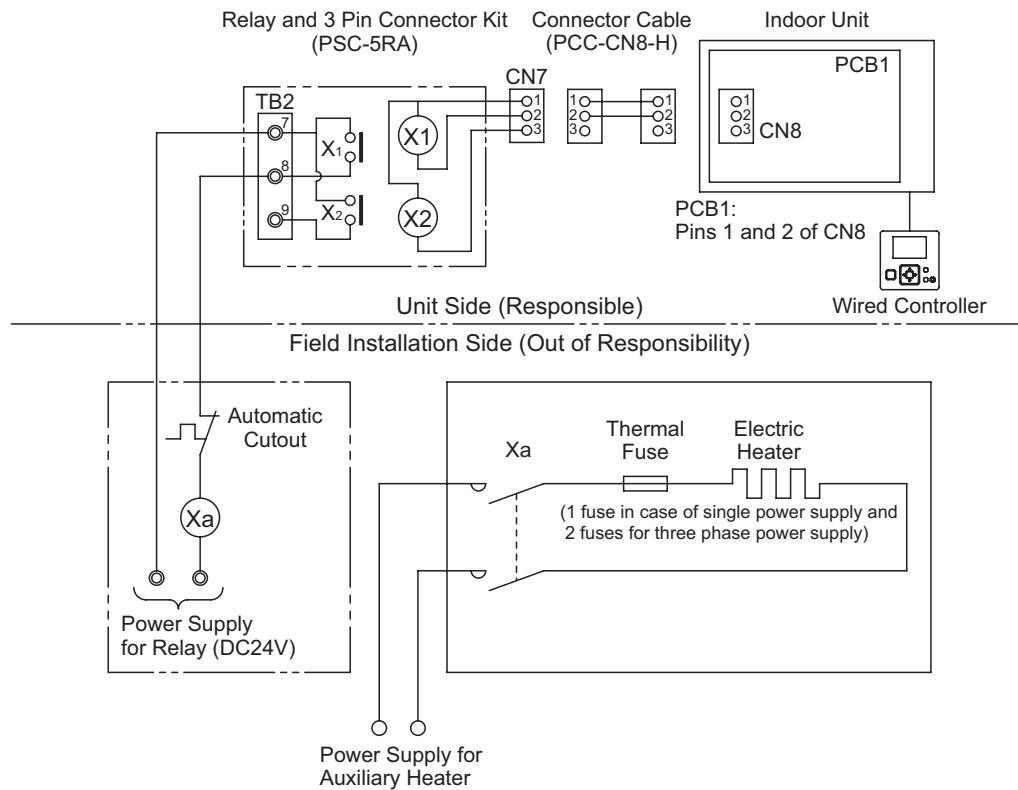

⚠ WARNING

When PSC-5RA (optional part, required) is used for connection between the auxiliary heater and indoor unit DO NOT connect connector (CN7) to indoor unit PCB. **Otherwise, fire may result.** Use connector cable (optional part, required)) between the connector (CN7) of PSC-5RA and indoor unit PCB connector (CN8). Connector (CN3) can be used for input integration functionality. Use another PSC-5RA for output integration functionality.

5.7.3 Setting for Auxiliary Heater

Auxiliary heater setting is disabled by default.

Refer to "Function Selection by Wired Controller" section for details.

6. Refrigerant Piping Work

⚠ DANGER

Use the specified non-flammable refrigerant (HFC R410A) for the outdoor unit refrigerant cycle. Do not charge the unit with anything other than HFC R410A, such as hydrocarbon refrigerants (propane and Isobutene), oxygen, and other flammable gases (acetylene, ammonia, and so forth), or any poisonous gases when installing, maintaining and moving the unit. These substances are volatile and dangerous and can result in fire, explosion, and serious or fatal injuries.

For details on refrigerant piping work, vacuum pump, and refrigerant charge, refer to the "Installation and Maintenance Manual" for the outdoor unit.


6.1 Piping Materials

- (1) Tolerances for refrigerant piping lengths depend on the combination with the outdoor unit. Refer to the "Installation and Maintenance Manual" for the outdoor unit for details.
- (2) Select the piping size from the following table.

Table 6.1 Piping Size

Model	inch (mm)	
	Gas Piping	Liquid Piping
(H,Y,C)IDM006B21S (H,Y,C)IDM008B21S (H,Y,C)IDM012B21S (H,Y,C)IDM015B21S	1/2 (12.7)	1/4 (6.35)
(H,Y,C)IDM018B21S (H,Y,C)IDM024B21S (H,Y,C)IDM030B21S (H,Y,C)IDM036B21S (H,Y,C)IDM048B21S	5/8 (15.88)	3/8 (9.52)


- (3) Prepare the field-supplied copper piping.
- (4) Select clean copper pipes. Make sure there is no dust and moisture inside.
- (5) The refrigerant oil used in combination with refrigerant R410A is susceptible to problems relating to moisture contamination, oxide film, oil, and fat. Exercise special care during the installation so that moisture, particulate contamination, or old refrigerant oil will not enter the refrigerant cycle. Otherwise, impurities may adhere to the expansion valve and it may prevent the proper operation.
- (6) Caution: When cutting piping, do not use conventional tools such as saws and grinding wheel cutting disks produce harmful metallic filings that can damage a refrigerant cycle. Use a pipe cutter to eliminate the chances of metal filings produced by the cutting operation. After the cut is made, blow out each pipe with dry compressed air or nitrogen to remove this residue before making pipe connections.

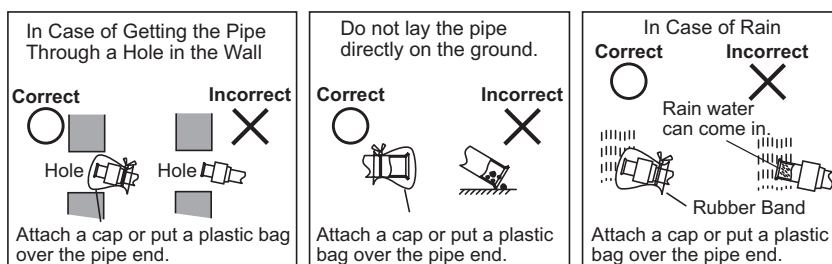

6.2 Piping Connection


(1) Position of piping connection is shown below.

Unit: inch (mm)

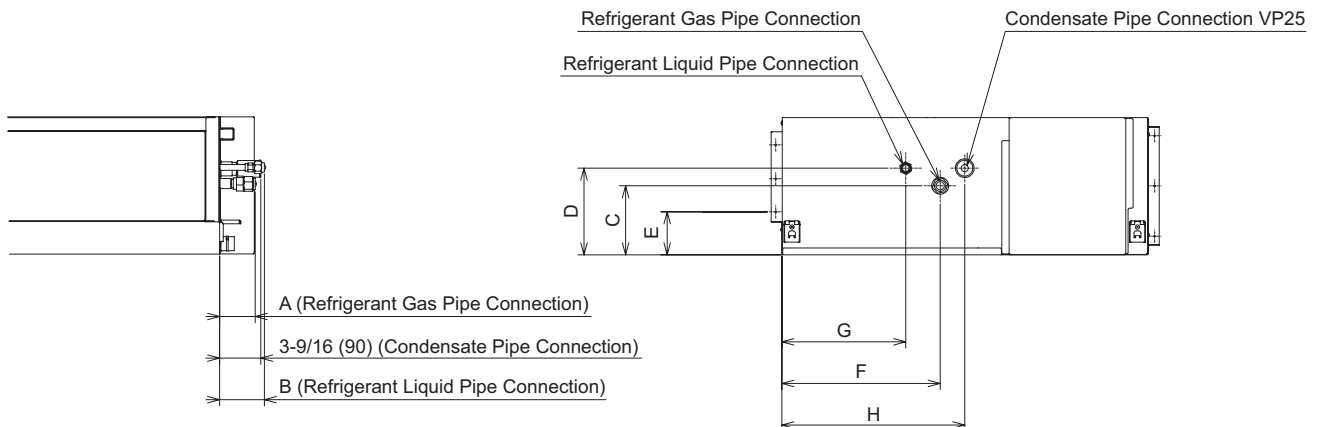

Model	A	B	C	D	E	F	G	H
(H,Y,C)IDM006 - 012B21S	2-3/4 (70)	3-5/8 (92)	7-3/16 (182)	8-3/4 (222)	4-5/8 (118)	12-5/8 (321)	9-11/16 (246)	16-1/16 (408)
(H,Y,C)IDM015B21S	3-1/16 (77)	3-5/8 (92)	7-3/16 (182)	8-3/4 (222)	4-5/8 (118)	12-5/8 (321)	9-11/16 (246)	16-1/16 (408)
(H,Y,C)IDM018B21S	3-1/16 (77)	3-5/8 (92)	7-3/16 (182)	8-3/4 (222)	4-5/8 (118)	12-5/8 (321)	9-11/16 (246)	16-1/16 (408)
(H,Y,C)IDM024, 030B21S	3-1/8 (80)	3-15/16 (100)	5-7/8 (150)	7-1/2 (190)	3-11/16 (94)	13-9/16 (345)	10-5/8 (270)	16-15/16 (431)
(H,Y,C)IDM036, 048B21S	3-1/8 (80)	3-15/16 (100)	5-7/8 (150)	7-1/2 (190)	3-11/16 (94)	13-9/16 (345)	10-5/8 (270)	16-15/16 (431)

(2) Perform the flaring work as shown below.

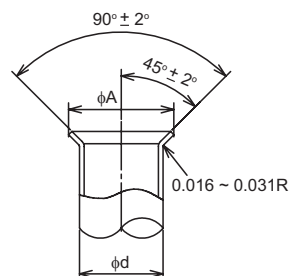

inch (mm)

Diameter (d)	A ⁺⁰ -0.02 (-0.4)
1/4 (6.35)	0.36 (9.1)
3/8 (9.52)	0.52 (13.2)
1/2 (12.7)	0.65 (16.6)
5/8 (15.88)	0.78 (19.7)

(3) Use specific flare nut attached with the unit.

(4) Verify that there are no scratches, burrs stuck to internal surfaces, or surface deformations at the flared opening.



(5) Before tightening the flare nut, apply the (Field-Supplied) refrigerant oil in a thin layer over the flared part. (Do not apply the oil on other areas.) Tighten the flare nut for the liquid pipe to the specified torque with two spanners. Then, tighten the flare nut for the gas piping in the same way. After the tightening work has been completed, check that no refrigerant leakage occurs.

NOTE:

Refrigerant oil is field-supplied.

[Polyvinyl Ether Oil FVC68D (Idemitsu Lubricants America)]

Apply Refrigerant Oil.

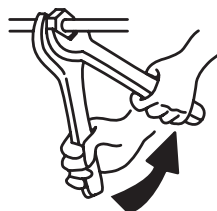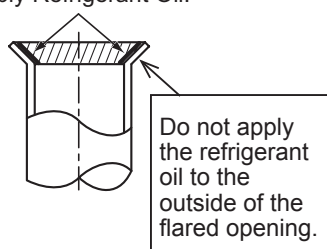


Required Tightening Torque

(JIS B 8607)

Pipe Size	Tightening Torque
1/4 inch (6.35 mm)	10.3 - 13.3 ft·lbs (14 - 18 N·m)
3/8 inch (9.52 mm)	25.1 - 31.0 ft·lbs (34 - 42 N·m)
1/2 inch (12.7 mm)	36.1 - 45.0 ft·lbs (49 - 61 N·m)
5/8 inch (15.88 mm)	50.2 - 60.5 ft·lbs (68 - 82 N·m)

- (6) Wherever buried piping exists on site, make sure there is a service doorway to provide adequate access to inspect piping sockets and elbows, and for interconnecting parts.
- (7) Piping must be reinforced to withstand earthquakes so as not to be damaged by an external force.
- (8) Do not tightly secure refrigerant piping to accommodate expansion and contraction.
- (9) Prevent the pipes from contacting weak portions such as wall, ceiling, etc. (Otherwise, abnormal sound may be heard due to vibration of the piping.)
- (10) Leak test all piping and connections. The procedures should be performed in accordance with the "Installation and Maintenance Manual" for the outdoor unit.
- (11) If temperature and humidity inside the ceiling exceed 80.6°F (27°C)/RH80%, condensation occurs on the surface of the accessory insulation. Wrap additional insulation (approximately 3/16~3/8 inch (5~10mm) thickness) around the accessory insulation of the refrigerant pipe as a preventive measure.
- (12) Insulate each flare connection without gap with accessory insulations to prevent condensation. Then insulate each refrigerant pipe as well.

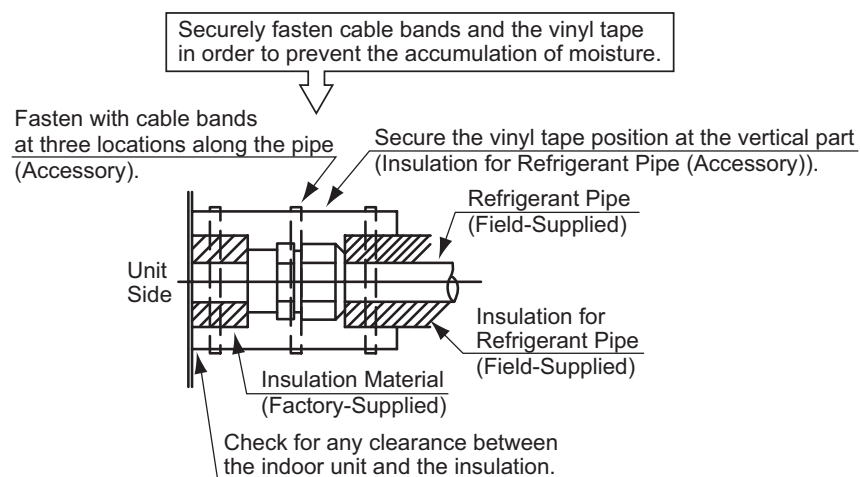

7. Condensate Piping

⚠ WARNING

Do not put the condensate pipe for the indoor unit into the drainage trench where corrosive gases occur. Otherwise, poisonous gases flow into the room, which may cause poisoning.

NOTICE

- Ensure that the condensate pipe discharges water properly. If connected incorrectly, it may cause leaks leading to property damage.
- Do not provide an upward slope or a rising part for the condensate pipe. Otherwise, the condensate water will flow back into the unit and it may cause the water leakage when the unit operation is stopped.
- Do not connect the condensate pipe with a sanitary or sewage pipe or any other drainage pipe.
- When the main condensate pipe is connected with other indoor units, the connected position of each indoor unit must be higher than the main pipe. The pipe size of the main condensate pipe must be large enough according to the unit size and number of units.
- After performing condensate piping work and electrical wiring, ensure to ensure that water flows smoothly as in the following procedures.

Perform condensate piping work and attach the insulations before refrigerant piping work.

- (1) The position of the condensate pipe connection is shown in Figure 7.1.
- (2) Prepare a polyvinyl chloride (PVC) pipe with 1-1/4 inches (32mm) outer diameter.
- (3) Fasten the tube to the condensate hose with the adhesive agent and the field-supplied clamp. The condensate piping must be performed with a downward slope of 1/25 to 1/100.
- (4) Insulate the condensate pipe after connecting the condensate hose.

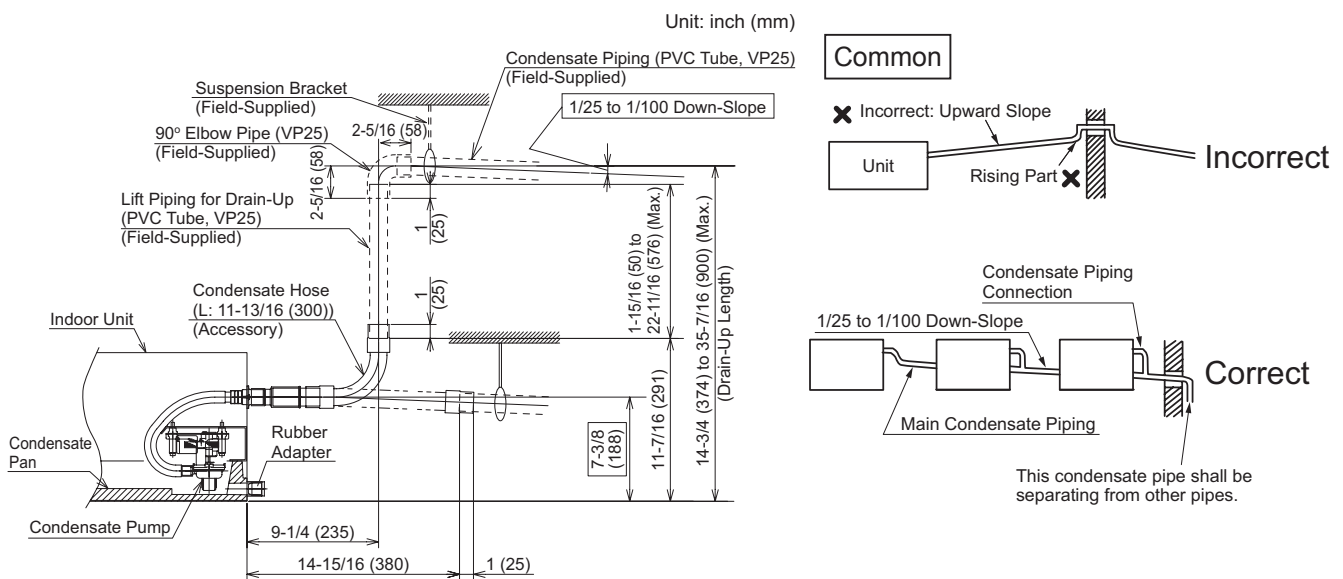


Figure 7.1 Condensate Piping

NOTE:

When the relative humidity of inlet or ambient air exceeds 80%, apply an auxiliary condensate pan (field-supplied) beneath the indoor unit as shown in Figure 7.2.

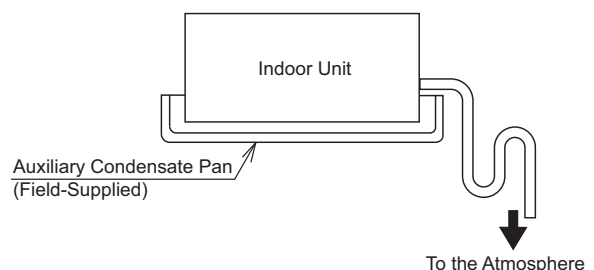


Figure 7.2 Auxiliary Condensate Pan

NOTICE

After all condensate piping work and electrical wiring is complete, verify that water flows smoothly as in the following procedure.

Verification using a Float Switch

- a. Turn ON the power supply.
 - b. Pour in 68 to 84oz (2 to 2.5 liters) of water into the condensate pan.
 - c. Check to ensure that water flows smoothly with no leaks anywhere along the line. If no water is present at the end of the condensate pipe opening, pour another 68oz (2 liters) of water into the condensate pan.
-

8. Electrical Wiring

WARNING

- All electrical work must be done as outlined in this manual and in accordance with this manual. Substandard work can result in fire and damage to the unit.
- Use specified cables between units and choose the cables correctly. If not, an electrical shock or fire may occur.
- Do not open the service cover or access panel for the indoor or outdoor units without turning OFF the main power supply. It can result in an electrical shock.
- Turn OFF the main power switch of the indoor unit and the outdoor unit before attempting any electrical wiring work or a periodical check is performed. If not, it will result in an electric shock or a fire.
- Check to ensure that the indoor fan and the outdoor fan have stopped before attempting any electrical wiring work or for any scheduled electrical work that is being performed.
- Tighten screws according to the following torque.

M3.5: 0.9 ft·lbs (1.2 N·m)

M4: 0.7 to 1.0 ft·lbs (1.0 to 1.3 N·m)

CAUTION

- Secure all cables together with cable bands and seal the connecting hole against moisture and insects.
- Run the electrical wiring through the connecting hole in the side cover when using conduit.
- Secure the wired controller cable using the cable band inside the electrical box.

8.1 General Check

- (1) Make sure that the field-selected electrical components: (main power switches, circuit breakers, wires, conduit connectors, and wire terminals) have been properly labeled in accordance with electrical data as specified in the Engineering Manual. Make sure that the components comply with the National Electrical Code (NEC).
- (2) Check to ensure that the power supply voltage is within $\pm 10\%$ of the rated voltage.
- (3) Check the capacity of the electrical wires.
If the power supply capacity is too low, the system cannot be started due to a voltage drop.
- (4) Verify that the ground wiring is securely connected.

8.2 Electrical Wiring Capacity

8.2.1 Field Minimum Wire Sizes for Power Supply


- This equipment can be installed with a GFCI, which is a recognized measure for added protection to a properly grounded unit. Install appropriate sized breakers / fuses / overcurrent protection switches and wiring in accordance to local, state and NEC codes and requirements. The equipment installer is responsible for understanding and abiding by applicable codes and requirements. Failure to use a GFCI can result in electrical shock or fire.
- Do not operate the system until all the check points have been cleared.
 - (A) Verify that electrical resistance is more than one megaohm by measuring the resistance between ground and the terminals of the various electrical components. If less than one megaohm, do not activate the system until the electrical current drain is found and repaired.
 - (B) Check to ensure that the stop valves for the outdoor unit are fully opened, and then start the system.
 - (C) Check to see that the main power has been switched ON for longer than 12 hours prior activating the system. Power to the crankcase heater needs this time interval to warm the compressor oil up to operating temperature.
- Do not touch any of the parts by hand at the discharge gas side, since the compressor chamber and the pipes at the discharge side are heated higher than 194°F (90°C).

8.2.2 Details of Electrical Wiring Connection

The electrical wiring capacity of the outdoor unit should be referred according to the "Installation and Maintenance Manual" for the outdoor unit. Adjusting the DIP switches may be required depending on the arrangement with the outdoor unit.

Select wiring capacity according to the table 8.1. Install a GFCI and main switch as shown in each of the system diagrams below.

Heat Pump System

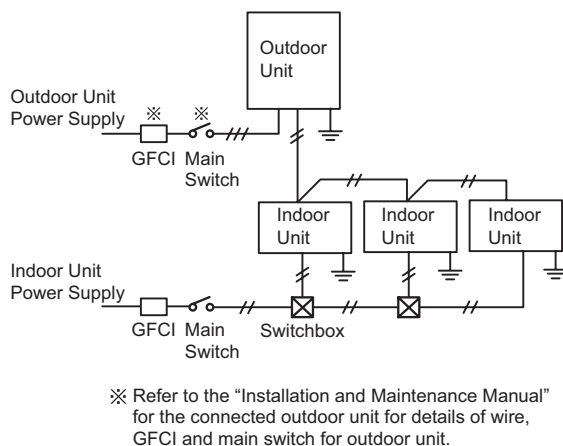

Heat Recovery System

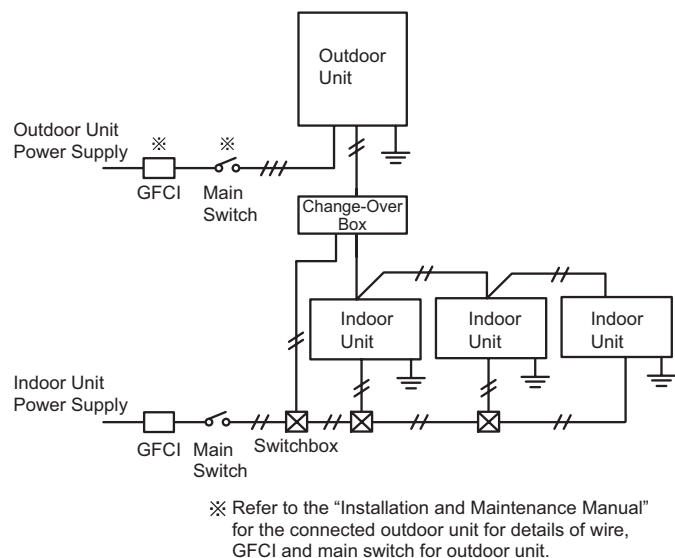


Table 8.1 Recommended Wiring Capacity and Size

Model	Power Supply	Minimum Wire Thickness [AWG (mm ²)]			GFCI		Main Switch		MCA (Minimum Circuit Ampacity) [A]
		Power Supply Wiring Size (Main)	Ground Wiring Size	Communication Cable Size	Nominal Current [A]	Nominal Sensitive Current [mA]	Nominal Current [A]	Fuse [A]	
(H,Y,C)IDM006B21S	1~, 208/230V 60Hz	18 (0.82)	18 (0.82)	18 (0.82)	15	30	15	15	0.60
(H,Y,C)IDM008B21S									0.60
(H,Y,C)IDM012B21S									0.60
(H,Y,C)IDM015B21S									0.60
(H,Y,C)IDM018B21S									0.60
(H,Y,C)IDM024B21S									1.01
(H,Y,C)IDM030B21S									1.01
(H,Y,C)IDM036B21S									1.01
(H,Y,C)IDM048B21S									1.01

NOTES:

- 1) Follow local codes and regulations when selecting field wiring.
- 2) Select a GFCI with an activation speed of (0.1 second or less).
- 3) Total operating current is less than 12A.

NOTICE



- Check for the recommended size GFCI shown in the table 8.1.
- Between indoor and outdoor units, use dual-conductor, AWG18 (0.82mm²) stranded copper cable for communication cable. Do not use any cable with more than two conductors. Twisted pair or shielded cable can be used in environments with excessive electrical noise to reduce the possibility of communication errors between system components. Total cable length should not exceed 3281 ft (1000m).
- Select the wiring size, GFCI in accordance with the regulations for each region, the "Installation and Maintenance Manual", and the dedicated electrical circuit that must be used.
- Outside of the indoor unit, installation of the power supply wiring, communication cable, and wired controller cable should be spaced as far apart as possible.

8.3 Position of Electrical Wiring Connection

- The electrical wiring connection for the indoor unit is shown in Section 8.2.2.
- The connection at the terminal block for the indoor unit is shown below. Check the outdoor unit for the combination before the wiring work begins. Screw fasteners at the terminal block should be tightened according to recommended torque specifications as shown in the table below.


Torque Specifications for Terminals

Screw Size		Torque Specification
TB1	M4	0.7 - 1.0 ft·lbs (1.0 - 1.3 N·m)
TB2	M3.5	0.9 ft·lbs (1.2 N·m)

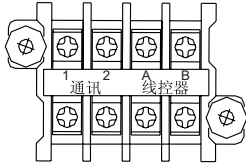Terminal Block for Power Supply Wiring TB1	Terminal Block for Communication Cable TB2
	

NOTICE


- Do not connect the main power supply wiring to the communication line (Terminals A, B, 1 and 2 of TB2). If these are connected, the printed circuit board (PCB) will be destroyed.
- Note the following for wire connections at TB1 and TB2:
 - (A) Attach a piece of insulation tape or sleeve at each terminal.
 - (B) Maintain a safe distance between the electrical box and the terminals to prevent a short circuit.
 - (C) Maintain a safe distance between the terminals.

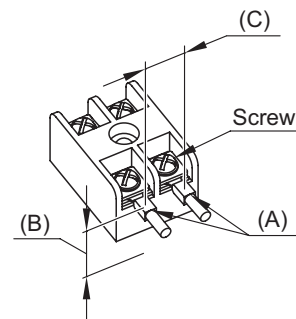

- (1) Connect the cable for the optional controller or the optional extension cable to the terminals inside the electrical box through the connecting hole of the cabinet.
- (2) Connect the power supply and the ground wiring to the terminals in the electrical box.
- (3) Connect the cables between the indoor unit and the outdoor unit to the terminals inside the electrical box.
- (4) Connect cables to their corresponding terminal number and the similarly marked band.
- (5) Connect the communication cable between those indoor units connected to the same outdoor unit.
- (6) Do not connect the main power supply wiring to the communication line (Terminals A, B, 1 and 2 of TB2). If connected, the printed circuit board (PCB) will be destroyed.
- (7) Tightly clamp the power supply wiring and communication cables using the cable band inside the electrical box.


NOTE:

When the standard wire is used for the field-wiring connection, the M4 crimping terminal should be used. When the single wire is used, fashion it into the shape as shown at right and connect it in order to tighten the washer uniformly. The screws at the terminal block should be tightened according to the torque specification as shown in the table above.

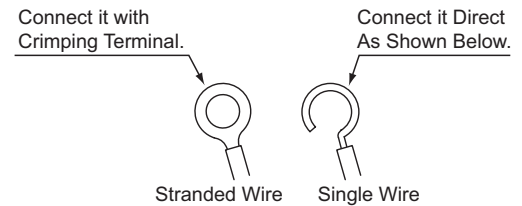

- (8) All electrical work should be performed in strict accordance with electrical schematics in the "Installation and Maintenance Manual".
- (9) If Power Supply Voltage (208V/230V) is introduced into the Communication Line:
If 208V/230V are applied to the communication line at (Terminals 1 and 2 of TB2) by mistake, the fuse on the PCB for the communication line will blow. In this case, perform the recovery work as shown in the diagrams below.
 - (a) Reconnect the wirings correctly.
 - (b) Set the No.1 pin at DSW7 (on the PCB) to ON.


Upon PCB recovery after the fuse has been replaced, if 208V / 230V is reintroduced into the communication line, the PCB will be seriously damaged and will not recover.

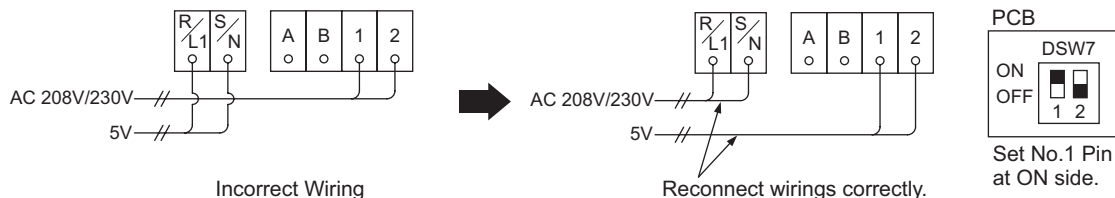


(10) Wired Controller Connection

• VRF Systems


(a) Wired Controllers to each Unit for Individual Operation Setting

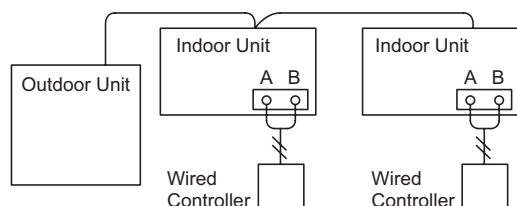

(b) Single Wired Controller for Individual Operation Setting

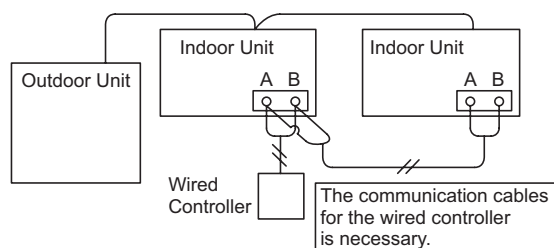

(c) Wired Controller Connections between different Refrigerant Cycles

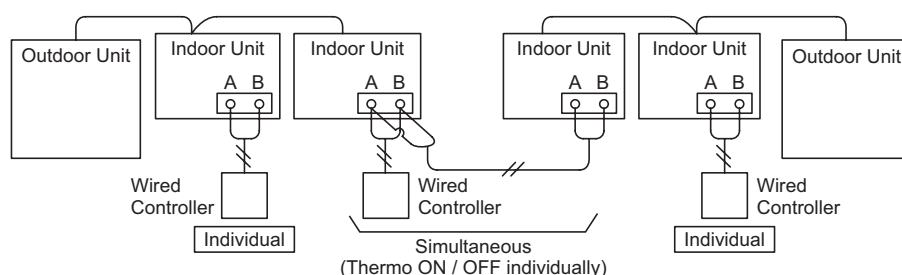


NOTICE

1. The DIP switch settings for the outdoor unit should be performed in accordance with the "Installation and Maintenance Manual" for the outdoor unit.
2. Be aware that communication cable for the wired controller is required in these instances:
 - a. The following functions are set to the sub unit which is not installed with the wired controller.
 - Remote ON/OFF function settings, (No.1, 2, and 3), (External Input / Output Function)
 - Power supply ON/OFF functions, (No.1 and 2), (Function Selection)
 - Prohibiting the wired controller after manual stoppage (External Input / Output Function)
 - Group setting by the centralized controller
 - b. The combination of twin, triple, or quad is controlled by single wired controller.
 - c. The address for the indoor unit is changed from the wired controller.




Caution for Electrical Wiring

- Do not connect the power supply wiring and the communication cable into one terminal.
- The manual switchbox is required when communication cable is required.

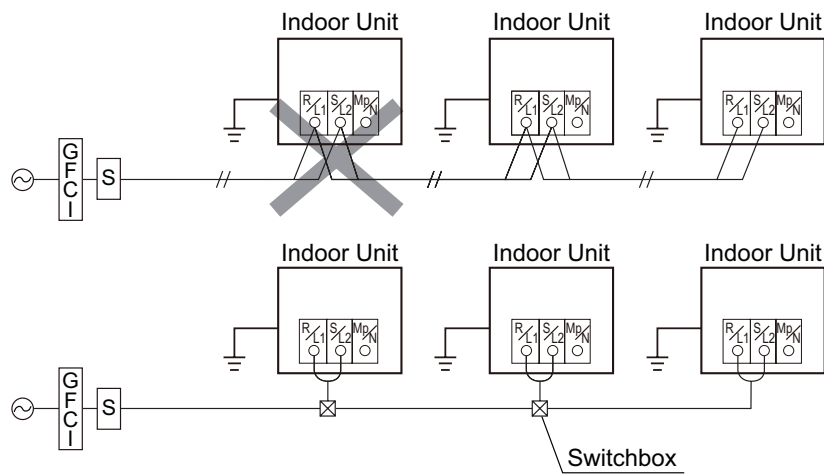


8.4 Wiring Connection

- (1) Remove the connecting hole cover of the electrical box and install the rubber bushing (Accessory) to the connecting hole for communication cable.
- (2) Pass the communication cable and the wired controller cable through the connecting hole for communication cable.
Connect the communication cable to the terminals 1, 2 of TB2 inside the electrical box.
Connect the wired controller cable to the terminals A, B of TB2 inside the electrical box.
- (3) Pass the power supply wiring and the ground wiring through the connecting hole for power supply wiring.
Connect the power supply wiring to the terminals L1, L2 of TB1 inside the electrical box.
Connect the ground wiring to the ground terminal inside the electrical box.
(When connecting the power supply wiring and the ground wiring outside of the unit, run through the conduit tube.)
- (4) Tightly clamp the power supply wiring, the ground wiring, the wired controller cable and the communication cable utilizing the cable clamp.

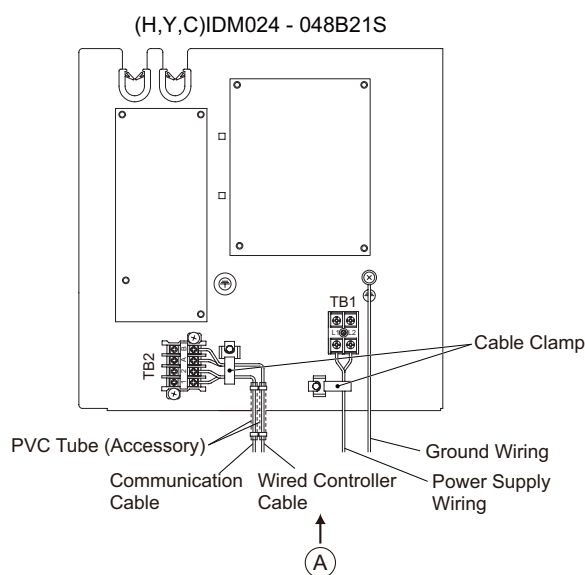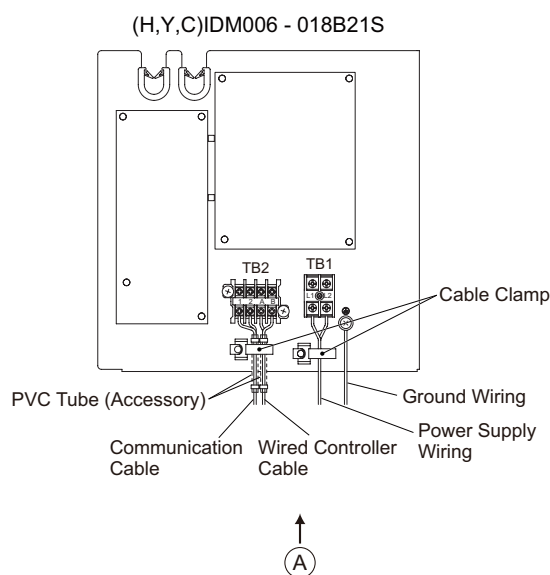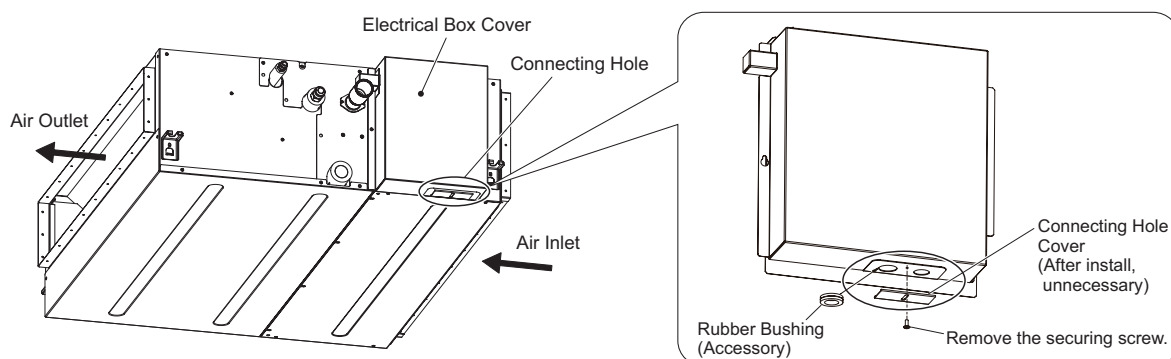


NOTE

- Insert the communication cables and wired controller cable into the PVC tube "VW-1 600V" (Accessory) to separate them from the power supply wirings in the indoor unit.
- Secure the both ends of the PVC tube by cable band (Accessory).
- If shielded cable is used, terminate at the ground terminal.

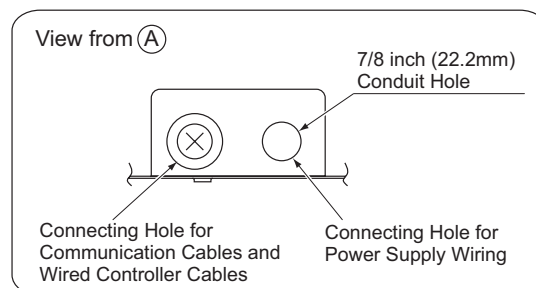

8.5 DIP Switch Settings

- (1) Turn OFF the power supply to both indoor and outdoor units before adjusting DIP switch settings. Otherwise, the setting will be invalidated and not take effect.
- (2) Positions of DIP switches are shown below.

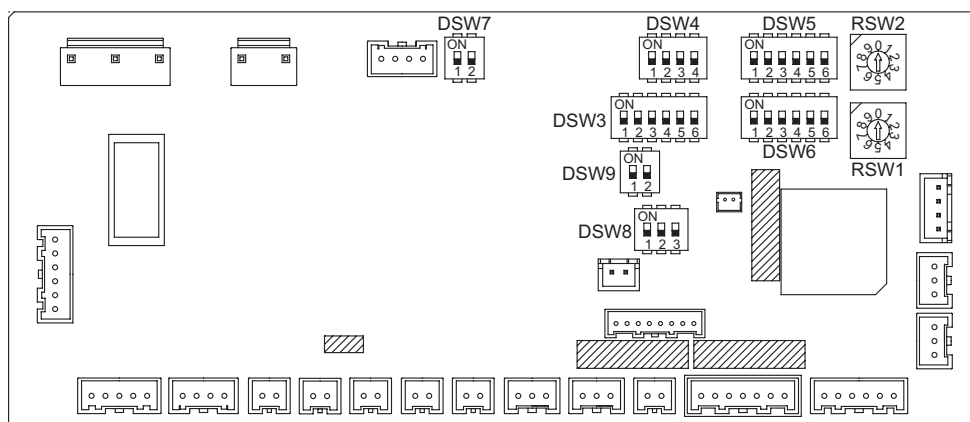

- (3) Unit No. Setting (RSW1 and DSW6)

Setting is not required.

Indoor unit numbers are set by the auto-address function. If an indoor unit number setting is required, set the unit number of all indoor units respectively and sequentially by following setting position. It is recommended that you assign a number to each indoor unit from "1". A maximum of 64 indoor units per refrigerant cycle can be connected to an H-LINK II System. Though the available numbers range from zero to 63, the applicable number for the 64th indoor unit in theory supplants the number "zero". For the centralized control, this setting is required.

Unit No. Setting

DSW6 (Tens Digit)	RSW1 (Units Digit)	Ex.) Set at No.16 Unit
<p>Before shipment, DSW6 and RSW1 are set at "0".</p> <p>For the units supporting H-LINK II, the unit No. can be set for Max. 64 indoor units (No.0-63).</p>		
		<p>Set No.1 Pin at ON side</p> <p>Set at "6"</p>

- (4) Capacity Code Setting (DSW3)

No setting is required, due to setting before shipment. This switch is utilized for setting the capacity code which corresponds to the capacity of the indoor unit.

Indoor Unit Capacity (MBH)	06	08	12	15	18
Setting Position					
Indoor Unit Capacity (MBH)	24	30	36	48	
Setting Position					





- (5) Unit Model Code Setting (DSW4)

No setting is required. It is for setting the model code of the indoor unit.




- (6) Refrigerant Cycle No. Setting (RSW2 and DSW5)
This setting is required. The unit arrives with all settings in the OFF position.

Refrigerant Cycle No. Setting


DSW5 (Tens Digit)	RSW2 (Units Digit)	Ex.) Set at No.5 Cycle
		
Before shipment, DSW5 and RSW2 are set at "0". For the units supporting H-LINK II, the ref. cycle No. can be set for Max. 64 cycles. (No. 0~63)		Set All Pins OFF  Set at "5"

- (7) Fuse Recovery (DSW7)

* Factory Settings




* In the case of applying high voltage to terminals 1 and 2 of TB2, the 0.5A fuse on the PCB is cut. In such a case, first reconnect the wirings correctly to TB2, and then set the number one pin to ON.

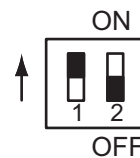

- (8) Function Setting (DSW8)

No setting is required, due to setting before shipment.

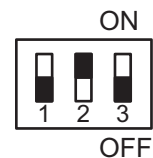

- (9) Optional Function Setting (DSW9)

No setting is required. Setting positions before shipment are all OFF.



NOTES:

- The "■" mark indicates setting for DIP switches. The two illustrations immediately above show settings in the OFF position.
- When the unit number and the refrigerant cycle are set, record the unit number and refrigerant cycle to facilitate service and maintenance thereafter.

NOTICE

Turn OFF all power to the indoor and outdoor units prior to adjusting DIP switch settings. Otherwise, the setting will be invalidated and not take effect.

8.6 External Static Pressure Setting

The factory setting of external static pressure is set to Standard. The setting can be changed to High Pressure Setting or Low Pressure Setting.






Follow the procedure in "Function Selection by Wired Controller" section for changing the setting for the external static pressure.

8.7 Function Selection by Wired Controller

Each function can be selected with the wired controller.

Refer to the "Installation and Maintenance Manual" for the wired controller and the "Engineering Manual" for details.

- Set external static pressure using wired controller.

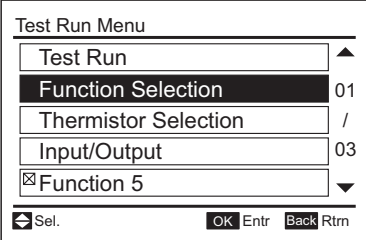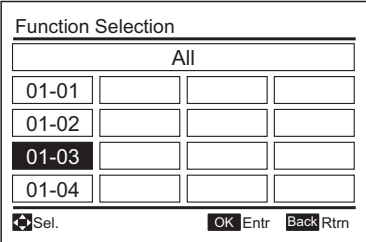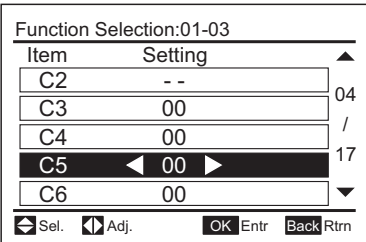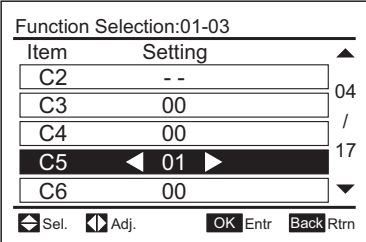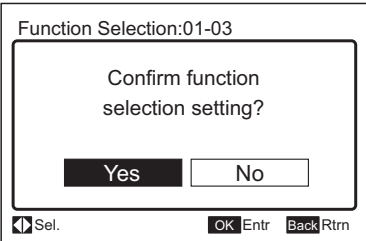(1) Press and hold "Menu" and "Back/Help" simultaneously for at least 3 seconds during the normal mode (when unit is not operating). The test run menu is displayed.	
(2) Select "Function Selection" from the test run menu and press "OK".	
(3) Select the indoor unit by pressing " $\Delta \nabla \triangleleft \triangleright$ " and press "OK". (This screen is NOT displayed when the number of indoor units connected to the controller is 1 (one). In this case, (4) is displayed.) Press "All" to select all the indoor units connected to the wired controller.	
(4) Press " $\Delta \nabla$ " and select the item to change.	
(5) Press " $\triangleleft \triangleright$ " and change the setting.	
(6) Press "OK" to display the confirmation screen.	<p>(Figure for Function Selection)</p>
(7) Select "Yes" and press "OK". The test run menu is displayed after the setting is confirmed. If "No" is pressed, the screen will return to (4).	
(8) Press "Back/Help" on the test run menu to return to the normal mode.	


To set other units, press "Back/Help" at (4), (5) so that the screen will return to (3).

(If the number of indoor units connected to the controller is 1 (one), the screen will return to (1).)

Optional Function		Function Selection Item	Unit	Setting Condition (<u>Underlined</u> Part is Factory Setting)												
				00	01	02	03	04	05	06	07	08	09	10		
External Static Pressure Setting		C5	in.W.G (Pa)	<u>0.2</u> (50)	0.32 (80)	0.14 (35)										
Automatic COOL/HEAT Operation		b8	-	<u>Not Available</u>	Available											
		Dual Setpoint		r1	-	<u>Not Available</u>	Available									
		(A)	Cooling/Heating Changeover Temperature	r2	°F (°C)	<u>2</u> (1.0)	3 (1.5)	3* (2.0)	4 (2.5)	5 (3.0)	1 (0.5)					
Setback Temperature Compensation (Setback is initiated when the card key is removed.)		r3	°F (°C)	<u>4</u> (2.5)	5 (3.0)	6 (3.5)	7 (4.0)	8 (4.5)	9 (5.0)	10 (5.5)	1 (0.5)	2 (1.0)	3 (1.5)	3* (2.0)		
Auxiliary Heater Setting		q1	-	<u>Not Available</u>	Available											
		(B)	Auxiliary Heater ON Compensation	q2	°F (°C)	<u>-3</u> (-1.5)	-3* (-2.0)	-4 (-2.5)	-5 (-3.0)	-6 (-3.5)	-7 (-4.0)	-8 (-4.5)	-9 (-5.0)	-1 (-0.5)	-2 (-1.0)	
			Auxiliary Heater OFF Compensation	q3	°F (°C)	<u>0</u> (0.0)	1 (0.5)									
		(C)	Ambient Temperature Restriction Setpoint ¹	q4	°F (°C)	<u>-4</u> (-20.0)	2 (-17.0)	8 (-13.0)	14 (-10.0)	20 (-7.0)	26 (-3.0)	32 (0.0)	-13 (-25.0)	-8 (-22.0)		
			Ambient Temperature Restriction Setpoint Compensation ¹	q5	°F (°C)	<u>4</u> (2.5)	5 (3.0)	6 (3.5)	1 (0.5)	2 (1.0)	3 (1.5)	3* (2.0)				
			Auxiliary Heater OFF at Defrosting Operation	L9	-	<u>Not Available</u>	Available									

* Not displayed when fahrenheit (°F) is selected to display.

1. Be sure to use only the "00" setting condition when combining this function with a water source unit.

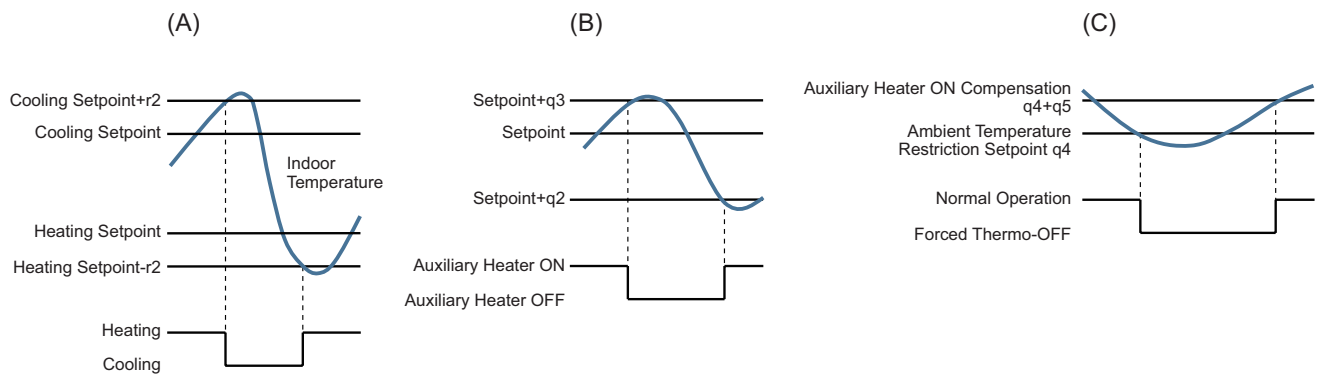

8.8 Setback Operation

- (1) Press and hold "Menu" and "Back/Help" on the wired controller simultaneously for at least three seconds during the normal mode (unit stoppage).
The Test Run menu will be displayed.


- (2) Select "Input/Output" from the Test Run menu and press "OK".

Test Run Menu	
Test Run	▲
Function Selection	01
Thermistor Selection	/
Input/Output	03
<input checked="" type="checkbox"/> Function 5	▼
◀ Sel. OK Entr Back Rtn	

- (3) Select either "Input 1" or "Input 2" and change the setting to "09".

Input/Output:01-03		
Item	Setting	Connector
Input 1	◀ 00 ▶	CN3 1-2
Input 2	00	CN3 2-3
Output1	00	CN7 1-2
Output2	00	CN7 1-3
Output3	00	CN8 1-2
◀ Sel. ▶ Adj. OK Entr Back Rtn		

- (4) Build a circuit such as shown below.

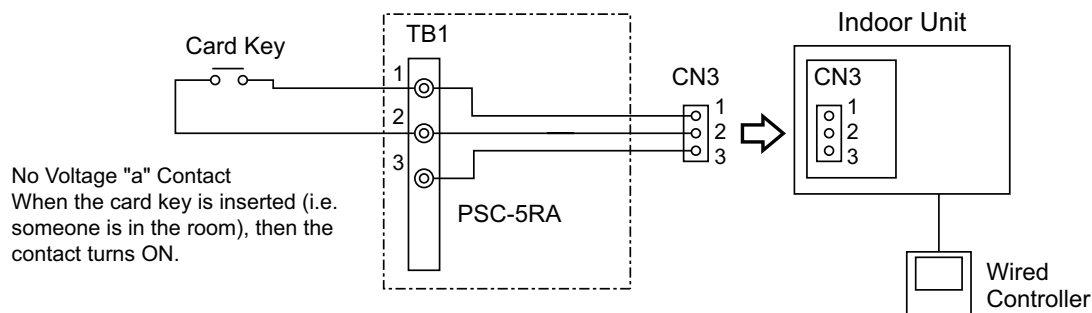

- (5) Temperature compensation for the setback function can be selected on the wired controller.
Refer to "Function Selection by Wired Controller" section for details.

9. Test Run

9.1 Before Test Run

Verify that there are no problems with the installation, and do not perform Test Run until all the following conditions have been resolved.

Refer to the "Installation and Maintenance Manual" for the outdoor unit for details on Test Run operations from the outdoor unit.

Verify that refrigerant piping and the communication cable are connected to the same refrigerant cycle system. If not, it will cause an abnormal operation and damage to instrumentation.

- (1) Verify that electrical resistance is more than one megaohm, by measuring the resistance between ground and the terminal the terminus for electrical components. If the electrical resistance is less than one megaohm, do NOT operate the system until the electrical current outflow to ground is detected and repaired. Do not introduce any high voltage to the terminals of the communication cables (TB2 [A, B, 1 and 2]).
- (2) Verify that each wire is connected correctly at the correct phase for the power supply. If it is incorrectly connected, the unit will not operate and the wired controller will display the alarm code "05". In this case, check the phase for the primary power supply according to the "Attention" label affixed to the back side of the service cover. Then, with the power supply turned OFF at the power supply, remake the necessary connections.
- (3) Check to ensure that the main power supply has been turned ON for more than 12 hours, to warm up the compressor oil by the crankcase heater.
- (4) Verify that all DIP Switch settings are correct. Refer to Section 8.5 "DIP Switch Settings".

9.2 Test Run

After all installation work is completed, **Test Run** should be performed.

- (1) Check to ensure that stop valves (gas and liquid) for the outdoor unit are fully opened.
- (2) Whenever indoor units are connected to the VRF system, perform the **Test Run** for the indoor units one by one sequentially and then check the refrigerant piping system and the electrical wiring system for conformity. (If these multiple indoor units are operated simultaneously, system conformity cannot be verified.)
- (3) Perform the **Test Run** in accordance with the following procedure. Ensure that the Test Run is carried out without any problem. The following procedure shows a case where a wired controller is utilized. If other controllers are activated instead, refer to the "Installation and Maintenance Manual" for those other controllers.

NOTE:


The outdoor unit may not be operated depending on the indoor and outdoor temperature conditions. Refer to the "Installation and Maintenance Manual" for outdoor units for details.

- (a) Press and hold "Menu" and "Back/Help" simultaneously for at least 3 seconds.

The **Test Run** menu will be displayed.

- The **Test Run** menu will be displayed.

Test Run Screen

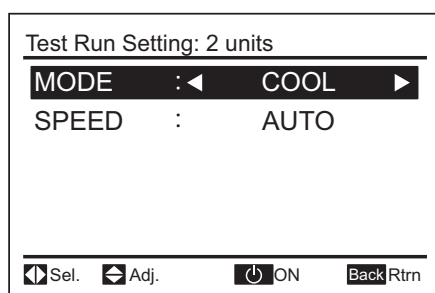

NOTE

When the "00 unit" is displayed, the auto-address function may be working.

Cancel "**Test Run**" mode and reset.

- The total number of connected indoor units is indicated on the LCD (Liquid Crystal Display). In the case of a twin combination (set of two indoor units), the total number of the connected indoor units is displayed as “**2 units**”, and where there is a triple combination (set of three indoor units), the total number of the connected indoor units is displayed as “**3 units**”.
 - If the number indicated is not equal to the actual number of connected indoor units, the auto-address function is not performing correctly due to incorrect wiring or electrical interference. Turn OFF the power supply, and resolve the wiring issue after verifying the following items; (Do not repeat turning ON and OFF within a 10 second timespan.)
 - The power supply to the indoor unit is not turned ON or there is an incorrect wiring issue.
 - Incorrect connection of the interconnecting cable between indoor units or a poorly connected controller cable.
 - Incorrect setting of the rotary switch and DIP switch for the indoor unit printed circuit board (PCB). (The setting is overlapped.)
 - Press “ On/Off” to start the Test Run.
 - Press “ ” and set each item.
- (b) Press “ On/Off”.
- The RUN indicator turns ON and the operation starts. At this time, a two-hour OFF timer will be set automatically.
- (c) Though temperature recordings by the thermistors are invalid during the Test Run phase, the protection devices are valid.
- (d) For VRF System
- According to the label; “Checking Method by 7-Segment Display” affixed to the inside of the front cover of the outdoor unit, check temperature, pressure, and operation frequency, and interconnected indoor unit numbers by 7-Segment displays.
- (e) To complete Test Run, press “ On/Off” again or wait for the set Test Run time to pass.
- When changing the Test Run time, press “” or “” to select “**TEST TIME**”. Then, set the test run time (30 to 600 minutes) by pressing “” or “”.

Test Run: 2 units

MODE : COOL

SPEED : AUTO

Test Time : 120min

Inverter : 60Hz

Sel. Adj. OFF

- The RUN indicator on the wired controller for the indoor unit will flash orange (0.5 second ON/ 0.5 second OFF), indicative of a fault or error having been generated with activation of protection devices during the Test Run phase. Alarm code, unit model code, and the number of interconnected indoor units will be displayed on the LCD as shown below. If the RUN indicator on the wired controller flashes for two seconds ON and two seconds OFF, the source of the problem could be a failure in the communication cable between the indoor unit and the wired controller (a loose or severed connection). In this case, verify Section 9.3 “Alarm Code” and perform the appropriate troubleshooting measures. Consult with an authorized service engineer if the problem cannot be resolved at your end.

01-02


Alarm Code: 22 (Chek)

MODEL : F .02 AlarmRst

IDU : ***** Address

ODU : *****

Sel. OP MODE OK Entr

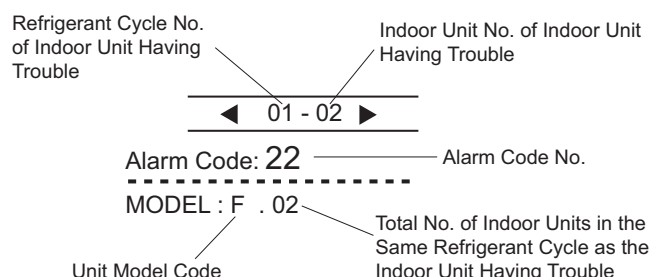

Unit Model Code

The relationship between the unit model code and the unit model is shown in the table below.

Indication	Unit Model
F	VRF System
E	Except Above Models

9.3 Alarm Code

Alarm (Troubleshooting) Code Table

Code No.	Category	Nature of Problem	Likely Cause
01	Indoor Unit	Activation of a protection device (Float switch)	Activation of the float switch; (High water level present in the condensate pan.) A problem exists in the piping.
02	Outdoor Unit	Activation of protection device; (Except for Alarm Code: 41, 42)	High Pressure Cut; (R410A: 601 psi (4.15MPa)), fan motor lockup during the outdoor unit cooling operation.
03	Communication	Communication failure between indoor and outdoor units	Incorrect wiring, loose terminals, disconnected wiring or a blown fuse.
04-09	Problem with the outdoor unit; (Refer to the "Installation and Maintenance Manual" for outdoor units.)		
11	Sensor on Indoor Unit	Inlet Air Thermistor failure	Loosely connected, disconnected, or a severed connection.
12		Outlet Air Thermistor failure	
13		Freeze Protection Thermistor failure	
14		Gas Piping Thermistor failure	
19	Fan Motor	Problem with Indoor Fan	Fan motor lockup, fan motor protection control device for indoor unit activated.
20-29	Problem with the outdoor unit; (Refer to the "Installation and Maintenance Manual" for outdoor units.)		
31	System	Incorrect capacity setting for indoor and outdoor units.	Incorrect capacity code setting for combination, excessive or insufficient total indoor unit capacity code.
32		Incorrect setting of other indoor unit number	Problem with a different Indoor Unit in the same refrigerant cycle; (Failure at the power supply, defective PCB).
35		Incorrect setting of indoor	Indoor unit number duplicated in same refrigerant group.
36		Incorrect indoor unit combination	Indoor unit is designed for other refrigerant; (R22 or R407C).
38-59	Problem with the outdoor unit; (Refer to the "Installation and Maintenance Manual" for the outdoor unit.)		
b0	System	Incorrect setting for unit capacity	Incorrect setting for unit capacity
b1		Incorrect setting of unit and refrigerant cycle number	Unit number or refrigerant cycle ≥ 64
b5		Incorrect setting of indoor unit number for H-LINK type	Interconnected indoor units are not supporting H-LINK II ≥ 17
EE	Compressor	Compressor protection alarm	This alarm code displays when the alarms such as damage to the compressor occur three times within a six hour period.

- When the RUN indicator flashes every four seconds, there is a communication failure between the indoor unit and the wired controller (loose connector, disconnected or incorrect wiring, or a severed connection).
- The indication of the alarm code "EE" means serious abnormality to burn out the compressor.

Refer to the "Installation and Maintenance Manual" for the indoor/outdoor unit connections.

NOTICE

Do NOT operate the air conditioning just to run checks on electrical wiring until preparations for the Test Run phase is completed.

All the installation work of the air conditioning is completed.
Handover this information to the building owner and request to maintain all the equipment manuals and warranty.

Refrigerant Leak Check

Conduct a periodic refrigerant leak check to maintain product performance and secure storage of refrigerant (Fluorocarbons). After completing installation, record the following results into this manual:


1. Results of a leak test all piping and connections
2. Total refrigerant charge volume dispensed (including a trim charge added following the installation)
3. Result of the refrigerant leak check

Then hand it over to users and ask them to retain for reference.


All periodic service and maintenance procedures must be conducted only by authorized and trained personnel.

10. Fan Performance Curves


(H,Y,C)IDM006B21S

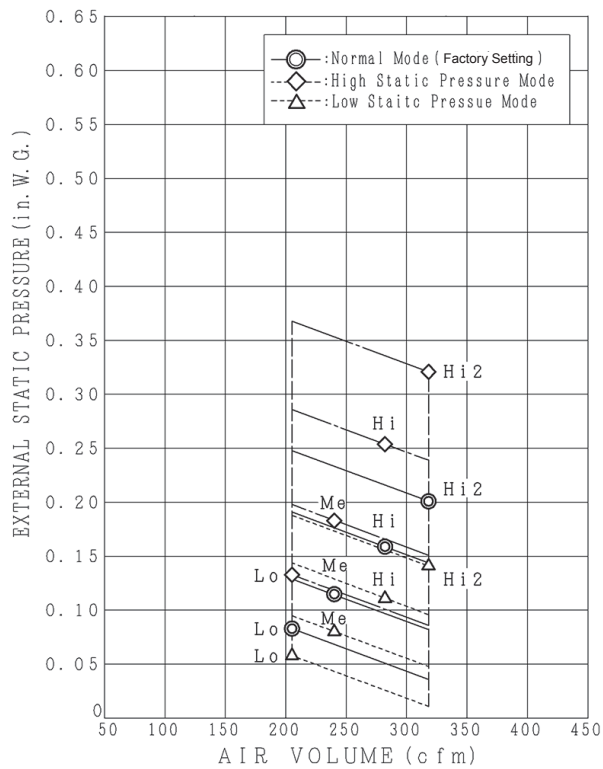


(H,Y,C)IDM008B21S

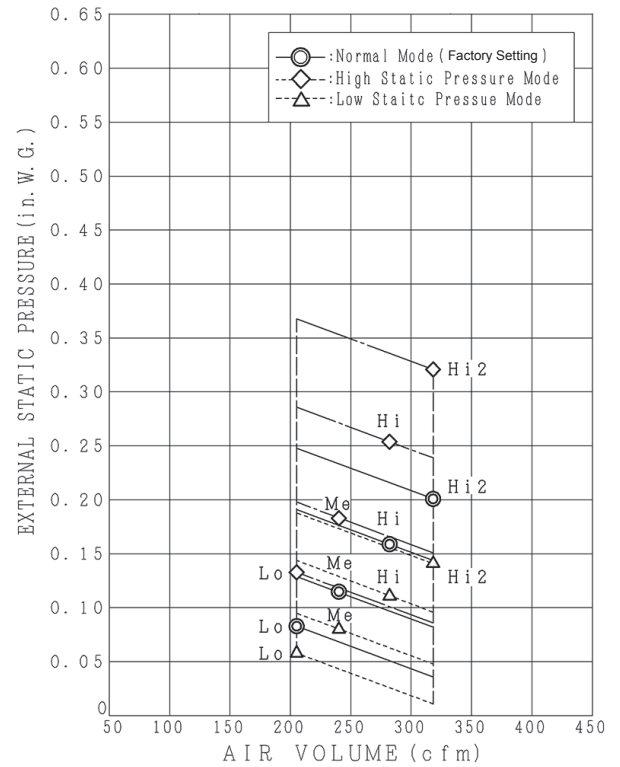

(H,Y,C)IDM012B21S

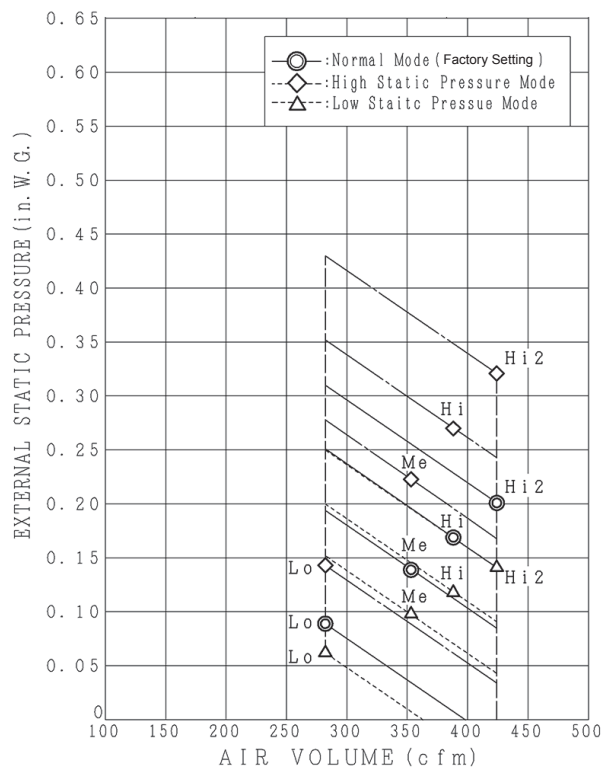


(H,Y,C)IDM015B21S

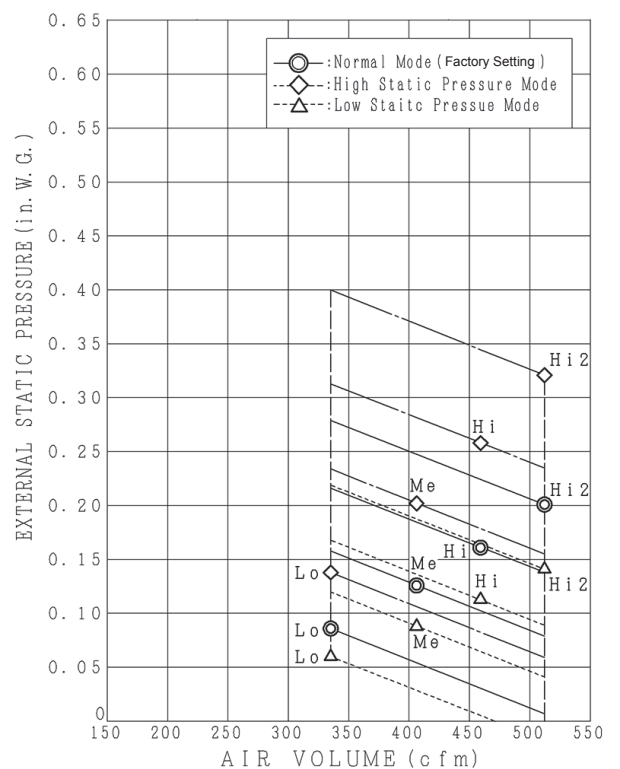


NOTE:

The settings of Normal, High Static Pressure and Low Static Pressure Mode can be changed using the Wired Controller.


(H,Y,C)IDM018B21S

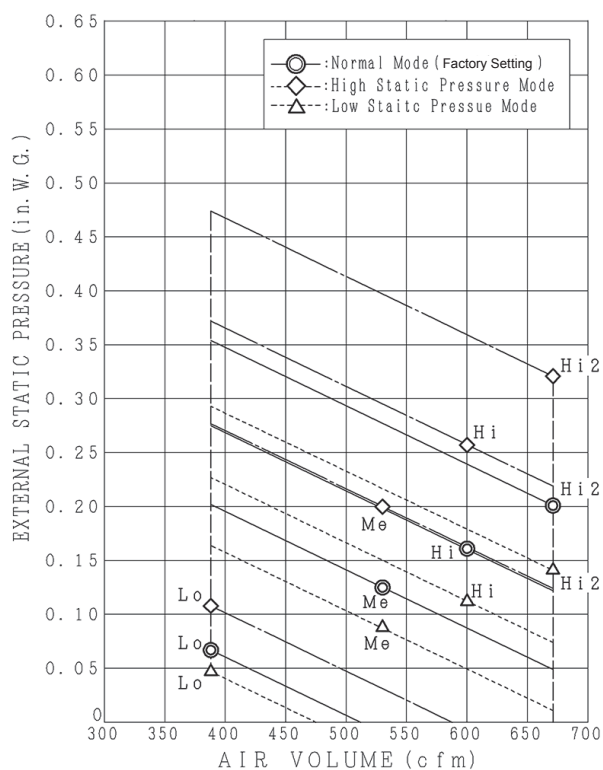


(H,Y,C)IDM024B21S

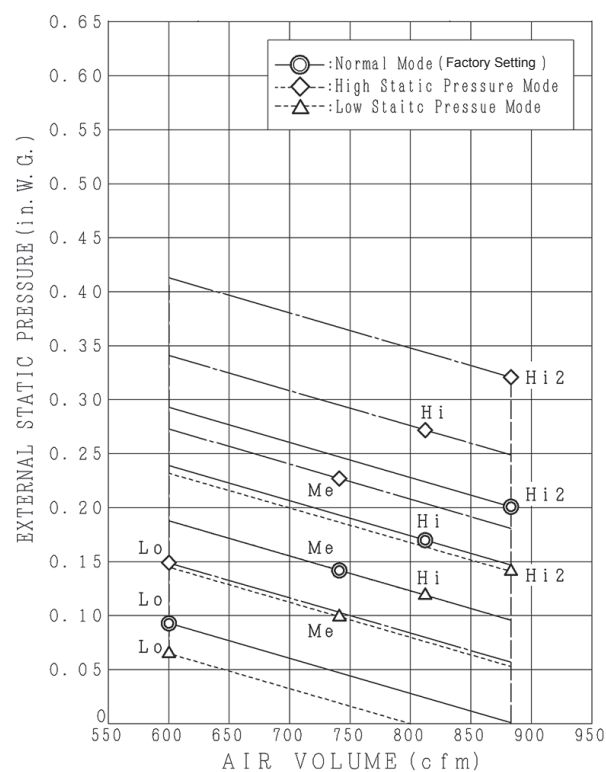

(H,Y,C)IDM030B21S

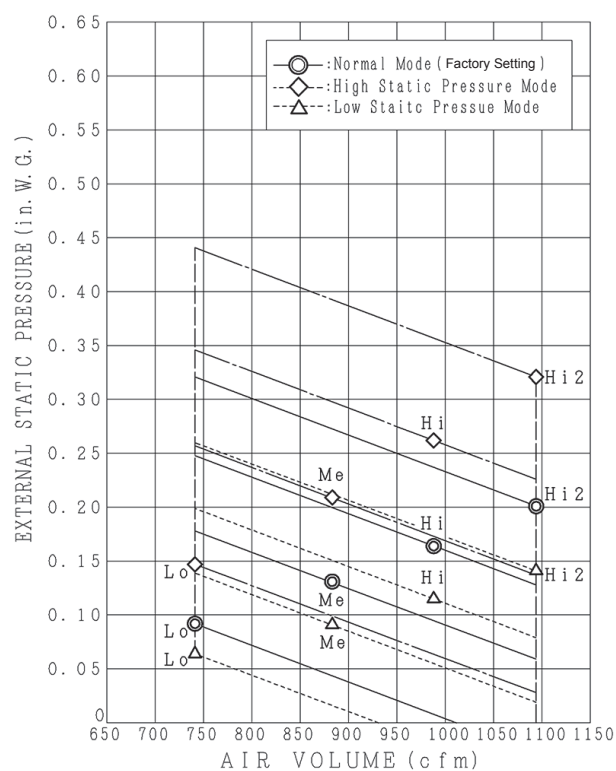


(H,Y,C)IDM036B21S

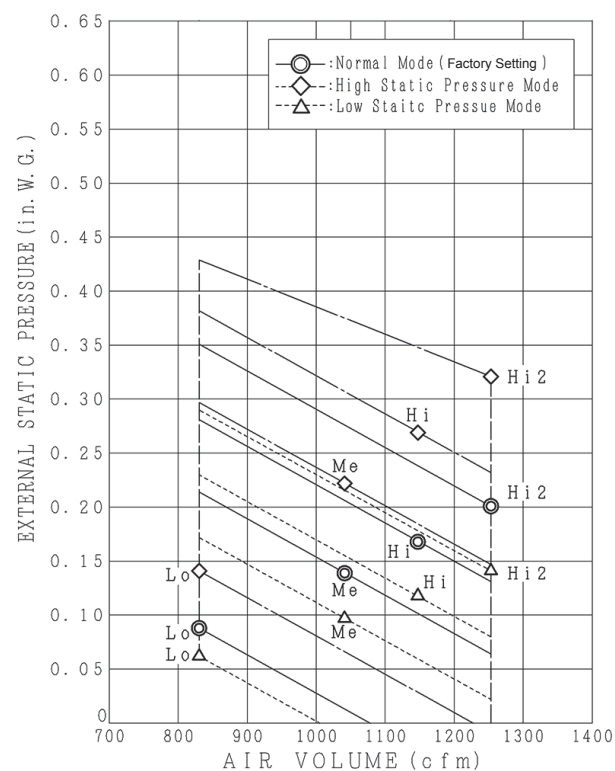

NOTE:

The settings of Normal, High Static Pressure and Low Static Pressure Mode can be changed using the Wired Controller.

(H,Y,C)IDM048B21S

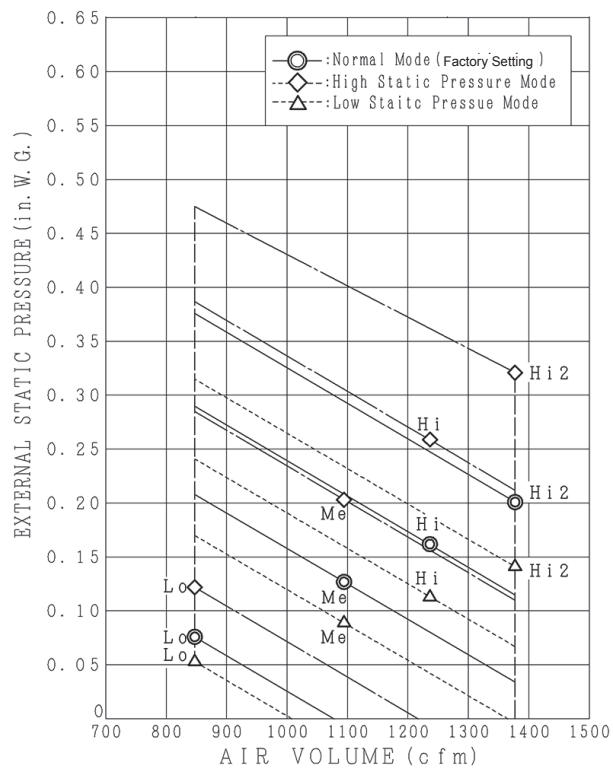

NOTE:

The settings of Normal, High Static Pressure and Low Static Pressure Mode can be changed using the Wired Controller.

