LOCATION OF SPARE PARTS IN THE UNIT for DX-Kit (AHU Integration)

CONTROL BOX

DXF-015A1
DXF-030A1
DXF-048A1
DXF-096A1
DXF-192A1
DXF-288A1

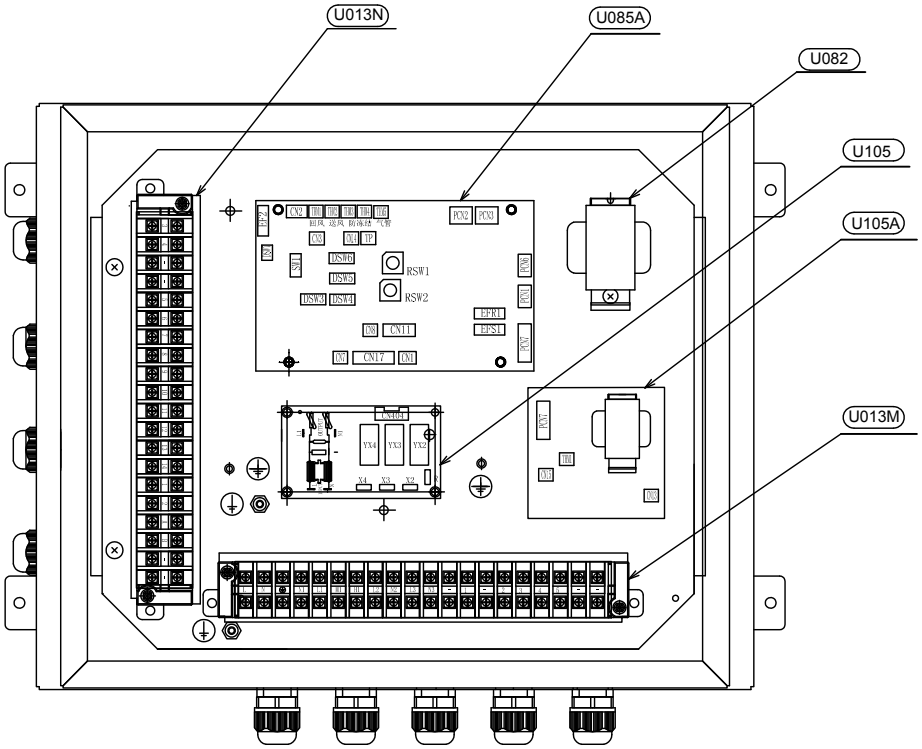

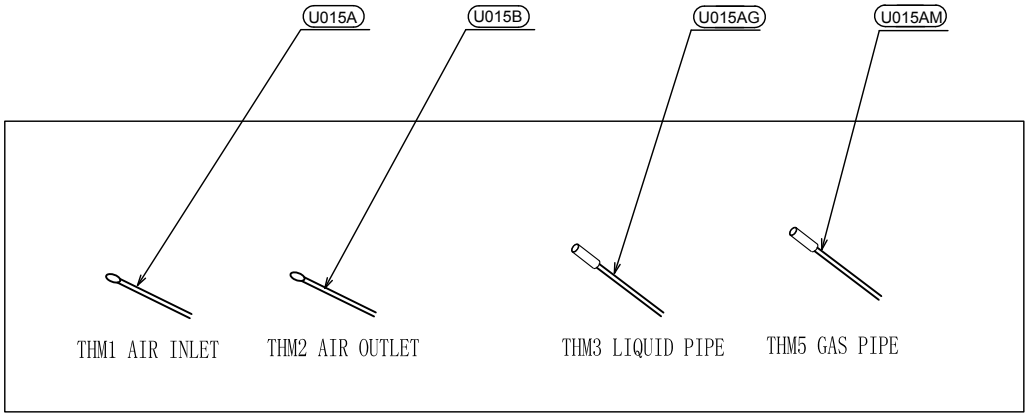

LOCATION OF SPARE PARTS IN THE UNIT for DX-Kit (AHU Integration)

EXPANSION VALVE BOX

DXF-015A1

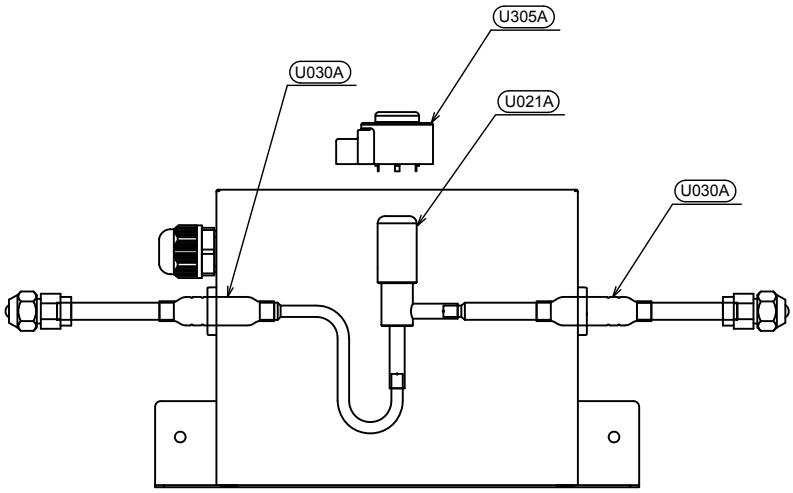
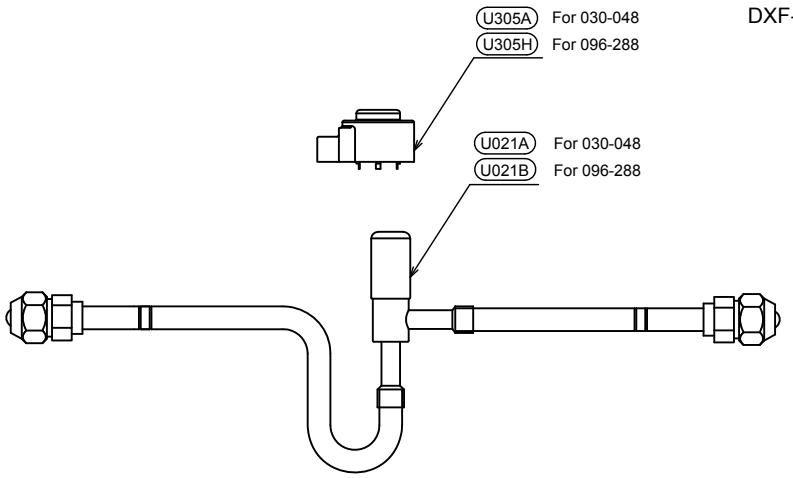
DXF-030A1
DXF-048A1
DXF-096A1
DXF-192A1
DXF-288A1